

Instruction Manual

WALKIE-TALKIES

HOW TO OPERATE YOUR TRANSCEIVER :

1. Open battery cover and snap in "9-Volt" battery.
2. Slide the "ON/OFF" switch to the "ON" position. Your transceiver is now ready to operate.
3. Press the "PUSH TO TALK" button to transmit.
4. Release the "PUSH TO TALK" button to receive.
5. When transmitting, speak in a clear voice with the microphone about three inches (7.5cm) from your mouth.
6. Best transmission and reception is achieved when the antenna is held in a vertical position.

HOW TO USE MORSE CODE :

1. Slide the "ON/OFF" switch to the "ON" position.
2. While pushing the "PUSH TO TALK" switch, press in the "MORSE CODE" button in momentarily and release for desired signal length.
3. When back to voice communications again, use normal "PUSH TO TALK" operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING :

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

