


REAL BIG RIG DRIVING ACTION!


World of WHEELS Tractor Trailer

BATTERIES REQUIRED: 2 x AA cells, 1 x 9V cell (sold separately)
WARNING: Always use under direct adult supervision. For use by ages 5 and up.
Please keep instruction booklet and safety box for future reference.
Any Questions? Email our Customer Service Dept.: customerservice@kidgalaxy.com
Call our Customer Service Dept. and Safety Customer Service, Toll Free 1-800-815-1135.


PACKAGE CONTENTS

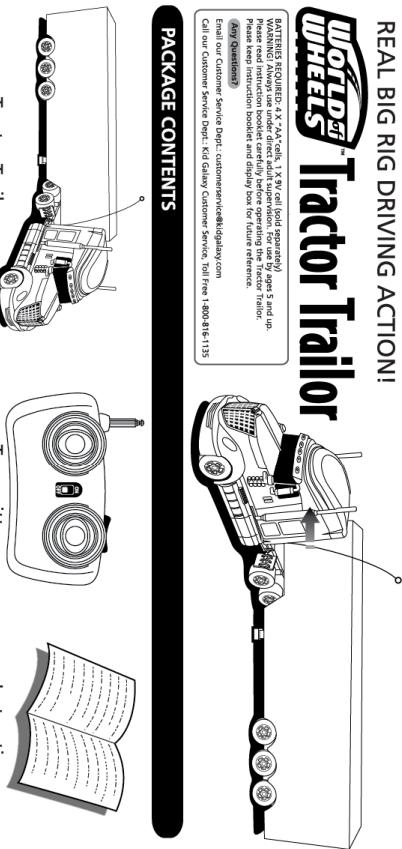

PRODUCT DESCRIPTION

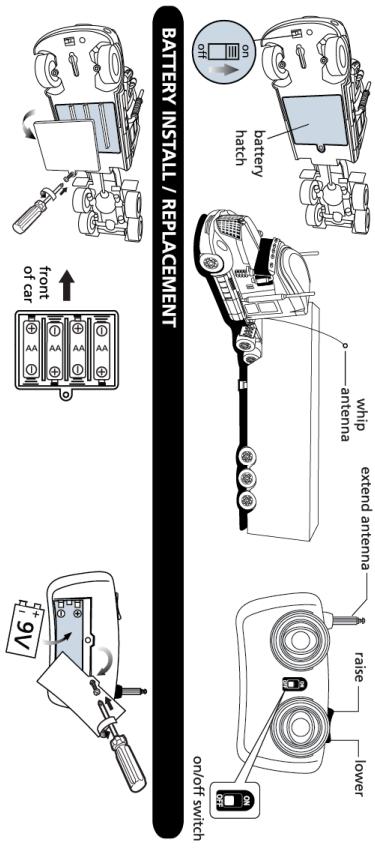

BATTERY INSTALL / REPLACEMENT

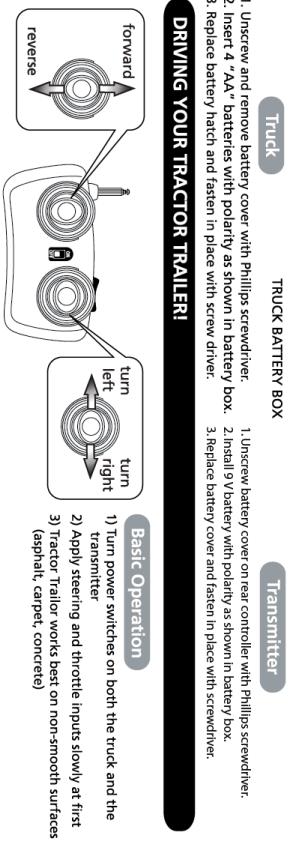


1. Unscrew and remove battery cover with Phillips screwdriver.
2. Insert 4 "AA" batteries with polarity as shown in battery box.
3. Replace battery hatch and fasten in place with screw driver.

DRIVING YOUR TRACTOR TRAILER!

Basic Operation

- 1) Turn power switches on both the truck and the transmitter
- 2) Apply steering and throttle inputs slowly at first
- 3) Tractor Trailer works best on non-smooth surfaces (asphalt, carpet, concrete)

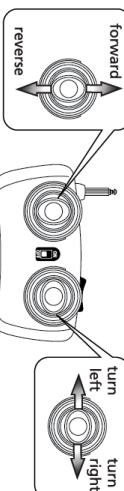

Truck

TRUCK BATTERY BOX

1. Unscrew battery cover on rear controller with Phillips screwdriver.
2. Insert 9V battery with polarity as shown in battery box.
3. Replace battery cover and fasten in place with screw driver.

Transmitter

9V

- 1) Turn power switches on both the truck and the transmitter
- 2) Apply steering and throttle inputs slowly at first
- 3) Tractor Trailer works best on non-smooth surfaces (asphalt, carpet, concrete)

WARNING!

- 1) Run time for Tractor Trailer is approx. 25-30 minutes.
- 2) Only operate your Tractor Trailer on sidewalks and playgrounds but NOT on roads where traffic is present.
- 3) Avoid using your Tractor Trailer outside when it is raining, snowing, thundering or other poor weather conditions.

PLEASE READ THIS CAREFULLY BEFORE USING.

The improper use of the controller batteries may cause excessive heat, battery leakage, explosion and damage or lead to injury. Please read the instructions below.

- When you are running your Tractor Trailer, always keep it in your sight. Keep your Tractor Trailer away from roads or other areas where you might collide with people, pets or cars.
- When you are running the Tractor Trailer, always keep it in your sight. Avoid driving your Tractor Trailer under parked cars, etc.
- Keep your fingers, hair, face and clothing away from the spinning powered rear wheels.
- It is recommended that children be under adult supervision when they are playing with the Tractor Trailer.
- Keep away from fire or hot and/or humid environments.
- Do not disassemble the product.
- Do not place any objects on the spinning wheels.
- Do not start your Tractor Trailer when the front and rear wheels are unable to turn freely.
- Please keep this toy from children under 6 years old.
- Do not bend, tear, strongly hit or drop the truck, transmitter, antenna shaft, or antenna wire.

- When other radio controlled products with the same frequency are used nearby, this may cause interference and your Tractor Trailer may not work properly.

FCC REQUIREMENT

 
CAUTION: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

OPERATION

- 1) Adjust truck to drive straight ahead by turning adjust tab left or right.
- 2) Start by manually attaching cab to trailer. Drive as desired using throttle and steering joysticks on transmitter.
- 3) To disconnect trailer, press "raise" button on transmitter, support arm lowers and lifts/disconnects trailer hitch. Then, drive cab away.
- 4) To reconnect, manually place or steer cab just ahead of trailer (align in straight line). Press "lower" button on transmitter, trailer support arm lowers and trailer reconnects. Drive away.

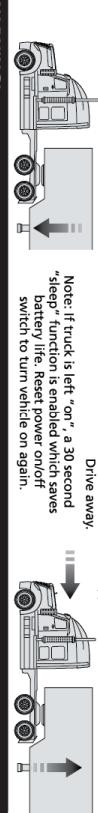

 Note: If truck is left "on", a 30 second "sleep" function is enabled which saves battery life. Reset power on/off switch to turn vehicle on again.

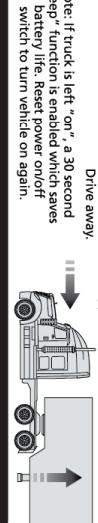

CHOKING HAZARD: Small parts
Not for children under 3 years.

Toll Free Hot Line: 800-816-1135

www.kidgalaxy.com

Kid Galaxy, Inc.
150 Dow Street,
Tower 2, Suite 425B
Manchester, NH 03101

Kid Galaxy®
Copyright 2012 © Kid Galaxy, Inc.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.