


REAL RALLY RACING SPEED AND ACTION!

 
Worlds of WHEELS™ 1/18th Rally Racer

MINIMUM ITEMS REQUIRED: 7.7V "AA" (4 cells required), 9V "C" (2 cells required), and 1.5V "AA" (2 cells required).
Please read instruction booklet carefully before operating this Rally Racer.
Please examine this toy periodically for potential hazards and repair or replace them.
Any Questions? Email our Customer Service Dept.: customerervice@kidgalaxy.com
Call our Customer Service Dept.: Kid Galaxy Customer Service, Toll Free 1-800-416-1135

PACKAGE CONTENTS

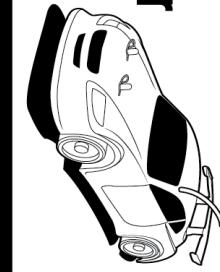


1/18 Rally Racer




Transmitter



Instructions

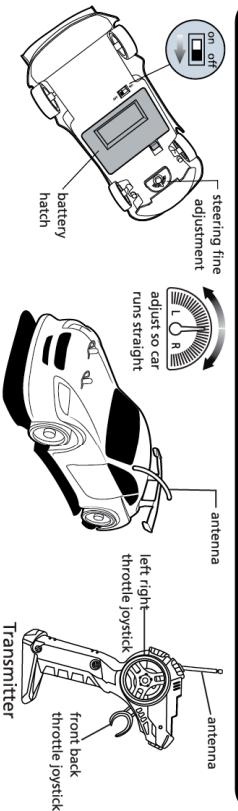

BATTERY INSTALL/REPLACEMENT

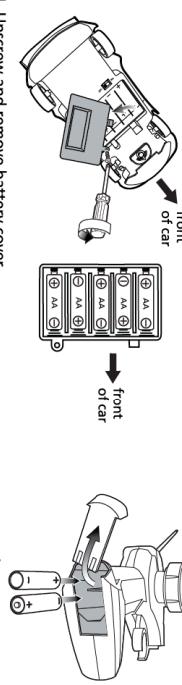

1. Unscrew and remove battery cover with Phillips screwdriver.
2. Insert 5 "AA" batteries with polarity as shown in battery box.
3. Replace battery hatch and snap in place.

Rally Racer

Transmitter

1. Remove battery cover on rear of controller.
2. Install 12 "AA" battery with polarity as shown in battery box.
3. Replace battery.

FCC REQUIREMENT
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Increase the separation between the equipment and receiver.
-Reorient or relocate the receiving antenna.
-Consult the dealer or an experienced radio/TV technician for help.
NOTE: Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device.

Toll Free Hot Line: 800-816-1135

www.kidgalaxy.com

Kid Galaxy, Inc.

150 Bow Street

Manchester, NH 03101

Tower 2, Suite 423B

Copyright 2012 © Kid Galaxy, Inc.



WARNING!


- 1) Only operate your car on sidewalks and playgrounds but NOT on roads where traffic is present.
- 2) Avoid using your car outside when it is raining, snowing, thundering or in strong winds or other poor weather conditions or lead to injury. Please read the instructions below.

The improper use of the controller batteries may cause excessive heat, battery leakage, explosion and damage or lead to injury. Please read the instructions below.

- Only use "AA" alkaline batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium batteries).
- Turn off power when installing or replacing batteries.
- Please install the batteries with the correct polarity, as indicated by the +/- signs.
- Remove the batteries when the product is not in use.
- Do not short circuit or disassemble. Keep away from fire.
- Other cautions when using the Rally Racer and its controller/r/transmitter.

- If any batteries you are using start to leak, carefully remove them without letting them contact any part of the body. Properly dispose of batteries and replace with fresh batteries.
- When other radio controlled products with the same frequency are used nearby, this may cause interference and your Rally Racer may not work properly.
- Do not start your Rally Racer when the front and rear wheels are unable to turn freely.
- Please keep this toy from children under 5 years old.
- Do not bend, tear, strongly hit or drop the car, transmitter, antenna shaft, or antenna wire.

driving your rally racer

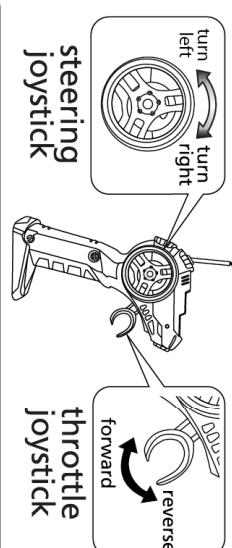

Basic Operation

- 1) Turn power switches on the car.
- 2) Make steering and throttle inputs slowly at first.
- 3) Rally Racer works best on asphalt, carpet, concrete (non-smooth surfaces).