



**ROVOSPY**  
WIFI NETWORK  
APP-CONTROL WIRELESS LIVE SPY TANKBOT

### ROVOSPY QUICK START GUIDE

1 Download the Rovospy's free App (multiplatform) from the iTunes®/App Store (for Apple® devices), or Google Play® (for Android® devices), and install the App on your device.

2 Sync the Rovospy with your device. Switch to "1" and when the blue LED blinks, go to the Wi-Fi connection in the settings menu on your device to sync. You may also turn on the App and check the status of the connection of the Rovospy and your device in the App's help.

3 Open the Rovospy's App. The driving controls and live video will open automatically.

#### You are now ready for ALL-TERRAIN SURVEILLANCE

**WARNING**  
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on the user is encouraged to try to correct the interference by one or more of the following measures:  
□ Reorient or relocate the receiving antenna.  
□ Increase the separation between the equipment and receiver.  
□ Connect the equipment into a outlet on a circuit different from that to which the equipment is connected.  
□ Consult the dealer or an experienced radio/TV technician for help.

Header: NEW SUNNY TOYS INDUSTRIAL CO., LTD. declares that this WiFi CAR is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

### IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.  
**WARNING**  
1. Careful handling is necessary when this unit is used by or near children or mentally disabled individuals.  
2. Do not use the unit in places with high content with Social Media Websites.  
3. Adult supervision is required.  
4. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves or other units that may cause the unit to overheat.  
5. Do not touch the unit with wet hands.

6. Keep the Rovospy away from face, eyes and hair at all times. Keep fingers away from the tank-belt when the Rovospy is in motion.  
7. Make sure there are no obstacles or breakable objects in the Rovospy's path.  
8. Do not drink, spray with or submerge unit in water.

**CHOKING**  
WARNING: This product may contain small parts which may pose a choking hazard to children.

**BATTERY PRECAUTIONS**  
1. Remove the old batteries properly. Do not dispose of the old batteries in a fire.  
2. Do not leave the batteries where a child or pet could play with or swallow them.  
3. If any of the batteries are swallowed, contact a physician immediately.  
4. The batteries may explode if misused. Do not attempt to recharge or disassemble the batteries.  
5. Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries or rechargeable batteries of different sizes.

**LOCATION OF PARTS AND CONTROLS (Rovospy)**

1. Adjustable Camera Top
2. Tank Body
3. Night Vision Light
4. Night Vision Light
5. Trac-Belt (2)

### LOCATION OF PARTS AND CONTROLS (Rovospy)

1. Blue Connection LED
2. Battery Compartment Access Screw
3. Battery Compartment
4. On/Off Switch
5. Red Power LED

### COMPATIBILITY

iPhone 3GS (3rd Generation)  
iPhone 4 (4th Generation)  
iPhone 4S (4th Generation)  
iPhone 5 (5th Generation)  
iPhone 5S (5th Generation)  
iPhone 5C (5th Generation)  
iPhone 6 (6th Generation)  
iPhone 6S (6th Generation)  
iPhone 7 (7th Generation)  
iPhone 8 (8th Generation)  
iPhone X (10th Generation)  
iPad 2 (2nd Generation)  
iPad 3 (3rd Generation)  
iPad 4 (4th Generation)  
iPad Air (1st Generation)  
iPad Pro (1st Generation)  
iPad Pro (2nd Generation)  
iPad mini (1st Generation)  
iPad mini (2nd Generation)  
iPad mini (3rd Generation)  
iPad mini (4th Generation)  
iPad Pro (10.5 inch)  
iPad Pro (12.9 inch)  
Apple iOS: 5.1 and later  
Android: 4.4 and later  
CPU: 800MHz RAM: 512M

### SET UP

Downloaded free App Store®  
(for Apple® devices), or Google Play® (for Android® devices), and install the App on your device.

Sync the Rovospy with your device to "1" and when the blue LED blinks, go to the Wi-Fi connection in the settings menu on your device to sync. You may also turn on the App and check the status of the connection of the Rovospy and your device in the App's help.

### DRIVING

• Drive Forward Straight – push driving control buttons up on your device's screen



• Back Up Straight – push driving control buttons down on your device's screen



• Turn Right Driving Forward – slide the right throttle stick driving control button up on the right of your device's screen to RIGHT.



• Turn Left Driving Forward – slide the right throttle stick driving control button up on the right of your device's screen to LEFT.



• Turn Right Moving Forward – slide the right throttle stick driving control button up on the right of your device's screen to RIGHT.



• Turn Left Moving Forward – slide the right throttle stick driving control button up on the right of your device's screen to LEFT.



• Turn Right Moving Backward – slide the right throttle stick driving control button up on the right of your device's screen to RIGHT.



• Turn Left Moving Backward – slide the right throttle stick driving control button up on the right of your device's screen to LEFT.



• Turn Right Moving Backward – slide the right throttle stick driving control button up on the right of your device's screen to RIGHT.



• Turn Left Moving Backward – slide the right throttle stick driving control button up on the right of your device's screen to LEFT.



• Turn Right Moving Backward – slide the right throttle stick driving control button up on the right of your device's screen to RIGHT.



• Turn Left Moving Backward – slide the right throttle stick driving control button up on the right of your device's screen to LEFT.



### DRIVING USING YOUR DEVICE'S ACCELEROMETER

• Turn on this function, hold your device flat or tilted upward slightly (see image at right), and press the button to turn the Rovospy.



To drive the Rovospy, tilt your device in the direction you would like to drive. The Stop position is the position at which the device was held when the Motion Control was activated.



• STAND-BY AUDIO RECORDING

The Rovospy can transmit audio to your device.



Press the button to record audio. The button will be locked down and start to record audio.



Note: The Rovospy will not record audio while it is in motion.



Why am I experiencing low quality audio (fuzzing, distortion)?



Rovospy may be beyond its maximum operating range or batteries may be low.



What is the maximum range of my Rovospy?



Rovospy will operate up to 200 feet unobstructed and up to 100 feet obstructed.



Maximum range will vary depending on the environment.

### CARE AND MAINTENANCE

• Turn the Rovospy off before cleaning.



• Wipe the Rovospy with a soft, dry cloth.



• The drive shafts Clean carefully with your fingers or a pair of tweezers.



iPad, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.



App Store is a service mark of Apple Inc.



Google is a trademark of Google Inc.



Wi-Fi and Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.



• Rovospy is now download from the iTunes® App Store™ or Google Play.



Why can't I connect my Rovospy to my device?



Check the following:



• App has been downloaded from the iTunes® App Store™ or Google Play.



Rovospy is powered on.



• Power LED is lit.



• Your device's Wi-Fi is turned on.



• Rovospy is within operating range.



• Rovospy is not in direct sunlight.



• There is interference from other devices — if so, move to another position.



• Your device is compatible with Rovospy:



iPhone 4S (4th and 5th generation)



iPhone 5 (5th Generation)



iPhone 6 (6th Generation)



iPhone 6S (6th Generation)



iPhone X (10th Generation)



Android 2.2 and later, CPU: 800MHz RAM: 512M



Why does my Rovospy drift to the left or right?



Rovospy is not weather resistant. We recommend using Rovospy on a clean dry surface if used outdoors.



What happens if I receive a phone call on my device while I am using my Rovospy?



Rovospy does not drift like a tank. There are independent steering controls for the left and right wheels as some drifting is normal. Uneven surfaces may also cause drifting.

If a phone call is received on your device while Rovospy is in use, the app will exit. Use airplane mode on your device to avoid interruption.

Why can't I connect my Rovospy to my device?

Check the following:

• App has been downloaded from the iTunes® App Store™ or Google Play.

Rovospy is powered on.

• Power LED is lit.

Rovospy is within operating range.

• Rovospy is not in direct sunlight.

• There is interference from other devices — if so, move to another position.

• Your device is compatible with Rovospy:

iPhone 4S (4th and 5th generation)

iPhone 5 (5th Generation)

iPhone 6 (6th Generation)

iPhone 6S (6th Generation)

iPhone X (10th Generation)

Android 2.2 and later, CPU: 800MHz RAM: 512M

Apple® iPhone 4, 4S, 5, 5S, 5C, 6, 6S, 7, 8, X, and iPad® are trademarks of Apple Inc., registered in the U.S. and other countries.

Google is a trademark of Google Inc.

Wi-Fi and Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

iPhone 4S (4th and 5th generation)

iPhone 5 (5th Generation)

iPhone 6 (6th Generation)

iPhone 6S (6th Generation)

iPhone X (10th Generation)

Android 2.2 and later, CPU: 800MHz RAM: 512M

Apple® iPhone 4, 4S, 5, 5S, 5C, 6, 6S, 7, 8, X, and iPad® are trademarks of Apple Inc., registered in the U.S. and other countries.

Google is a trademark of Google Inc.

Wi-Fi and Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

iPhone 4S (4th and 5th generation)

iPhone 5 (5th Generation)

iPhone 6 (6th Generation)

iPhone 6S (6th Generation)

iPhone X (10th Generation)

Android 2.2 and later, CPU: 800MHz RAM: 512M

Apple® iPhone 4, 4S, 5, 5S, 5C, 6, 6S, 7, 8, X, and iPad® are trademarks of Apple Inc., registered in the U.S. and other countries.

Google is a trademark of Google Inc.

Wi-Fi and Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

iPhone 4S (4th and 5th generation)

iPhone 5 (5th Generation)

iPhone 6 (6th Generation)

iPhone 6S (6th Generation)

iPhone X (10th Generation)

Android 2.2 and later, CPU: 800MHz RAM: 512M

Apple® iPhone 4, 4S, 5, 5S, 5C, 6, 6S, 7, 8, X, and iPad® are trademarks of Apple Inc., registered in the U.S. and other countries.

Google is a trademark of Google Inc.

Wi-Fi and Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

iPhone 4S (4th and 5th generation)

iPhone 5 (5th Generation)

iPhone 6 (6th Generation)

iPhone 6S (6th Generation)

iPhone X (10th Generation)

Android 2.2 and later, CPU: 800MHz RAM: 512M

Apple® iPhone 4, 4S, 5, 5S, 5C, 6, 6S, 7, 8, X, and iPad® are trademarks of Apple Inc., registered in the U.S. and other countries.

Google is a trademark of Google Inc.

Wi-Fi and Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

iPhone 4S (4th and 5th generation)

iPhone 5 (5th Generation)

iPhone 6 (6th Generation)

iPhone 6S (6th Generation)

iPhone X (10th Generation)

Android 2.2 and later, CPU: 800MHz RAM: 512M

Apple® iPhone 4, 4S, 5, 5S, 5C, 6, 6S, 7, 8, X, and iPad® are trademarks of Apple Inc., registered in the U.S. and other countries.

Google is a trademark of Google Inc.

Wi-Fi and Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

iPhone 4S (4th and 5th generation)

iPhone 5 (5th Generation)

iPhone 6 (6th Generation)

iPhone 6S (6th Generation)

iPhone X (10th Generation)

Android 2.2 and later, CPU: 800MHz RAM: 512M

Apple® iPhone 4, 4S, 5, 5S, 5C, 6, 6S, 7, 8, X, and iPad® are trademarks of Apple Inc., registered in the U.S. and other countries.

Google is a trademark of Google Inc.

Wi-Fi and Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

iPhone 4S (4th and 5th generation)

iPhone 5 (5th Generation)

iPhone 6 (6th Generation)

iPhone 6S (6th Generation)

iPhone X (10th Generation)

Android 2.2 and later, CPU: 800MHz RAM: 512M

Apple® iPhone 4, 4S, 5, 5S, 5C, 6, 6S, 7, 8, X, and iPad® are trademarks of Apple Inc., registered in the U.S. and other countries.

Google is a trademark of Google Inc.

Wi-Fi and Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

iPhone 4S (4th and 5th generation)

iPhone 5 (5th Generation)

iPhone 6 (6th Generation)

iPhone 6S (6th Generation)

iPhone X (10th Generation)

Android 2.2 and later, CPU: 800MHz RAM: 512M