

User manual:

1. Charging the battery:
 - Connect the battery pack connector to the charger connector
 - Connect the charger to a plug outlet.
 - In case of abnormal heating(45 degrees Celsius or higher), stop charging immediately.
 - To store the battery in good condition, keep the model running until the model stops before storage.
 - This charger is exclusive for the RACING TRUCK battery pack, Do not use it for any other purpose.
2. Preparing the transmitter for use.
 - Turn both the steering and throttle to normal
 - Install 8 AA size batteries in the transmitter.
3. Preparing the chassis.
 - Installing the antenna Feed the antenna through the antenna pipe, then, install the antenna pipe on the chassis as shown.
 - Installing the battery Open the battery box and put in the battery pack.
 - Connect the battery connector to the body connector installing the battery Close the battery box cover with a pin.
4. Preparing before driving
 - Fully extend antenna
 - Switch on transmitter
 - Switch on the model
 - Adjustment of a Throttle Trim
 - Adjustment of a Steering Trim