

Function of interchangeable WX-FJZ-RB :

1. When the TX at forward switch, RX motor move clockwise – forward. There are 3 different speeds: BACKWARD, FORWARD, TURBO.
2. When the TX at backward switch, RX motor move counter-clockwise – backward. There are 2 different speeds: FORWARD, TURBO.
3. When the TX at LEFT switch, RX receive the signal and turn left.
4. When the TX at RIGHT switch, RX receive the signal and turn right