

# EBT08 Series Ballast User Manual

## TO customer:


Thanks for purchasing our products, please read the Manual carefully before install the ballast.

## Warning:

Make sure that the power is shut off in case of ballast installation or maintenance.

## Use environment:

1. Operating temperature: -18 ~60 .
2. Indoor.

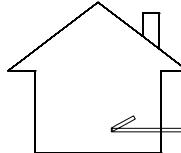

## Attention:

1. Risk of electric shock –use in dry location only.
2. Not for use with dimmer.
3. It can use in totally enclosed fixtures.
4. Not for use in luminance controlled by a dimmer.
5. Not for use in urgent exit.
6. Not for use in sloppy location.

This product maybe cause interference to other product, if interference occur, please move this product far away from other electronic apparatus, or change outlet. This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30MHz.

## Ballast Specification

Model	Voltage	F(Hz)	Current(A)	Power(w)	PowerFactor	Matching Tube
EBT08-232UH-MS1-00	120-277V AC	60	0.55	2 x 32	> 0.95	See nameplate
EBT08-332UH-MS1-00	120-277V AC	60	0.80	3 x 32	> 0.95	See nameplate
EBT08-432UH-MS1-00	120-277V AC	60	1.00	4 x 32	> 0.95	See nameplate
EBT08-232H-MS1-00	120V AC	60	0.50	2 x 32	> 0.98	See nameplate
EBT08-332H-MS1-00	120V AC	60	0.75	3 x 32	> 0.98	See nameplate
EBT08-432H-MS1-00	120V AC	60	1.00	4 x 32	> 0.98	See nameplate

## Wiring diagrams: See nameplate

## Outside Dimension:

