

EBU Series Ballast User Manual

To customer:


Thanks for purchasing our products, please read the Manual carefully before install the ballast.

Warning:

Make sure that the power is shut off in case of ballast installation or maintenance.

Use environment:

1. Operating Voltage :120~277VAC, 50/60Hz.
2. Operating temperature : -18°C~60°C.
3. Indoor.

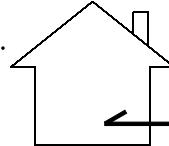

Attention:

1. Risk of electric shock—use in dry location only.
2. Not for use with dimmer.
3. It can use in totally enclosed fixtures.
4. Not for use in luminance controlled by a dimmer.
5. Not for use in urgent exit.
6. Not for use in sloppy location.

Information on the following matters shall be provided to the user in the instruction manual or on the packaging if an instruction manual is not provided for any type of ISM equipment:

- (a) The interference potential of the device or system
- (b) Maintenance of the system
- (c) Simple measures that can be taken by the user to correct interference.

(D) Manufacturers of RF lighting devices must provide an advisory statement, either on the product packaging or with other user documentation, similar to the following: This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45–30 MHz. Variations of this language are permitted provided all the points of the statement are addressed and may be presented in any legible font or text style

Ballast Specification

Model	Voltage	F(Hz)	Current(A)	Power(w)	Power Factor	Matching Tube
EBU2U-226UH-PM2	120~277VAC	50/60	0.46/0.2	2x26	>0.95	See nameplate
EBU2U-218UH-PM2	120~277VAC	50/60	0.32/0.14	2x18	>0.95	See nameplate
EBU2U-213UH-PM2	120~277VAC	50/60	0.23/0.1	2x13	>0.95	See nameplate

Wiring diagrams:

