

Mini Fluorescent Lamp Fixture User Manual

To customer:


Thanks for purchasing our products, please read the Manual carefully before install the fixtures.

Warning:

Install according to the Manual and don't disassemble or modify the fixture to avoid electric shock or destroying the fixture.

Attention:

1. Don't install the fixture on such places as right pictures.
2. Operating Voltage: 110~130VAC/60Hz.
3. Don't use the fixture in high temperature or damp places.
4. Professional Electrician is needed for safety, maintaining and checking fixture.
5. Turn off the power immediately if there are some abnormalities for the fixture, then contact with the Sales.

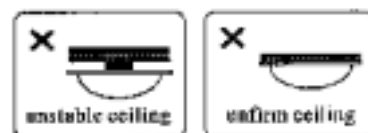


Parts and Installation Instruction.

Attention: To disconnect the power before installation to escape electric shock.

1. According to the database and sketch map, to fix the two pieces Fixing Clip on the ceiling by M4 screw.

POWER(W)	L(mm)
24/14/13	400±50
39/21	700±50
54/28	1000±50
35	1300±50
08	200±30

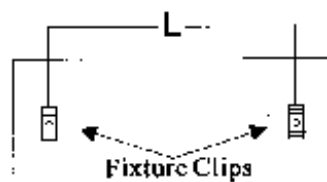


2. As per the sketch map, to push the bracket into the Fixing Clips correctly. (When undo the fixture, hold the bracket by hands, then pull on the contrary direction.)
3. Plug the tube into the base holder, then turn 90 ° clockwise or anticlockwise. When change the tube, hold the tube by hands, take off after turning 90 ° clockwise or anticlockwise.



4. Plug the Power Cord into the Fixture Housing when single-Fixture used, when Multi-Fixtures used, you can connect the Fixtures with Connection.(Please don't connect over 5 lamp

Fixtures for your safety.)

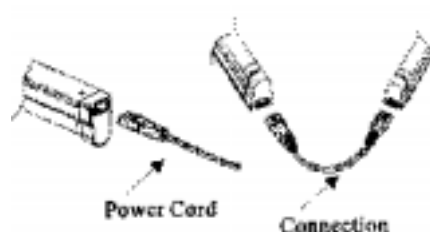

Fixture Specification

Model	Voltage	F(Hz)	Power(w)	Current(A)	Power Factor	Tube
EDFT5-108L-MEO	120VAC	60	8	0.14	0.5	T5-35W
EDFT5-113L-MFO	120VAC	60	13	0.22	0.5	T5-35W
EDFT5-114L-MAO	120VAC	60	14	0.24	0.5	T5-14W

T5 low-profile linkable Fluorescent Lam Fixture

This device complies with part 18 of the FCC Rules.

- 1, Before commissioning this oven please read this instruction manual and keep it carefully.
- 2, There must be more than 30cm high space necessary above the top surface of oven.
- 3, Do not repair the oven yourself, please consult an authorized expert.
- 4, The contents of feeding bottles and bay food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.
- 5, Check the oven and the cable regularly for damage. If there is any kind of damage, the oven should not be used.

Warning:

- 1) Fragile products, handling with care.
- 2) Only operating in the range of 110-130VAC/60HZ Voltage.
- 3) Use indoor only. Never use it where water may drop in the lamp or where the atmosphere is humid.
- 4) Don't use the fixture in high temperature.
- 5) Don't place or use it where the child can touch it.
- 6) Always turn off the switch when installing, replacing or cleaning the fixture.
- 7) Turn off the power immediately if there are some abnormalities for the fixture, then contact service agent or a similarly qualified person in order to avoid a hazard.
- 8) Professional Electrician is needed for safety, maintaining and checking fixture.

- 9) **This product complies with Part 18 of the FCC Rules but may cause interference to televisions, radios, wireless remote control or maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30MHz.** If interference occurs, move product away from the device or plug either into a different outlet.

Note: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV. INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THIS EQUIPMENT.