


SPORTS DANCE MAT

FUNCTION MANUAL

Product function display introduction:

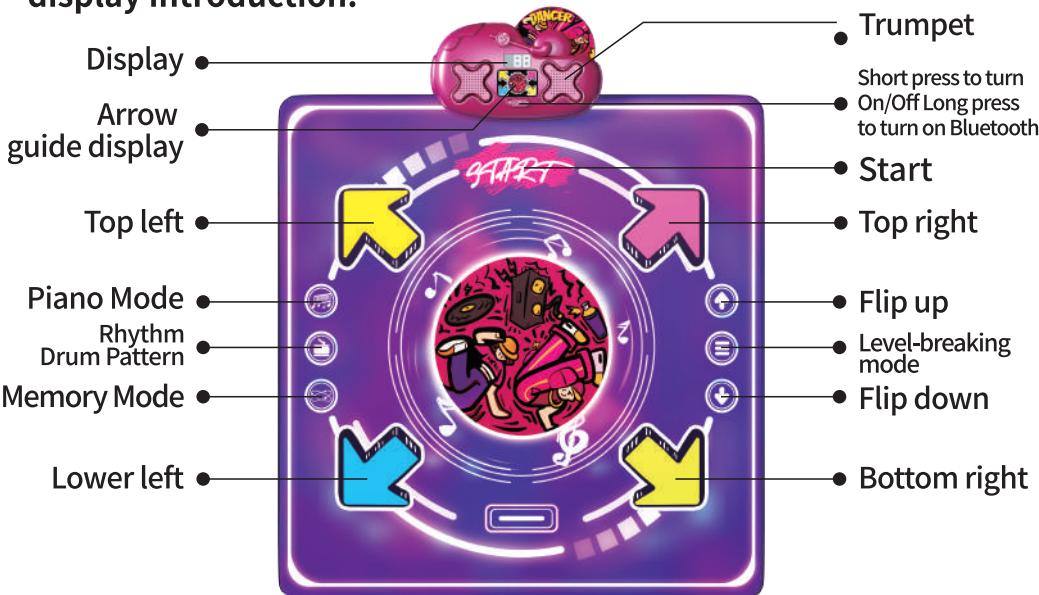

(Product patterns and colors are for display only, please refer to the actual product)

1. Power button:

Press to turn on the device, and there will be a water light effect, then press to turn it off. When the device is turned on, long press to turn on Bluetooth, and then long press to turn it off (Bluetooth name: T01).

2. Direction buttons and lights:

The 4 direction buttons correspond to lights in 4 directions.

3. 3-digit digital tube:

The first digit shows the current mode, and the rest show the level or score.

4. Level Up/Down:

Short press to increase/decrease the level, long press to increase/decrease the volume, there are five levels in total.

5. Each mode key:

Press to switch modes to play sound effects.

6. Start the game:

Press to start the game or stop the game.

7.

Except for OKON mode, all games have background music (7 songs in total). When connected to Bluetooth, the background music is the music played by Bluetooth.

8.

There are five victory and failure sound effects for all games (10 in total), which can be played randomly and repeatedly.

1. Level-breaking mode:

The trigger button is a sound effect before the game starts. Press to start the game and play whack-a-mole mode. There are 30 levels in total. If you make 6 mistakes, you will fail. Each level has 30 points. If you reach 30 points, you win. Press correctly to trigger the sound effect.

2. Piano mode:

The trigger button before the game starts is the piano key. Press to start the game and enter the OKON mode, a total of 30 levels, and you will fail if you make 6 mistakes.

Each level is the length of a song, and you win if you finish OKON. Press correctly to trigger OKON.

3. Drum Mode:

The trigger button before the game starts is a drum sound. Press to start the game, play whack-a-mole mode, a total of 30 levels, 6 mistakes will fail.

Each level has 30 points, you win when you reach 30 points, and press correctly to trigger the drum sound.

4. Memory mode:

The trigger button before the game starts is a sound effect.

Press to start the game and enter the memory mode. There are 99 levels in total. If you make a mistake, you will fail.

The number of records for each level is the number of levels plus 1. Press all the buttons in order to win.

Press correctly to trigger the sound effect.

Precautions for using sports dance mat:

- Please be careful not to put your ear close to the speaker to avoid excessive volume affecting your hearing.
- If you do not perform any operation, it will enter sleep mode, you can step on any arrow to activate it.
- Keep the exercise mat away from water and other liquids.
- Do not use the exercise mat in a humid environment.
- Do not put heavy objects on the exercise mat for a long time.
- Keep the exercise mat away from sharp objects to prevent damage to its surface.
- Avoid using the exercise mat in places with high temperatures, such as near heating equipment.
- When cleaning the exercise dance mat, use a soft damp cloth to gently wipe the surface, do not use any abrasive or chemical cleaners, and water washing is strictly prohibited.
- When not in use, store the pronunciation dance mat in a cool and dry place away from direct sunlight.
- Please do not disassemble or repair the exercise mat by yourself. If there is any problem with the product, please contact us.

FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.