

Thank you for choosing our product. Please read through the instruction manual before use so that you can enjoy correct and safe use of this product. Please keep the manual well for future reference use.

NO.757-032

CAUTIONS

Improper use of batteries may lead to heat, break or leak. Please abide by the following requirements:

- Do not mix the use of new and old batteries.
- Do not mix the use of batteries of different brands.
- Note polarity when installing batteries.
- Do not leave exhausted batteries in the product.
- Never short-circuit the battery pack.
- Never try to charge batteries that are not rechargeable.

1. Full function: Forward turn left turn right, Backward turn left, Turn right, Stop
2. Max speed: 14km/h
3. R/C Distance: Over 50m


2. Charge battery pack

A. CHARGING STEPS

1. Connect the connector of the battery pack to the connector of the charger, as Fig shows.
2. Insert the plug of the charger into a household power socket. The indicator will light up, indicating the charger has started to charge the battery pack.
3. It usually takes about 4-6 hours to fully charge the battery pack. (Do not charge for too long)
4. Unplug the charger from the power socket.
5. Lightly press the lock part on the connector of the charger and pull in the direction shown in Fig to separate the two connectors.

B. CHARGING CAUTIONS

1. Fully charge the battery pack before the initial use. If stored for a long time, the battery pack may gradually discharge by itself. Overcharge may shorten the lifespan of the battery pack.
2. The battery pack may become hot after use. Please wait for it to cool down before charging.
3. Do not bump the battery pack and keep it away from water or fire.
4. Keep the battery pack out of reach of little children.
5. Do not force to separate the connectors. Do not charge with any voltages other than the specified one.
6. Never try to disassemble the battery pack.

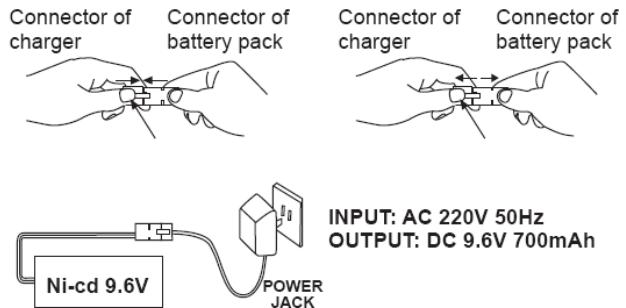


CAUTIONS

Improper use of batteries may lead to heat, break or leak. Please abide by the following requirements:

- Do not mix the use of new and old batteries.
- Note polarity when installing batteries.
- Never short-circuit the battery pack.
- Never leave a battery unattended while it is being charged.
- Never leave a battery unattended in the presence of small children.
- Do not mix the use of batteries of different brands.
- Do not leave exhausted batteries in the product.
- Never try to charge batteries that are not rechargeable.
- Keep away from inflammables during charging.
- Never allow charging near the fire or in overheated areas.


3. Install batteries in the controller

1. Open the battery cover on the controller.
2. Install the battery with correct polarity.
3. Replace the battery cover.

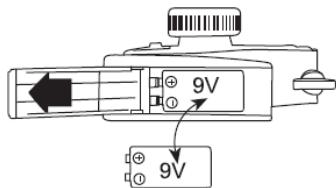

4. Install/uninstall controller antenna

Insert the antenna into the hole on the top of the controller and turn clockwise to fix. (Fig.1) to detach the antenna, just turn it counterclockwise. (Fig.2)

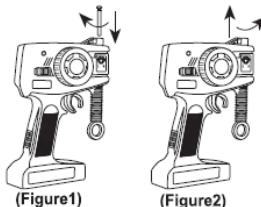

5. Install battery pack in the car

1. Open the battery cover on the car.
2. Connect the battery pack to the car.
3. Set the 9.6V battery pack into the battery compartment of the car and replace and fasten the battery cover.

6. Operations

When the trigger is pulled halfway, the car will run forward at low speed. When the trigger is fully pulled, the car will run forward at high speed. When the trigger is pushed forward, the car will run backward.

When the control knob is turned counterclockwise, the car will turn left. When the control knob is turned clockwise, the car will turn right. (Correct holding and operating posture: Use left hand to hold the controller, with one finger on the trigger, and use right hand to operate on the control knob.)

7. Cautions

- 1.While playing indoors, take care not to damage furniture or glass articles.
- 2.Do not play with this product on roads or in a crowded place to avoid dangers.
- To play outdoors, please choose a safe place.
- 3.While playing outdoors, immediately stop playing whenever thunder is heard.
- 4.Do not play with this product in a wet or sandy place to avoid circuit malfunction.
- 5.Do not bend the antenna. If the antenna is broken, its sharp ends may cause hurts.
- 6.Do not pull the wires in the car. If the wires are broken, the car may lose its normal functions.

7.Keep fingers, hair and clothes away from spinning tyres. Otherwise, they may be entangled into the tyres, causing hurts.

- 8.Do not control the car to run at people.
- 9.Do not throw or bump the car around.
- 10.Store the car away from fire source or high temperature environment.
- 11.This product contains complex electronic circuit and numerous electronic components. Do not try to detach or modify the circuit board.
- 12.When the battery power in the car or controller becomes insufficient, the car may obviously slow down or become out of control. In such case, please replace the batteries with new ones.
- 13.Operating in the following ways can prolong the batteries' lifespan: a) Remove the batteries before long-time storage, b) When it's time to replace batteries, replace them all at a time. If new and old batteries are mixed for use, all the batteries may soon become out of power.



WARNING:

CHOKING HAZARD=Small parts. Not for children under 3 years.

8. About frequency and playing place

- 1.If there's another radio control car of the same frequency is operated nearby, you may lose control of your car.
- 2.Other radio waves may also cause interference to your control. In such case, please change to play in another place or in another time.
- 3.This product is suitable for running on cement or water polished ground. If running on excessively smooth surface, the car may not be able to run along a straight line and may even skid to make U-turn or spin.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.