

Thank you for choosing our product. Please read through the instruction manual before use so that you can enjoy correct and safe use of this product. Please keep the manual well for future reference use.

NO.757-6012

CAUTIONS

Improper use of batteries may lead to heat, break or leak. Please abide by the following requirements:

- Do not mix the use of new and old batteries.
- Do not mix the use of batteries of different brands.
- Note polarity when installing batteries.
- Do not leave exhausted batteries in the product.
- Never short-circuit the battery pack.
- Never try to charge batteries that are not rechargeable.

1.Parts Identification




2.Charge Battery Pack

1 .Charging Steps


- ①.Connect the connector of the battery pack to the connector of the charger, as Fig. 1 shows.
- ②.Insert the plug of the charger into a household power socket. The indicator will light up, indicating the charger has started to charge the battery pack.
- ③.It usually takes about 6-8 hours to fully charge the battery pack. (Do not charge for too long)
- ④.Unplug the charger from the power socket.
- ⑤.Lightly press the lock part on the connector of the charger and pull in the direction shown in Fig. 3 to separate the two connectors.

2 .Charging Cautions

- ①.Fully charge the battery pack before the initial use. If stored for a long time, the battery pack may gradually discharge by itself. Overcharge may shorten the lifespan of the battery pack.
- ②.The battery pack may become hot after use. Please wait for it to cool down before charging.
- ③.Do not bump the battery pack and keep it away from water or fire.
- ④.Keep the battery pack out of reach of little children.
- ⑤.Do not force to separate the connectors. Do not charge with any voltages other than the specified one.
- ⑥.Never try to disassemble the battery pack.

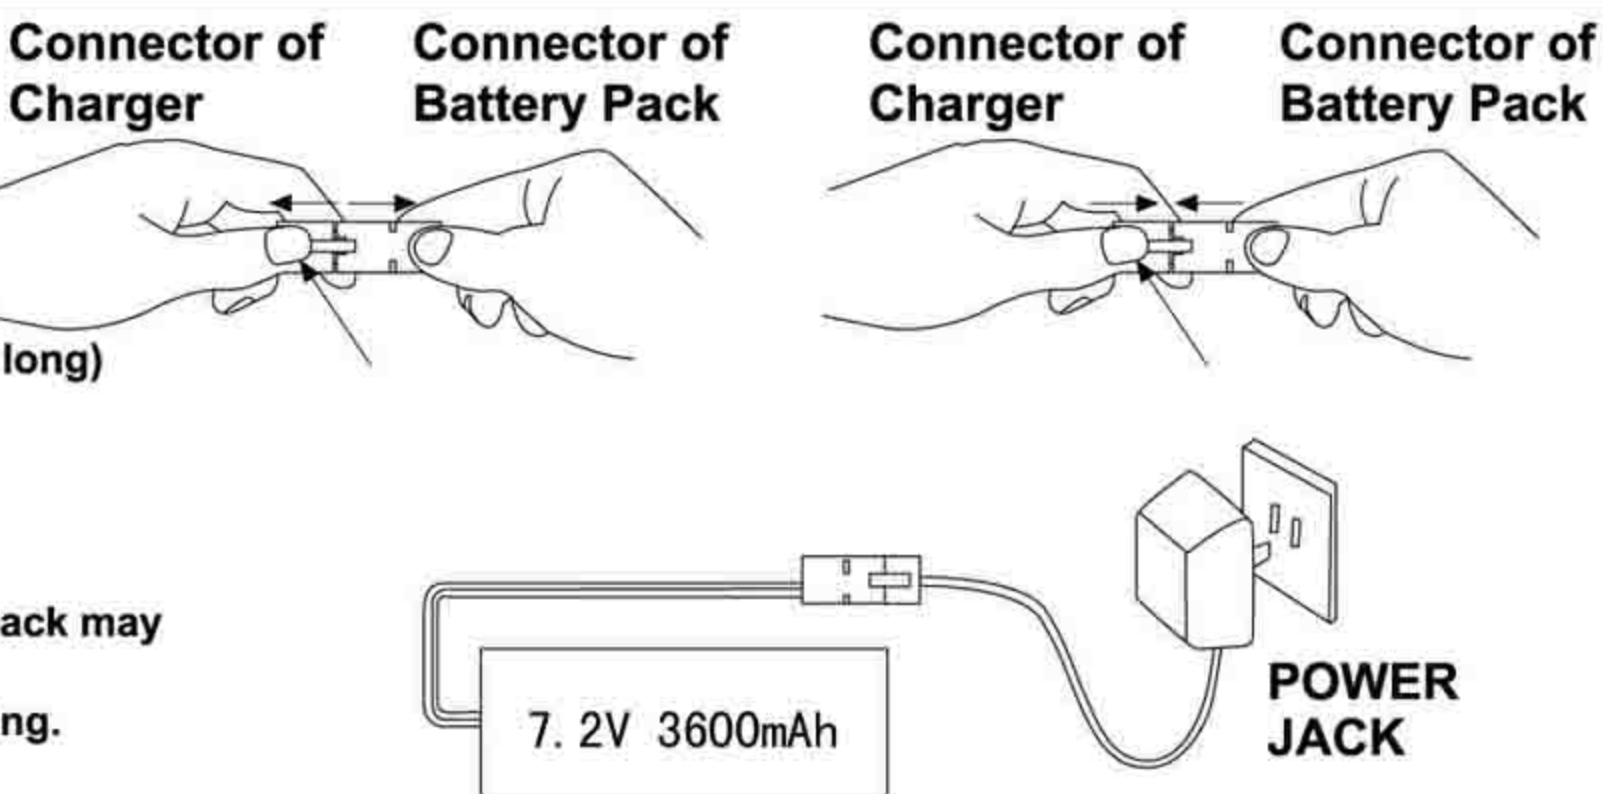


3.Install Batteries in the Controller

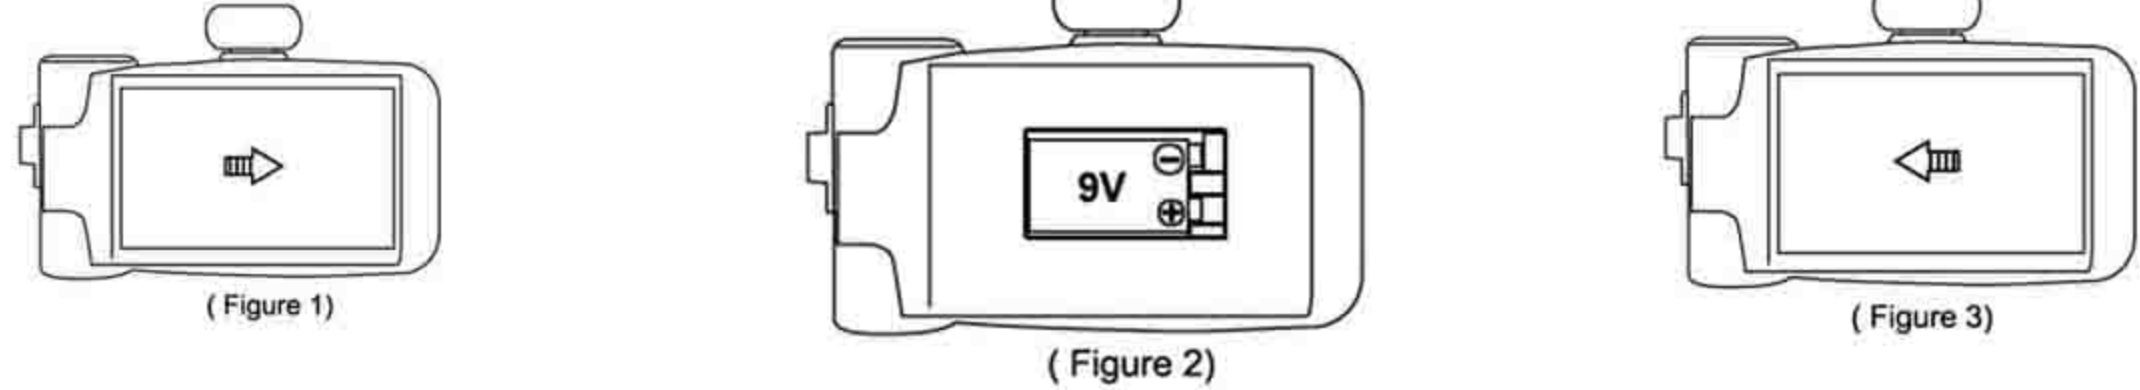

- 1.Open the battery cover on the controller, as Fig. 1 shows.
- 2.Correctly load in batteries, as Fig. 2 shows.
- 3.Close the battery cover, as Fig. 3 shows.


4.Install/Uninstall Controller Antenna

Insert the antenna into the hole on the top of the controller and turn clockwise to fix. (Fig. 1)
To detach the antenna, just turn it counterclockwise. (Fig. 2)

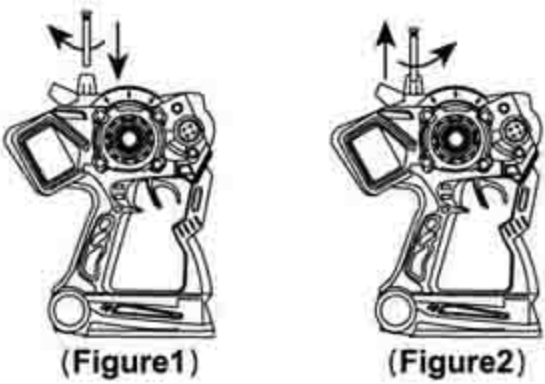

5.Install Battery Pack in the Boat

- 1.Open the battery cover on the boat, as Fig. 1 shows.
- 2.Connect the connector of the battery pack to the connector of the power wire in the boat, as Fig. 2 shows
- 3.Set the 7.2V battery pack into the battery compartment, as Fig. 2 shows, and fix the battery cover with fastener, as Fig. 3 shows.

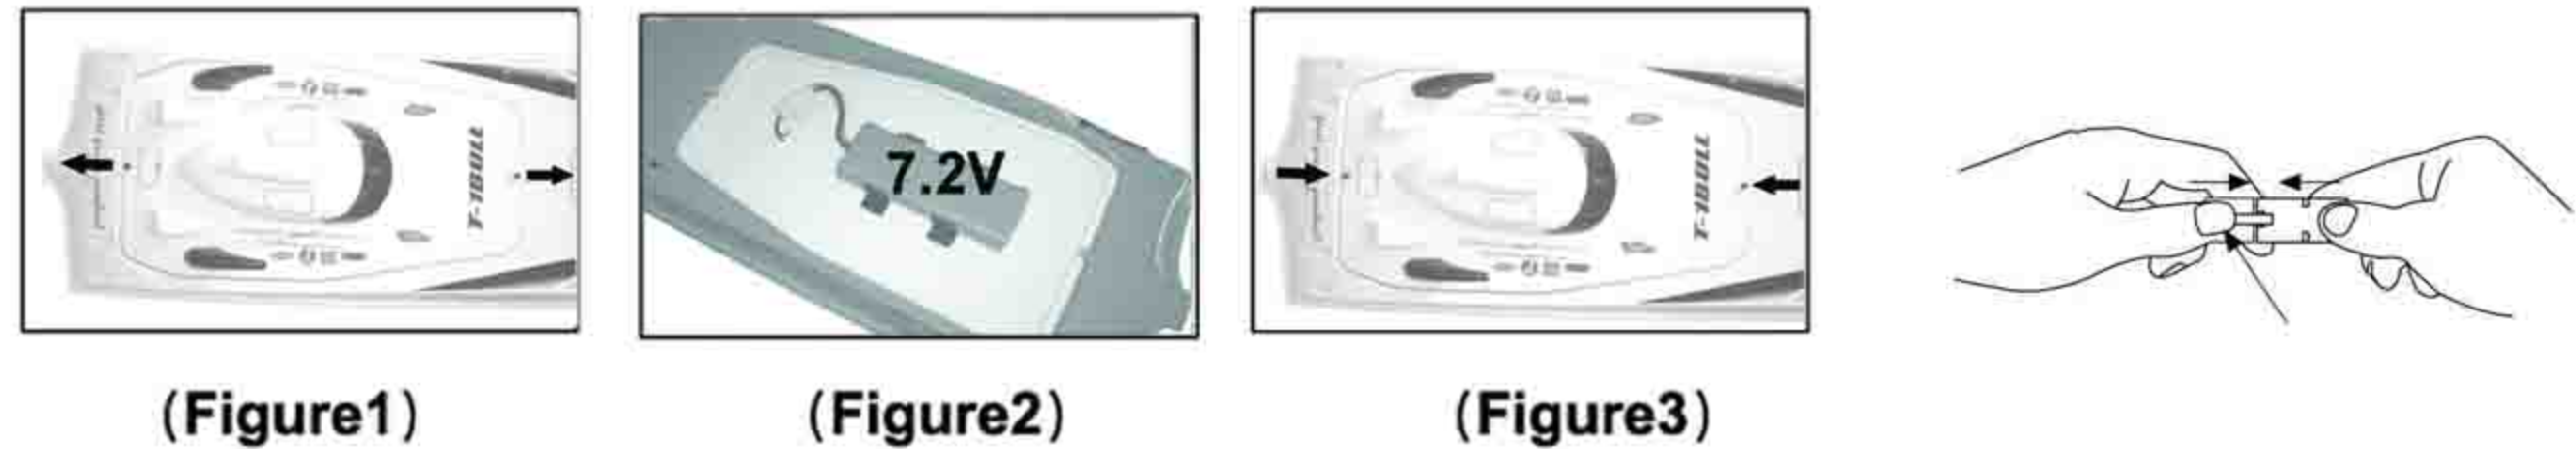

6. Operations

When the trigger is fully pulled, the boat will run forward at high speed.

When the control knob is turned counterclockwise, the boat will turn left. When the control knob is turned clockwise, the boat will turn right.

(Correct holding and operating posture: Use left hand to hold the controller, with one finger on the trigger, and use right hand to operate on the control knob.)

"Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.