

User manual

HOW TO RECHARGE THE BATTERY:
CHARGE THE 9.6V BATTERY BEFORE USING. FOLLOW THE INSTRUCTION TO CHARGE IT, AND MUST BE GUIDED BY AN ADULT WHEN YOU CHARGE IT.

1. To recharge the battery insert the plug-charger with in door power jack. Please use the same voltage.
2. Contact the joint of the battery with joint of the charger (see the picture).
3. The charging time is about 4-6 hours, so please charge the battery after finishing charge.
4. Separate the charger with the battery after finishing charge.

How to remove and insert replaceable batteries (diagram or instructions)
Non-rechargeable batteries are not to be recharged
Rechargeable batteries are to be removed from the toys before being charged
Rechargeable batteries are only to be charged under adult supervision
Different types of batteries of new and used batteries are not to be mixed
Only batteries of the same or equivalent type as recommended are to be used
Exhausted batteries are to be removed from the toy
The supply terminals are not to be short-circuited

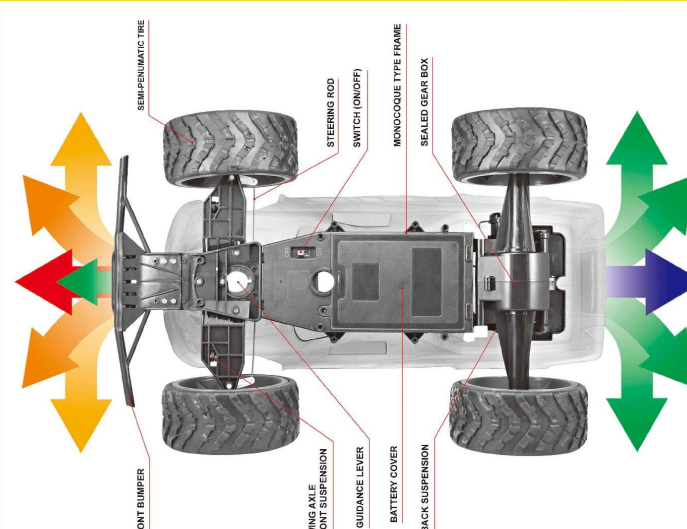
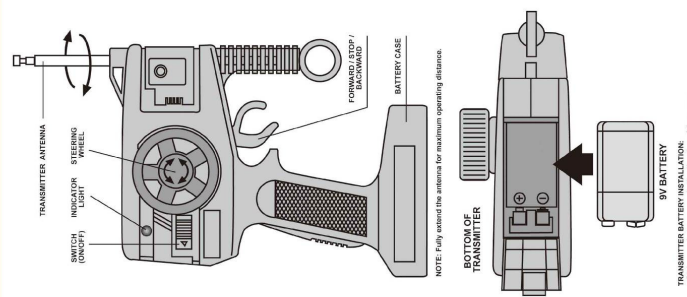
FCC Statement:
This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions.
(1) This device may not cause harmful interference,
and (2) this device must accept any interference received,
including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

MADE IN CHINA

CE

NO. 757-9023

WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

9V BATTERY

TRANSMITTER BATTERY INSTALLATION:

- Slide open battery cover in the direction of the arrow.
- Insert the battery with the positive (+) and negative (-) signs.
- Close the battery compartment.

NOTE: Fully extend the antenna for maximum operating distance.

Model: 757-9023