

Appendix 5

Prüfbericht - Nr.:
Test Report No.:

14041620 001

Seite 6 von 6
Page 6 of 6

 
User manual



WARNING: NO OPEN FLAME
This device is not to be used near open flames or heat sources.
TÜV Rheinland

HOW TO RECHARGE THE BATTERY:
CHARGE THE 9.6V BATTERY BEFORE USING. FOLLOW THE INSTRUCTION TO CHARGE IT, AND MUST BE GUIDED BY AN ADULT WHEN YOU CHARGE IT.

1. To recharge the battery, insert the plug-charger with in door the same voltage.
2. Contact the joint of the battery with joint of the charger (see the picture).
3. Time for charging is about 4-6 hours no more.
4. Separate the charger with the battery after finishing charge.

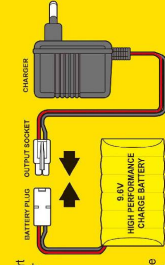

CHARGER
BATTERY PLUG
OUTPUT SOCKET
9.6V HIGH PERFORMANCE CHARGE BATTERY

How to remove and insert replaceable batteries (diagram or instructions)
Rechargeable batteries are not to be recharged. They should be charged before being charged.
Rechargeable batteries are only to be charged under adult supervision.
Different types of batteries of new and used batteries are not to be mixed.
Only batteries of the same or equivalent type as recommended are to be used.
Batteries are to be inserted with the correct polarity.
Exhausted batteries are to be removed from the toy.
The supply terminals are not to be short-circuited.

FCC Statement:
This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference,
and (2) this device must accept any interference received,
including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

MADE IN CHINA



NO 757-9023

CE

RECYCLE

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

  PRECAUTIONS AND COLLISION OF CONTENTS MAY VARY FROM PHOTO.
REPAIR AND MAINTENANCE SHOULD BE DONE BY A QUALIFIED PERSON.
ADULTS MUST CHECK THE PLASTIC OF FOUNDATION WITH EYEGLASS AND DISCARD THE PIECES.

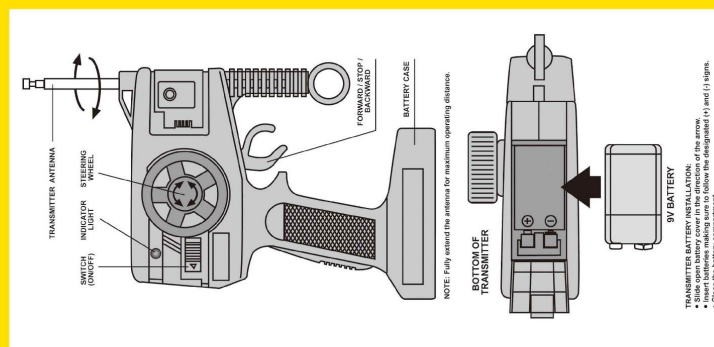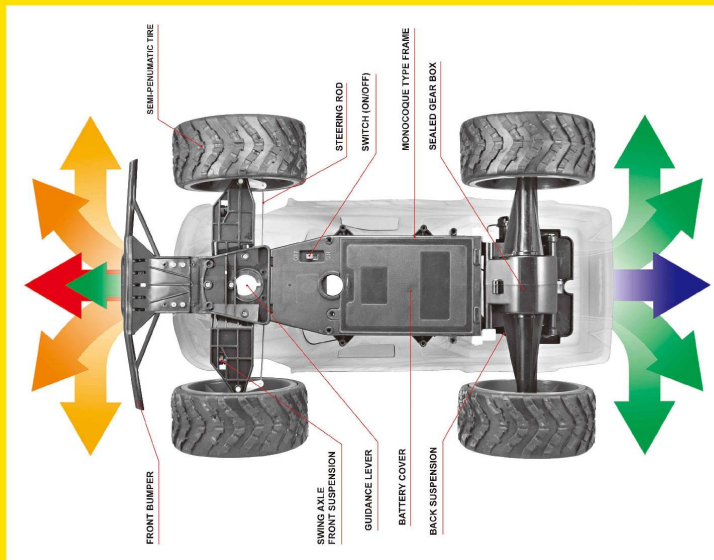

Model: 757-9023