

Game Elements

PS2 Wireless 2 Control Pad-DVD Remote Model #GGE633

IMPORTANT: Before using this product please read the PlayStation 2™ video game system instruction manual for safety, health and other information.

INTRODUCTION

Congratulations on purchasing the **Wireless 2™** Control Pad-DVD remote for use with the PS2 game console. You now can experience total control over your console. The **Wireless 2** is equipped with integrated DVD functions hidden under the retractable panel so no other remote is needed when you want to play DVD movies. Please familiarize yourself on the functionality by reviewing these operational instructions.

Technology Features

- A) 2.4 GHz Wireless technology with 27 Function IR Integrated buttons for DVD playback
- B) Built in auto switching when using two or more wireless controllers together
- C) Up to 50 Foot operational range

Functional Features

- A) Two (2) fully pressure sensitive analog control sticks-Left / Right
- B) Four (4) fire buttons (Pyramid, O, X, Square). –“Rick you have to draw these like the Sony”
- C) Four shoulder fire buttons (R1, R2, L1, L2)
- D) Start / Play / Pause button.
- E) Select / Display button
- F) Illuminated Analog Button
- G) 8-way pressure sensitive directional control pad.
- H) On / Off switch
- I) Under panel DVD functions

COMATIBILITY

The software used will dictate the functionality of the controller buttons. See the controller set up in the software instructions for more detailed information. **Some of the under panel DVD functions are only compatible for use on the PS2 model numbers SCPH-50001, and SCPH-70012.**

INSTALLATION AND SET UP

- 1) Remove the battery cover on the back of the Wireless 2 Controller and install 3 AA batteries (Not Included) into the compartment. Make sure to install the batteries with the polarity direction in the proper manner (+ -)
- 2) With the game console off connect the controller receiver into player port one or two.
- 3) Turn on the game console and switch on the Wireless 2 game pad. A Red LED will illuminate on the receiver signifying the receiver is powered. The Green LED on the receiver will illuminate and notes when the controller and receiver are synchronized. The receiver will flash if scanning for the controller.

OPERATIONAL NOTE: Use only new batteries together. Do not install new and old batteries together as functionality problems may occur. Remove batteries if pad is going to be left for a long period of time or voltage is low. **Wireless 2 is not Dual Shock™ vibration compatible.**

ANALOG BUTTON

Use to switch between digital and analog. In the digital mode the controller will act like the original Sony® controller for PS2. The analog sticks will operate the same as the directional pad. The L3 & R3 buttons are not active. In the analog mode you will have more accurate control over your movements. The LED light on the Analog button will be illuminated when Analog function is on.

Note: Always refer to the software you are using for the suggested modes of play.

SLEEP AND WAKE UP MODE

In order to preserve battery life the Wireless 2 pad has a sleep and wake up mode built in. The pad will enter into Sleep mode after 3 minutes of inactivity. Please note the following points regarding the feature:

- Wireless 2 pad will enter sleep mode after 2 minutes of operation
- To wake up Wireless 2 pad press any button such as R1, R2, X. Pad will resume operation after 3 seconds

DVD FUNCTIONS AND OPERATION For use on PS2 Versions-SCPH-50001 and 70012

You can access all the basic DVD player functions found in the PS2 by using the Wireless 2. For detailed explanation of the each function see the included chart. The PS2 SCPH-50001 and 70002 are the newest PS2 consoles with progressive scan and other new features. These consoles have a built in integrated IR receiver and therefore can be controlled right from the Wireless 2 game pad when pointed at the IR receiver on the console. If operating with the PS2 version SCPH-50001 you can have the DVD tray EJECT/CLOSE right from the Wireless 2.

NOTE: Some functions of the DVD playback will operate from the some of the external buttons found on the controller such as the fire and shoulder buttons.

♦ Setting up the remote and starting DVD Playback

- 1) Press main power switch on the PS2 console rear or front depending on which version you have to turn the console on.
- 2) Press the reset button of the Wireless 2 control pad
- 3) Press the open/close button on the Wireless 2 control pad (PS2 model SCPH-50012 only) or manually on the console
- 4) Place the DVD in the PS2 console tray
- 5) Press the open/close button and the tray will close (SCPH050012 only). DVD content on the screen will appear.

♦ Ending DVD Playback

- 1) Press the open/close button on the console or Wireless 2 game pad
- 2) Remove the disc from the PS2 tray
- 3) Press the open/close button on the console or Wireless 2
- 4) Press and hold down the reset button. The PS2 “On” LED turns red and enters stand by mode.

Note: Consult the chart for all other button functions

Installation and operation when using PS2 Versions SCPH-30001 to SCPH-39001 (Dongle Required)

In order to use the Wireless 2 Game Pad with the older PS2 consoles, “you must keep the included receiver dongle connected”. Use the below installation and operation procedure:

♦ Setting up the Wireless 2 and starting DVD Playback

- 1) Make sure the receiver dongle is connected into player port 1 on the PS2 console
- 2) Manually press main power switch on the PS2 console rear to turn the console on
- 3) Manually press the reset button on the PS2
- 4) Manually press the open /close button on the PS2 console front
- 5) Place the DVD in the PS2 tray
- 6) Manually press the open/close button on the PS2 console and the tray will close. DVD content on the screen will appear.

Note: Consult the chart for DVD button functions. No memory card or software is required to operate the Wireless 2 Controller. Some functions noted in the included chart will not be compatible on the SCPH-30001 to SCPH-39001 PS2 consoles and will need to be manually performed.

◆ **Ending DVD Playback**

- 1) Press open/close button on the PS2 console
- 2) Remove the disc from the PS2 tray
- 3) Press the open/close button on the PS2 console
- 4) Press reset button on the console. The RED light on the PS2 turns red and enters stand by mode.

◆ **Viewing / Listening Options**

Familiarize yourself with the Keypad Function chart as it notes what each button does. To help enhance your experience with your Wireless 2 Control Pad and PS2 console please review these viewing options:

Playback From last stopping point:

- 1) During the playback, press the stop or O button on the Wireless 2 Control Pad to stop play
- 2) Press the play button on the control pad panel

Playback In Desired Order:

This function enables you the set the DVD to play scenes in whatever order you like by arranging the order of the titles or chapters on this screen.

- 1) Press the PROGRAM button
- 2) Select the item number and press the X button
- 3) Use the directional buttons to select the number of the title that includes the desired chapter and press the X button.
- 4) Use the directional buttons to select the number of the desired chapter and press the X button
- 5) Repeat steps 2 through 4 to continue arranging the desired order of titles
- 6) Press the PLAY button and program play begins.

To End Program Play:

Press the CLEAR button

To Change Program Play Settings:

- 1) In step 3, select the number of the item to be changed and press the X button
- 2) Repeat steps 3 and 4 above to enter new settings

Clearing All Program Play Settings:

Select “Clear All” in step 2 noted in Playback In Desired Order. To cancel one by one, stop the play and use the directional buttons in step 3 to select the item to be cleared. Press the X button, select “Clear” and then press the X button again to remove the item.

Use Of Program Play After Playback Has Finished:

Press the PLAY button to begin the program sequence again. Program play may not be available on some discs.

Playback In Random Order:

The PS2 Console will select a random order to play chapters and titles. The Playback order will be different each time the button is pressed.

- 1) Press the repeat button during playback. The TV screen will display the noted repeat modes in turn each time the button is pressed. Repeat play begins as soon as the repeat mode is selected.

Repeat Modes

- DISC REPEAT (Repeat all titles)
- TITLE REPEAT (Repeat one title)
- CHAPTER REPEAT (Repeat one chapter)
- REPEAT OFF (Clears Repeat)

Check Playback Settings:

Press TIME button. The icons for currently set playback modes are displayed in the top right of the screen

End Repeat:

Press the repeat button until “Repeat Of” is displayed

Repeat Play With Program Play Or Shuffle Play:

- Repeat With Program Play. During the playback in Repeat Play mode, press PROGRAM button and make the program selections. Press the START button, and Repeat Play is turned on.
- Repeat With Shuffle Play. During playback in Repeat Play Mode, press the SHUFFLE button. Repeat Play is activated

Note: Press clear button to clear all playback settings and return to normal. If you want to repeat the play on a disc that is not playing press the REPEAT button until the repeat mode you want is displayed. Press play button and Repeat play begins.

Scene Repeat:

- 1) Press the A-B button at the point you want to start the repeated playback.
- 2) Press the A-B button at the point you want to end the repeated playback.

To end press CLEAR button.

Note: Some Discs or sections on them may not be able to be used with this feature

Playback from Last Stopping Point:

- 1) Press stop
- 2) Press play and disc resumes from last stopping point

Note: If you want to clear the resume play press the STOP button two times

Playing An Audio CD:

The PS2 can also be used as a normal CD player and the Wireless 2 Controller can operate the functions.

The following buttons work in conjunction with CD playback:

PLAY

PAUSE

STOP

PREV

NEXT

SCAN Forward

SCAN Backward

Note: Track numbers can be entered using the number buttons on the Wireless 2 Controller

Audio CD Program Play:

- 1) Select the audio CD icon in the screen, then press the X button
- 2) Press the program button
- 3) Choose the number of the track using the directional buttons, then press the X button
- 4) Repeat step 3 to select desired tracks to play.
- 5) Press PLAY button

Note: To clear the program play repeatedly press the PROGRAM button.

Audio CD Shuffle Play:

This feature enables track playback in random order

- 1) Select the audio CD icon on the screen and press the X button
- 2) Press the SHUFFLE button
- 3) Press the PLAY button

Note: To clear press the SHUFFLE button until the display goes off. You can also play random tracks repeatedly by pressing the REPEAT button during Shuffle Play. To clear the function press the CLEAR button

Audio CD Repeat Play:

This function enables repeat play of all or one of the tracks

- 1) Select the Audio CD icon on the screen and press the X button
- 2) Press the REPEAT button. Select the track you want to play by using the directional pad on the Wireless 2. Then press REPEAT.
- 3) Press Play button

Note: To clear Repeat press repeatedly press the REPEAT button

DVD Function Chart

Button Label	Description	SCPH-50001, 70012 series	SCPH-39001 series
Open/Close	Open/Close DVD Tray (Only compatible with SCPH-50001)	Compatible only on SCPH-50001	NOT COMPATIBLE
L2	Scan the DVD backward		
R2	Scan the DVD forward		
Reset	RESET console		NOT COMPATIBLE
Triangle Fire Button	Displays DVD Menu		
Circle Fire Button	Stops Playback		
Square Fire Button	Displays Title Menu of DVD		
X Fire Button	Enters the item selected on screen		
Select	Displays PS2 DVD Control Panel		
Start	Play/Pause		
 Up	Select UP during menu screens		
 Left	Select LEFT during menu screens		
 Right	Select RIGHT during menu screens		
 Down	Select DOWN during menu screens		
 Enter	Enters the item selected onscreen		
Game Pad L1	Returns to Previous Chapter		
Game Pad L3	DVD Subtitle Options		
Game Pad R3	DVD Audio Options		
Game Pad R1	Advances to Next Chapter		
Numerical Keys (1, 2, 3, 4, 5, 6, 7, 8, 9, 0)	Allows for numerical selection of items onscreen or DVD chapter selection		
Clear	Clears selected numbers or playback modes (Repeat, A-B)		
Menu	Displays DVD menu		
Shuffle	Randomly Play chapters of DVD		
Angle	Displays and changes viewing angle		
Program	Selects Programmed Playback		
Repeat	Selects Repeated Playback		
 Slow Backward	Selects Slow Backward Playback		
 Slow Forward	Selects Slow Forward Playback		

 Scan Backward ?	Scan the DVD/CD backward		
 Scan Forward ?	Scan the DVD/CD forward		
A-B	Selects repeated playback of a specific section		
 Next	Advances to Next Chapter		
Display	Displays PS2 DVD Control Panel on screen		
Top Menu	Displays DVD Menu		
 Stop	Stops Playback		
 Prev	Skip to beginning of previous chapter		
 Play	Begin Playback		
 Pause	Momentarily Pause playback		
 Return	Return to previous menu/screen		
Audio	Displays and changes Audio and language options		

CARE FOR THE UNIT AND TROUBLESHOOTING

The **Wireless 2** is an electronic unit and should be treated with care when handling. Philips Accessories and Computer Peripherals North America recommends that you do not disconnect or connect the **Wireless 2** to your **PS2** game console when the system is switched on. We also recommend that you do not store the unit in direct sunlight or at extreme temperatures, or spill any liquids on the unit. Finally, do not open the case of the **Wireless 2**. Maintenance and servicing should be done by Philips Accessories only.

If you are experiencing difficulties with your **Wireless 2**, please check the following:

Game Pad Related

Not Working: Make sure the **Wireless 2** receiver is plugged firmly into your PS2 game console. Try turning off the console and removing and reinstalling the receiver. Turn **Wireless 2** game pad off then on again.

Not Performing Functions Properly: Turn the power off on the game console, disconnect and reconnect **Wireless 2** receiver. Make sure mode is selected.

DVD Playback Related

Doesn't work:

- 1) There is an obstacle between the controller and the receiver dongle or IR port
- 2) Operation distance is to far
- 3) Make sure 3 AA batteries were installed

My system turns on but there is nothing on the TV:

- 1) Verify AV cable is connected from the console to the TV and securely in place in both connections

My Wireless 2 Controller does not respond while in the system menu:

- 1) Verify which PS2 you own by looking at the back of the console. You will note a model number near the Sony name. Only the SCH50001 and 70012 operates without the receiver dongle. If your console is another series you must use the supplied receiver dongle.
- 2) Make sure batteries are fresh and installed correctly
- 3) If your system uses the receiver dongle turn the power off on the PS2 console. Unplug the receiver dongle and reconnect it after a few seconds. Turn the power back on again on the PS2.

My PS2 Console does not respond without the receiver:

- 1) Only the SCH50001 70012 series PS2 will operate without the receiver dongle
- 2) Check the batteries are good and inserted properly

My system has poor picture quality and I have a 50001 or 70012 series PS2:

When you play a DVD, picture quality seems reduced, or the picture quality may not be displayed

- The progressive scan option is set to ON when using a TV that does not support progressive scan, or when using cable other than the component AV cable for PS2. Do not open the disc tray or remove the disc. With the DVD inserted in the PS2, press the on/standby/reset button of the Wireless Wave Remote control, or the stand by /reset button on the PS2 front, and hold down the START button of the analog control pad inserted into controller port 1 until the DVD picture is displayed. When DVD playback begins, “Progressive” will be set to “Off” and the picture will be displayed
- Many video games images appear different when using progressive scan. If this occurs set “Progressive” to Off.

If you require further assistance with your **Wireless 2**, please contact Philips Accessories and Computer Peripherals North America Tech Service department through either of the following means:

Phone: Monday through Friday, 8:30am to 5:00pm EST

Email:

World Wide Web:

Mailing Address:

LIFETIME WARRANTY

To obtain warranty service within the warranty period:

IN THE USA: Return product to the place of purchase or send the defective item postage prepaid with a copy of the sales receipt, return address and a brief description of the problems you are experiencing to:

ATTN: Consumer Service

IN CANADA: Return product to the place of purchase, or contact service support at
TEL: or

For trouble-shooting, assistance in any other region, or to obtain service after the warranty period has expired, contact Game Elements Consumer Service department by any of the following means:

PHONE :

FAX :

Email :

World Wide Web:

CAUTION: Any changes or modifications not expressly approved by the grantee of this device could void the users authority to operate the equipment.

© 2005 Game Elements is a registered trademark of Philips Accessories and Computer Peripherals North America. PlayStation and PS2 are either registered trademarks or trademarks of Sony Computer Entertainment. This product is not sponsored, endorsed, or approved by Sony.
Printed in China.

IMAGE: Need the image of the game pad with DVD panel opened out to point out the functions.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS
EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY
TO OPERATE THE EQUIPMENT.