
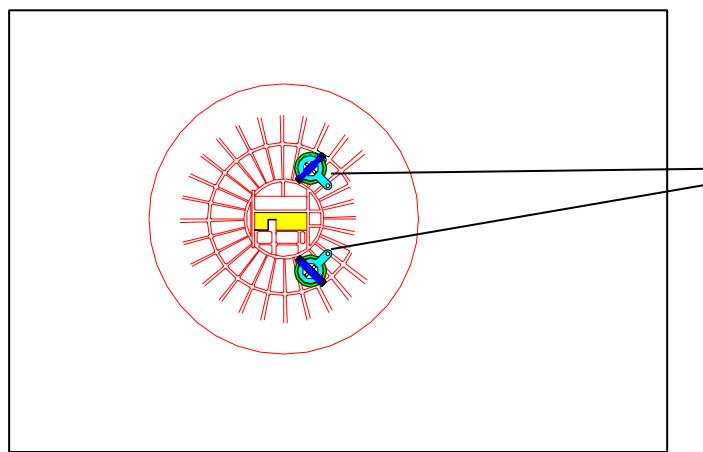
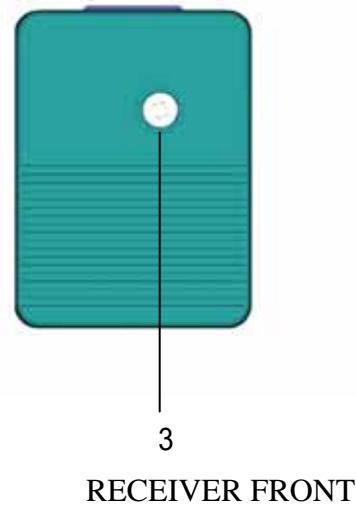


# INSTRUCTION MANUAL FOR MODEL 0100

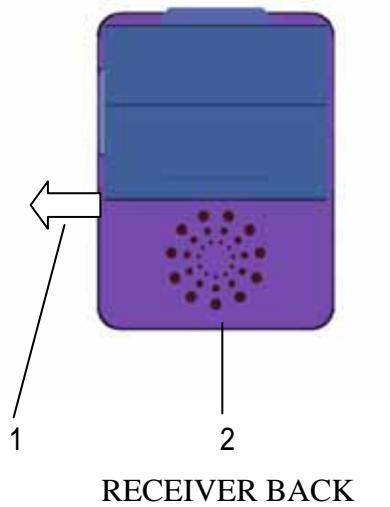

TRANSMITTER DISC

## A) FUNCTION KEYS

1. BATTERY PULL TAG - RECEIVER
2. SPEAKER
3. SCREW HOLDER
4. BATTERY PULL TAG - TRANSMITTER

## B) OPERATION

1. TAKE OUT BOTH PULL TAGS AND PLACE THE RECEIVER AND TRANSMITTER  
WITHIN 6 FT.

2. WHEN YOU STEP ON THE MAT, RECEIVER HAS SOUND.

3. STEP ON THE DIFFERENT LOCATIONS AND HAVE DIFFERENT SOUND FROM  
RECEIVER (TOTAL 3 SOUNDS)

(WHEN SOUND IS PLAYING AND STEP AGAIN, SOUND WILL PLAY AFTER 10 SECONDS)

## C) CAUTION

1. DIFFERENT TYPES OF BATTERIES CANNOT BE USED.
2. WHEN THE SOUND BECOME WEAK, IT IS THE TIME TO CHANGE THE FACTORY

**FCC NOTE**

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

**FCC Warning Statements for FCC ID Label**

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.