


INSTRUCTION MANUAL FOR MODEL 0100

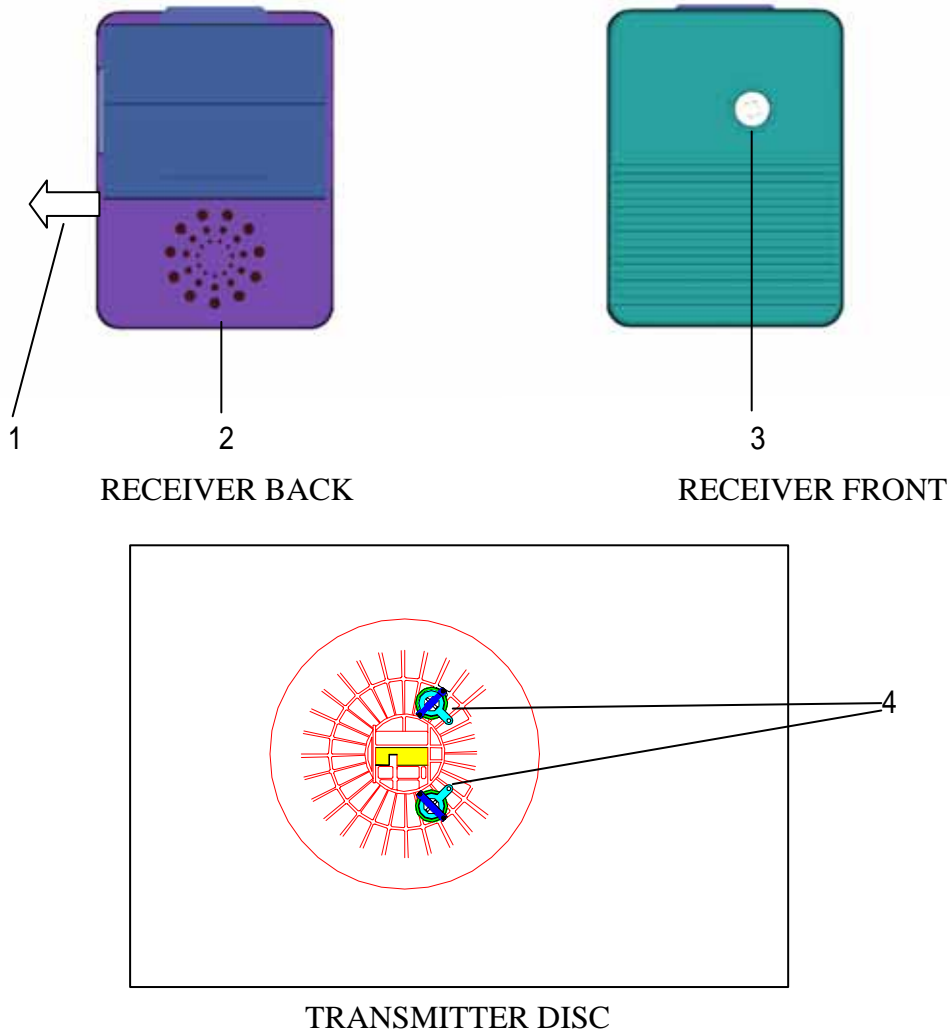

A) FUNCTION KEYS

1. BATTERY PULL TAG - RECEIVER
2. SPEAKER
3. SCREW HOLDER
4. BATTERY PULL TAG - TRANSMITTER

B) OPERATION

1. TAKE OUT BOTH PULL TAGS AND PLACE THE RECEIVER AND TRANSMITTER WITHIN 6 FT.
2. WHEN YOU STEP ON THE MAT, RECEIVER HAS SOUND.
3. STEP ON THE DIFFERENT LOCATIONS AND HAVE DIFFERENT SOUND FROM RECEIVER (TOTAL 3 SOUNDS)
(WHEN SOUND IS PLAYING AND STEP AGAIN, SOUND WILL PLAY AFTER 10 SECONDS)

C) CAUTION

1. DIFFERENT TYPES OF BATTERIES CANNOT BE USED.
2. WHEN THE SOUND BECOME WEAK, IT IS THE TIME TO CHANGE THE BATTERY

FCC NOTE

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC Warning Statements for FCC ID Label

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.