

Instruction Manual for Shelftalker #05-0035S

A) Batter Installation

Use screwdriver 17 put into the indicated hole and left push the battery compartment, install 'AA' batteries x 3 pcs and place back the battery compartment.

B) Instruction

- 1) Touch the touch point with your finger, shelftalker sound, only workable in 2.5 seconds for each touch.
- 2) Built-in receiver function, receiving frequency : 433.92MHz.

C) Caution

- Do not mix old and new batteries.
- When the sound become weak, this is the time to change batteries.

FCC Warning Statement :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.