 
 
 


备件 Parts are Alternative

下列表是可供选择的备件，为方便客户选购，特出每个配件名称，
可到当地的经销商购买备件。
Items to be purchased are lined below. You can order them by their
item name, purchase them from local distributor\$.

251		机头 Head Cover	航模 Main Motor Span	连接扣 Connect Buckle
252		平衡杆 Balance Bar	电池 Body Battery Pack	尾桨 Tail Rotor Span
		主电机 Main Motor		尾电机 Tail Motor
		电路板 Circuit Board		直升机尾部 Chopper Tail Unit
		适配器 Adapter		起落架 Landing Gear
		遥控天线 R/C Antenna		电池盒 Battery Case
		控制器电源开关 Controller power switch		控制器 Controller
		直升机头部 Copter head cover		直升机 Helicopter
		控制器LED Controller LED		升降摇杆 Rise throttle stick
		方向摇杆 Direction control stick (left, middle, right)		

R/C Helicopter SERIES

遥控直升机

系列

AGE 14+

PAEY5

1. 航模
Copter power switch



NO.HX251



NO.HX252



2. 航模
Copter power switch
Rise throttle stick
Direction control stick
(left, middle, right)




3. 航模
R/C Antenna

4. 航模
Battery Case

5. 航模
Remote Controller

Charge batteries of chopper headw


1. 移开机头。 1. Move off helicopter's head cover

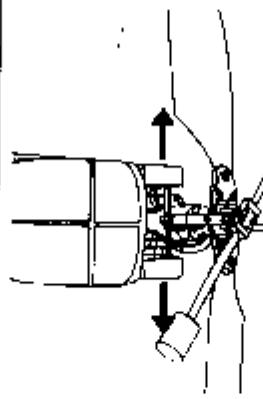

NOTES: Be sure that a adapter is in your **IDE** before clicking **COMPILE SOURCE** or **RUN SOURCE**.

Assemble remote controller

1. 将天线顺时针转动插入天线器的天线终端螺旋柱上。

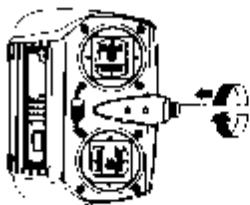

85135 8x512A



遙控器電池盒
Remote controller
Battery case cover

Pre-fly arrangements

1000呎的情況，一上飛行，因為過熱或過冷的大氣下飛行，會影響飛行效果或損壞直升機。在暴風雨的天氣，也要盡可能的避免飛行，或全斷碼你所控制飛行，切勿在惡劣的天氣，或雨中飛行，這兩項，都是你所要避免的。

3. 最好选择在一个晴朗早起，飞行，晴朗，无风，无雨，无雷，无电，无电场及臭氧浓度较低的晴朗正午时。

b) Do not fly in strong winds. It can limit the helicopter's fly and confuse your control. Flying in strong winds, The chopper will be missing or cause damage.


c) Do not fly in such weather conditions like strong thunder, flashing lightning, rainstorm, ice storm, heavy snow etc.

2. It comes ready to fly the chopper over the lawn. Be sure fly area is far away from the crowd, animals, trees, tall buildings, high-voltage cables etc.

Ready to fly

Assemble remote controller


1. 天线的安装
将天线顺时针转动装入座控器的天线终端螺旋柱上。
1. Install antenna cord
Revolve antenna cord
adapter clockwise.
2. 电池的安装方法
请勿将本机电源与其它电器设备共用电源，以免损坏。
请勿将本机电源与其它电器设备共用电源，以免损坏。
2. Install batteries
Open the cover of battery case; insert
8 batteries (size AA) properly followed
by polar indicator.(Batteries to be
purchased).

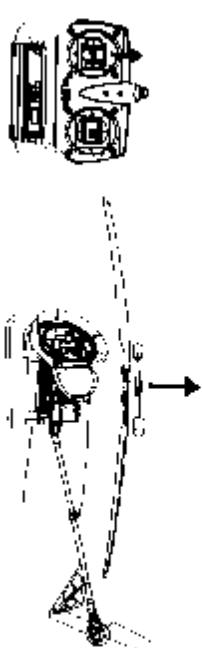

increase throttle stick, main rotor span revolves faster and the chopper rings up.

Fly the chopper

This following shows you each operation of the remote controller and what the helicopter's corresponding action is.

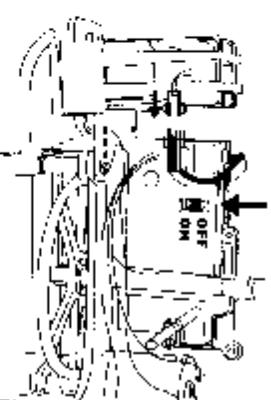

↑:升站率操纵杆放松, +旋翼转速减小, 机下降
Pull down rise throttle stick, main rotor span's rotating speed comes down and the chopper falls.



转向操作杆向左推, 尾翼转速增人, 尾翼机头向左转
Turn direction control stick to the left, tail rotor span rotates slowly and the chopper yaw its nose to the left.



转向操作杆向右推, 尾翼转速减小, 尾翼机头向右转
Turn direction control stick to the right, tail rotor span revolves faster and the chopper yaw its nose to the right.



Important note

If helicopter flies rotating in the air without pulling control stick, then you can stop the fly use screw driver to adjust the potentiometer on chopper circuit board lightly till it is steady.

如果没用拼装转向操作杆, 但直升机仍然在空中打转, 这时可以用螺丝刀调节电路板上的电位器, 直到直升机不打转为止。



电位器调节方向
顺时针

Adjust the potentiometer clockwise



直升机变化现象
顺时针

Helicopter rotate against clockwise

电位器调节方向
逆时针

Adjust the potentiometer
against clockwise

直升机变化现象
逆时针

Helicopter rotate clockwise

Safe use of batteries and some guidelines

1. 确保正确插入电池，防止电池漏电。
2. 电池充电或者更换时要在大人的指导下使用。
3. 不要把电池放在太阳直射下，高温地区或火附近，因为这会导致爆炸。
4. 请不要把新旧电池混合作为使用。
5. 请勿将碱性电池、标准的碳性电池或碳墨电池或用过的电池混合作为使用。
6. 请勿将两种不同类型的电池或不同容量的电池混合作为使用。
7. 不是所有的充电电池都可以拿去充电，必须是将耗尽的电池从产品中拿出，电池不可以长时间放置。
8. 请勿将电池之间的金属片安全地分离。
9. 充电时大勿切勿离开。
10. 不要将电池过早充电，否则会损坏电池。
11. 充电时大勿切勿离开。
1. Insert batteries properly, avoid battery leak.
2. Charge battery and change it by adult's guide.
3. Do not expose a battery to direct sunlight, in heat locations or near stove to avoid explosion.
4. Do not dispose useless battery into fire to avoid explosion hazard.
5. Do not mix new and old dry-cell battery together when in use.
6. Do not mix rechargeable battery and dry-cell battery together when in use.
7. Do not charge dry-cell battery.
8. Take exhausted battery or leak battery out of the product. Remove battery out before it is long-time unused.
9. Assemble battery with proper interval.
10. The excess charge can ruin the rechargeable battery.
11. Take care of battery when it is charging.

WARNING

3. Do not expose battery to direct sunlight, in heat locations or near stove to avoid explosion.
4. Do not dispose useless battery into fire to avoid explosion hazard.
5. Do not mix new and old dry-cell battery together when in use.
6. Do not mix rechargeable battery and dry-cell battery together when in use.
7. Do not charge dry-cell battery.
8. Take exhausted battery or leak battery out of the product. Remove battery out before it is long-time unused.
9. Assemble battery with proper interval.
10. The excess charge can ruin the rechargeable battery.
11. Take care of battery when it is charging.

本机操作简单，一目了然，此款最适合家庭用户，操作简单，功能强大，是您家庭影院的首选。

1. Main rotor blades and tail blades and gear can rotate at very high speeds in your playing and therefore can inflict severe damage or injury to people especially from parts such as your face, fingers, eyes and hairs.
2. The helicopter has battery pack inside. If battery leaks, keep it far away from your eyes.
3. Use only the adapter in package. Do not use other type adapters.
4. Do not fly the helicopter if the rotor span is break or it can cause damage.
5. The helicopter's heavy crash and fall are prohibited when you are playing, it can shorter the life of the copter.

Troubleshooting and dealing with

PROBLEM	CAUSE	处理方法
Controller doesn't work	1. Controller's power switch is off. 2. Insert batteries into controller improperly. 3. Batteries lack of power.	1. Turn power switch on. 2. Confirm batteries be inserted according to their pole. 3. Change new batteries instead.
Cannot control the helicopter.	1. You haven't operated the controller. 2. Doesn't turn on controller's power switch. 3. Doesn't west antenna into controller completely or antenna isn't fully pulled out. 4. You play the helicopter in strong winds weather.	1. 按住遥控器上的开机键。 2. 确认电池正负极插入。 3. 请勿在遥控器上操作。 4. 在遥控器未开机的情况下，将遥控器的天线，完全伸直并完全拉出，确保遥控器的天线在飞行时能够伸直，或 5. 请勿在强风天气下飞行。
Helicopter can not rise or a jump-strat.	1. Main rotor blades rotate too slowly. 2. Doesn't full charge helicopter's battery.	1. 请勿长时间怠速。 2. 慢慢地放慢油门操作。 3. 请勿先充电，（参 考前文“如何充电”说明） 4. Fully charge helicopter battery. (See instruction above)
Helicopter and too fast.	1. Main rotor blades rotate too fast. 2. You loose the throttle stick or pull it down too fast.	1. 请勿长时间怠速。 2. 慢慢地放慢油门操作。 3. 请勿先充电，（参 考前文“如何充电”说明） 4. Fully charge helicopter battery. (See instruction above)

Changes or modifications not expressly approved by the third responsible for compliance could void the user's authority to operate the equipment.