



R/C WATER SOAKER

Models:
17506, 17507

R/C Water Soaker has full-function, and its battery operated radio controller navigates movement around the pool, elevates the shooting nozzle, and controls the soaking stream! It has a shooting distance of approximately 20 feet. The controller is water resistant up to 3 feet deep. This allows you to swim along and control your Soaker from below the surface of the water. It has underwater range of approximately 6 feet and a transmitter range of approximately 50 feet above the surface of the water.

Transmitter uses:
1-9V alkaline battery (not included)
R/C Water Soaker uses: 4-AA alkaline batteries (not included) or rechargeable NiMH battery (included with charger)

INSTALLING BATTERIES

No assembly is required before first time use.
Battery installation is required.

HOW TO INSTALL / CHANGE BATTERIES


R/C WATER SOAKER CONTROLLER

1. To open use Phillips screwdriver to loosen the 3 screws on the battery compartment cover and lift the cover to remove it.

2. Put one 9V alkaline battery in the compartment. Make sure that (+) and (-) poles are positioned properly.

3. Replace the battery cover and secure it with screws.

Note: When the transmitter's range decreases, replace its battery.

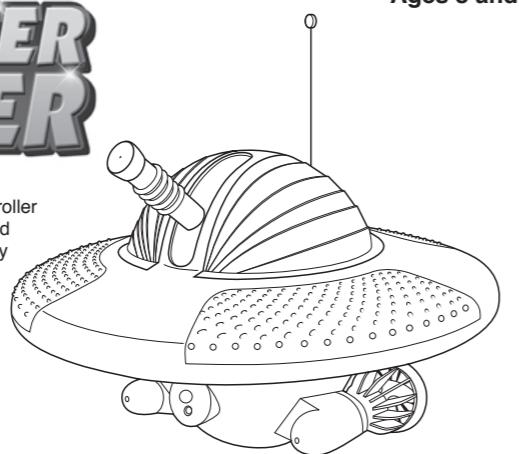

Ages 8 and up

Available in both
Metallic Silver/Green
- 49MHz (A)
& Metallic
Silver/Orange -
49MHz (B)

When using 2 R/C Water Soakers together, make sure they are not the same color to prevent crossing signals.

R/C WATER SOAKER

1. When installing new batteries, make sure that the power is in the off position on the R/C Water Soaker. Turn power off by pressing the button located between the two propellers. The light next to the on/off switch will light up if the power is still on.

2. To open, use Phillips screwdriver and loosen 3 screws on plastic covering, labeled BATTERY COMPARTMENT. Once loosened, lift the plastic cover to remove it.

3. After plastic covering is removed, use Phillips screwdriver to loosen 3 screws on the battery compartment cover and lift cover to remove it.

4. Take out the battery compartment box from the battery compartment.

5. Place 4-AA alkaline batteries or 6.0V rechargeable battery into the battery box.

6. Depending on which battery source you are using: plug either the AA battery box connector or the 6.0V rechargeable battery connector into the R/C Water Soaker connector, as shown.


7. Make sure battery and connector are secure in the battery compartment.

8. Replace battery compartment cover and secure with screws, making sure wires are not pinched by the cover.

9. Replace plastic covering and secure with screws.

HOW TO CHARGE/RECHARGE NiMH BATTERY

1. Insert charger plug into side of the rechargeable battery.

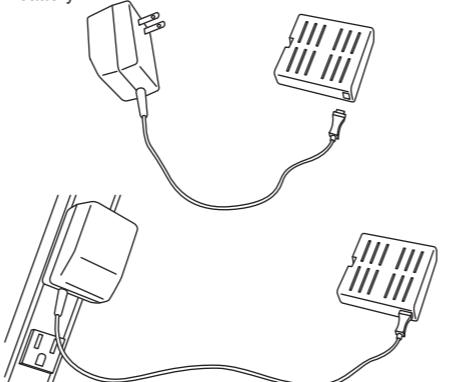

2. Plug in the power supply into the 115V-120V wall socket.

3. New NiMH battery pack is not charged before shipping. Charge for 12 hours before 1st use. 4 hours, thereafter.

Note: Any batteries purchased for use in this toy may pose a hazard to children. Please check safety notice supplied with batteries before use. Make sure the battery is completely dry before recharging.

Warning: Dispose of batteries promptly and properly; do not bury or burn them.

THIS PRODUCT IS DESIGNED FOR SWIMMING POOLS ONLY

CAUTION: For safety, children playing with this toy should be supervised by an ADULT, as with any products designed to be used in or around water. To maintain good performance and control, make sure that your R/C Water Soaker is operated at depths that do not exceed 6 feet.

CAUTION - ELECTRIC TOY:

NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK. INPUT: 120V AC, 60Hz, 6W OUTPUT: 8V DC, 200 mA, 1.6 VA

WARNING:

Item can swim into deep water. Always keep children in sight within quick and easy reach when they are in the water. Do not allow children to play where water is too deep for their swimming ability. Do not aim or shoot water at eyes or face. Use of goggles is recommended while playing.


Caution:

- Batteries to be installed by adults only.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- After each use, remove all batteries from the product, and drain any water that has accumulated inside. Moisture allowed to remain inside the product will damage the electronic components and batteries. Store the product with the battery compartment door open to allow it to dry completely.
- Change batteries in dry area.


OPERATING INSTRUCTIONS

- After the R/C Water Soaker is fully charged or new batteries are installed in both the Soaker and the controller, activate Soaker by pressing the button located between the two propellers in the back of the Soaker (the light will turn on to indicate it is in the "on" position).
- Activate controller by pressing the button located in the middle (light will turn on)
- Gently place R/C Water Soaker in the water and begin to operate.

- Push left and right levers on top of the controller to propel the Soaker forward and backward. These levers control the propellers on the bottom of the Soaker. Each propeller operates independent of the other and can move forward, reverse and spin in circles.
- When holding the controller, the button located on the bottom of the controller on your right finger controls the water that comes out of the nozzle. Push button to control water flow out of nozzle.

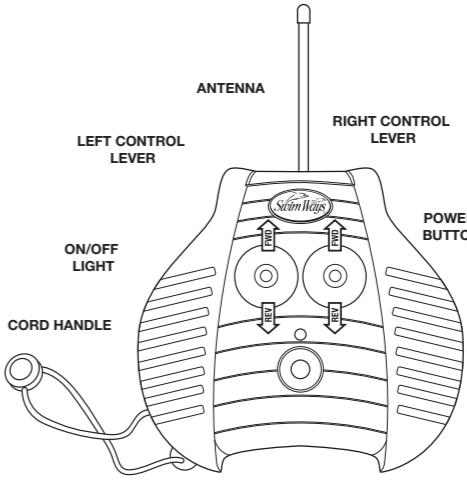

- When holding the controller, the rocker switch located on the bottom of the controller on your left finger elevates the shooting nozzle up and down. To adjust the height of the shooting nozzle, push the rocker switch up or down.

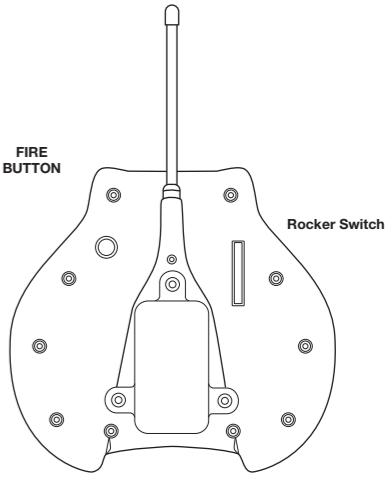

HELPFUL HINTS

- Fragile! Handle with care. Do not drop! Do not drop in water.
- Do not pick up R/C Water Soaker by antenna or shooting nozzle.
- Do not try to forcefully adjust the shooting nozzle. It is controlled by IC chip.
- Do not leave on the floor to avoid stepping or falling on the R/C Water Soaker accidentally.
- If R/C Water Soaker is upside down, water may damage the battery compartment. Flip R/C Water Soaker back to the upright position as soon as possible.
- After use, open battery compartment and wipe the batteries dry and the inside of the battery box (for both the R/C Water Soaker and the Controller). If water is found in the first use, try lubricating the rubber seals using petroleum jelly or equivalent.
- After each use, wash off R/C Water Soaker and the Controller with faucet water and then drain all the water on the inside by tilting it in different directions. Do not shake to get rid of water.
- Before recharging your battery, make sure the rechargeable battery is completely dry.
- This product is designed for swimming pools only. Do not use the R/C Water Soaker in strong currents or in any body of water with large waves.
- Never touch or put your fingers near the propellers while they are spinning.
- Always turn on the Controller first, then the R/C Water Soaker.
- To turn off, turn R/C Water Soaker off first and then the controller. Otherwise, your R/C Water Soaker might pick up other radio waves and start moving while the transmitter is off. Should this happen, immediately turn on the Controller to bring the R/C Water Soaker under your control.
- Running your R/C Water Soaker continuously for long periods generates high heat levels. Heat causes wear and tear on the shark. To help keep heat levels down, when your R/C Water Soaker's battery dies, let it cool for at least 10 minutes before installing fresh batteries.
- If the Soaker's motor runs but does not respond to the transmitter, move closer to the Soaker and try again.
- If someone uses a CB Radio nearby, it might interfere with control of the Soaker. If this happens, move the Soaker away from the CB Radio.
- The R/C Water Soaker (metallic silver/green) - 49MHz (A) can operate at the same time as the R/C Water Soaker (metallic silver/orange) - 49 MHz (B).
- If the Soaker moves slowly and you have installed fresh batteries, check the propeller mechanisms for lint, thread, or dust.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Comments or Assistance? Please call 1-800-889-7946
Outside the U.S.A. please call 757-460-1156

SWIMWAYS CORP.

5816 Ward Ct. Virginia Beach, Virginia 23455

www.swimways.com

Items #17506, 17507



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.