

Reebok
TECHZONE

SPEED FLYER

HOW FAST DO YOU RUN?


BUTTON 2

LCD DISPLAY

BUTTON 1

LIGHT

ATHLETIC WRIST BAND

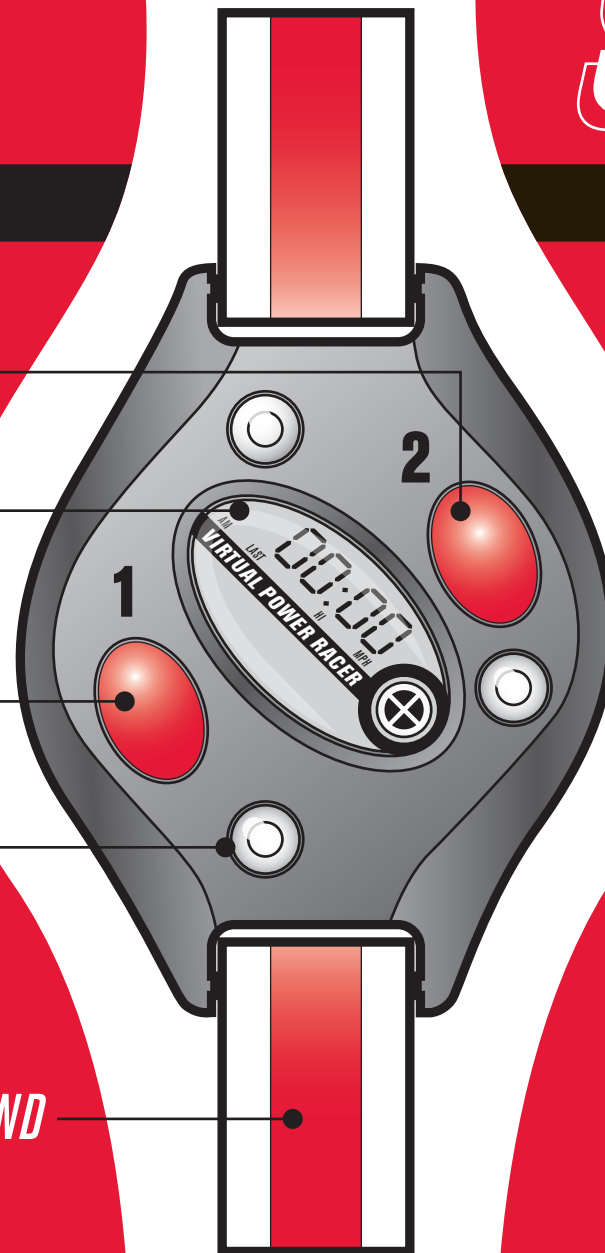

CHECKING YOUR SPEED:

1. PRESS BUTTON 1 ONCE. YOUR "LAST" MEASURED SPEED SHOWS.
2. THEN PRESS BUTTON 2 ONCE. WHEN ALL 3 LIGHTS TURN ON, START RUNNING.
3. AS YOUR RUN, ALL 3 LIGHTS FLASH & THE SPEED COUNTER MEASURES YOUR SPEED.
3. WHEN YOU STOP RUNNING, THE SPEED COUNTER AUTOMATICALLY STOPS & DISPLAYS YOUR SPEED.

CHECKING YOUR LAST & HIGHEST SPEED:

1. PRESS BUTTON 1 ONCE. YOUR "LAST" SPEED SHOWS.
2. PRESS BUTTON 1 AGAIN. YOUR "HIGH" SPEED SHOWS.

SETTING THE TIME:

1. HOLD BUTTON 2 UNTIL "AM" OR "PM" FLASHES.
2. TO ADJUST "AM" OR "PM", PRESS BUTTON 1.
3. TO ADJUST THE "HOUR", PRESS BUTTON 2 UNTIL THE "HOUR" FLASHES. PRESS BUTTON 1 TO ADJUST THE HOUR.
4. TO ADJUST THE "MINUTE", PRESS BUTTON 2 UNTIL THE "MINUTE" FLASHES. PRESS BUTTON 1 TO ADJUST THE MINUTE.

PANTONE 877 C

PANTONE BLACK

PANTONE 186 C



Model No: RF008U/RF008B

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.