

1、INSTALLING THE BATTERIES:

Install 9v dry batteries in the remote controller.

Install ALL 9v dry batteries, ensuring that the positive(+)and negative(--)battery ends are aligned with the “+”and “—” marking inside the battery compartment.

2、CHARGING THE FLYING SAUCER AND LAUNCH PLATFORM

The flying saucer comes complete with rechargeable batteries that are pre-installed inside the flying saucer. You will need to fully charge your flying saucer before flying.

IMPORTANT:

- 1). Never charge the flying saucer which is full charged, or damage to the battery may occur.
- 2). Run out of the battery before charging again for the best useful life of the battery.
- 3). Ensure the AC adaptor voltage and plug is suitable for your area.

NOTES:

While charging, the LED, on charger, will start blinking and will turn off when the flying saucer is fully charged.

3、FLYING HOVERING AND LANDING YOUR FLUING SAUCER

IMPORTAMT: ensure your flying saucer is fully charged for first time use and that you have a least 10ft(3m) of clear area.

- 1). Switch on your flying saucer
- 2).TO LAUNCH AND FLY HIGHER: pull the trigger inwards .the flying saucer has proportional control The harder you pull the trigger, the higher the fling saucer will fly.