

R/C STUNT CAR SERIES




Not suitable for children under 8
Read through this manual before use
Use under adult's guidance

NO.3993-2

FEATURES

Transmitter • Channel: 4
• Battery: 1 (9V battery)

Car • Multi-channel and multi-functional, can perform rollover and other stunts.
• Lighting.

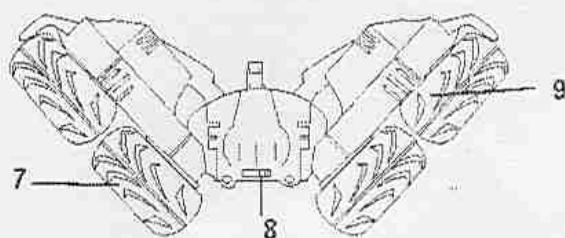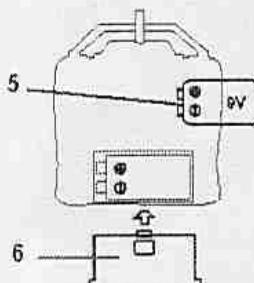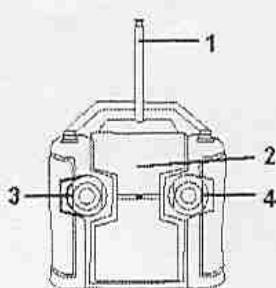

1. Antenna

3. Rocker

5.9V battery

7. Rear Wheel

9. Front Wheel

2. Power indicator light

4. Rocker

6. Battery cover


8. ON/OFF Switch

CHARGING

1. Plug the charger to an indoor 220V / 110VAC power socket.
2. Set the power switch to OFF.
3. Plug the outlet line of the charger to the charging jack underneath the car.
4. Optimum charging time is 6 hours.

CAUTIONS:

1. Charge only with our special 4.8V charger. Charging with other unspecified chargers may cause damages to the circuits in the car.
2. Do not charge for too long. (6 hours is sufficient for charging. Overcharging may shorten battery's useful life, or may even totally destroy the battery.)
3. Never try to charge batteries that are not rechargeable ones.
4. Make sure the power switch is OFF when charging, otherwise, charging won't be possible.

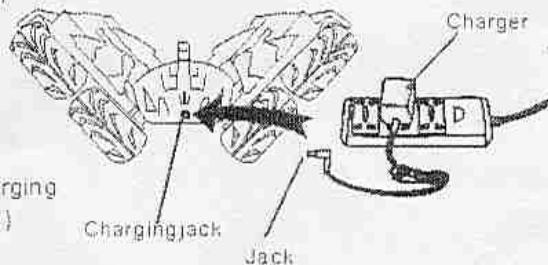


SAFETY CAUTIONS

- Never give this toy to children under 8.
- Playing caution, keep your fingers, hair, and clothes away from the wheels to avoid accidental damages.
- Do not try to catch the car by hand while it is in action.
- Keep the transmitter and the car away from any heat sources, such as electric stove, gas stove, or strong sunlight.
- Do not play with it in a dangerous place, such as on a road, or on a slope.
- Do not wet the car. Do not play with it outdoors in a rainy day.
- Do not play with it on the sands.
- Do not allow children to disassemble the transmitter or the car by themselves.
- If the car is broken during use, it should be checked by adult or repaired, when necessary, by professional technician before it can be reused.

OPERATIONS

1. Fully extend the aerial on the transmitter.
2. Use the control levers on the transmitter to control the car to run or perform various stunts.

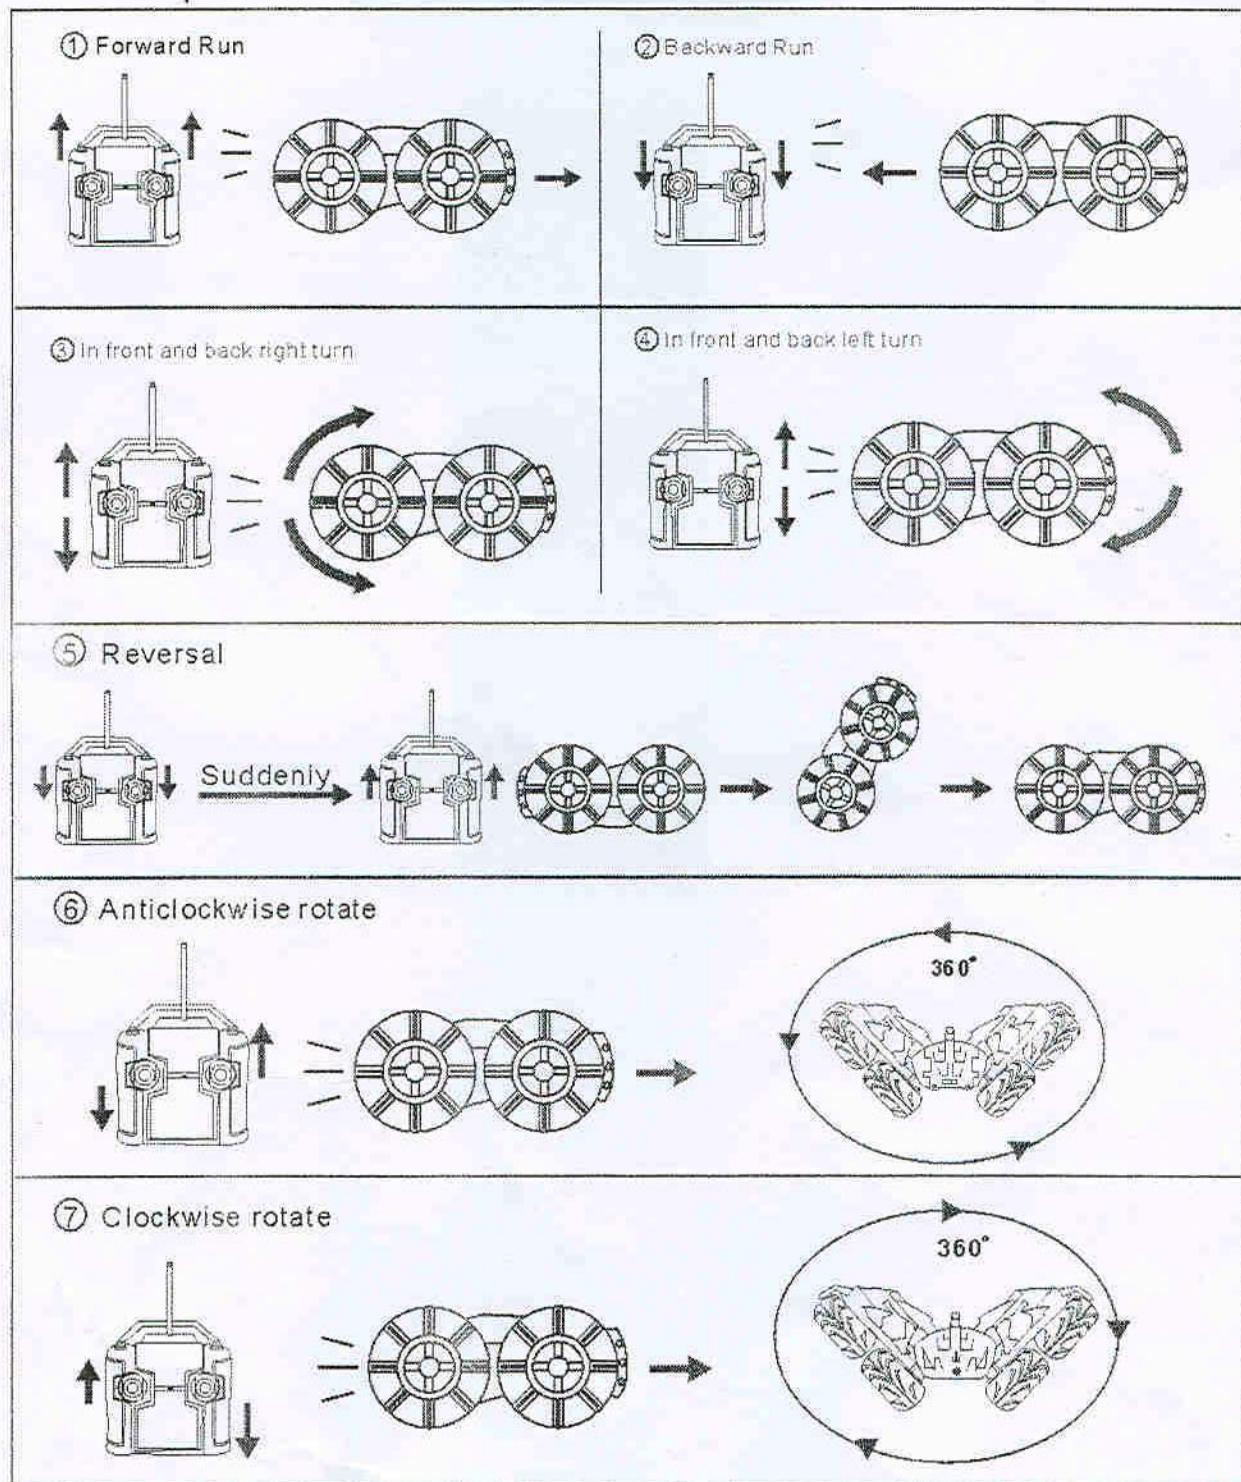

Notes: 1. If the car slows down during actions or becomes unable to rotate smoothly, it may be caused by insufficient power. Charge the battery when necessary.

2. Make sure the power switch underneath the car was turned off after finishing use. Otherwise, power of the batteries in the car may be soon consumed.

3. exhausted batteries are to be removed from the toy

4. THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.