

Label and Label location

FCC ID Label



IC label



Location – Label is placed inside the battery holder

Remote

