

300 LB. Shipping Scale DS-300

User Manual

Electronic Scale with Remote Display

Interference Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

Warning : Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Use and Care:

- 1) Place your scale on a flat surface free from heating equipment, high humidity, or extreme change.
- 2) Never submerge the scale in water or spill chemical liquids on it. Clean your scale with a dampened cloth.
- 3) Avoid excessive impact or vibration to the scale.

Before Weighing

On the Base Scale Unit :

 
- Open the battery door
- Install the 9V battery
- Change to Kg if default unit (Lb) is not appropriate by sliding the switch inside the battery compartment
- Close the battery door
- Plug in the DC adaptor as alternative power source if needed

On the Remote Display Unit :


- Open the battery door
- Install 3 AAA cell batteries
- Slide the switch of the back to Set position
- The hour field of the clock display is flashing, use the UP or DN key to adjust the hour. Finished, press the TIME key to confirm. The minute field is then flashing. Repeat as before to complete setting the time and date.
- Slide the switch of the back to Normal position

Weighing

- Press the WEIGHT button once to enter the weight mode
- The display will show as below :



 - Kick on the center of the Scale Base. After 2~3 seconds, the display will show as below :



- Put the object to weight on the scale and after around 12~13 seconds, a stable weight reading can be shown on the remote display.

Standby

If no weighting operation for 2 minutes or the TIME button is pressed, the remote display will enter standby mode displaying the clock to save power.

Battery Instructions

Two battery low indicators on the LCD - **RDU** and **BASE** will be flashing to indicate either the battery of remote display or base scale is low. Replace the batteries as soon as possible and make sure the polarity is correct when installing new batteries.

Warranty

J Quality International Corporation
127 E. St. Joseph Street, #103 Arcadia
CA 91006 USA

Phone : 626-821-1390