

What's included

1:32 Car
Transmitter

User's Guide

battery notes

- Dispose of old batteries promptly and properly. Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the toy for several days, remove the batteries. Batteries can leak chemicals that can damage electronic parts.
- Batteries purchased for use in this toy may pose hazard to children. Please check the safety notice supplied with batteries before use.


Note: Actual product may vary from the images found in this document. Images not to scale.

installing batteries

To power your car, you will need one 9V battery for the transmitter and two AA batteries for the car

in the transmitter

- Unscrew and remove the cover
- Place the 9 volt Battery in the compartment as indicated by the polarity symbols (+ and -).

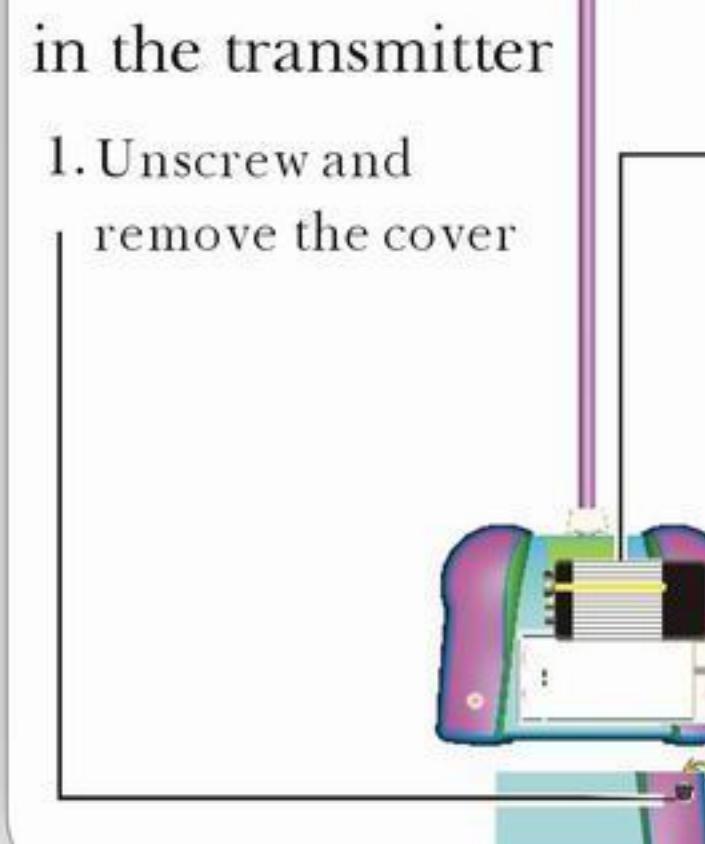

NOTE When the Transmitter's range decreases, replace its Battery.


in the car

- Remove the battery compartment cover. Replace When finished.
- Install two AA batteries in the car's battery compartment as indicated by the polarity symbols (+ and -) marked inside.

NOTE When the car's operation becomes erratic, replace the batteries.

driving your car

- Set ON/OFF on the bottom of the car to ON.
- Set ON/OFF on the transmitter to ON Use the transmitter's control buttons to guide the car.
- Turn the car and transmitter off when You are finished driving
- Use the control buttons to steer the car in the directions shown in the illustration to the right.

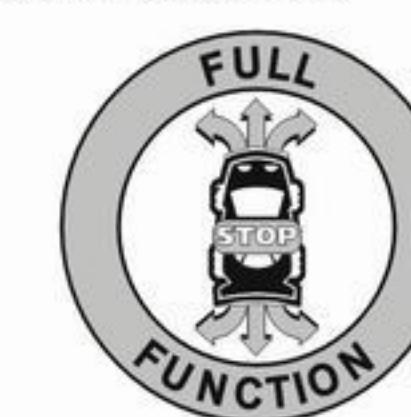

Wheel Alignment Control

ON/OFF Switch

wheel alignment
If the car does not drive in a straight line when you release the right control button, adjust the wheel alignment control on the bottom of the car. Turn the control toward L if the car is pulling to the right or toward R if the car is pulling to the left.

NOTE When the transmitter is turned ON, the LED on the transmitter will light up.

care and use

- This car is recommended for children ages 4 and up.
- Do not play with your vehicle in the street.
- Avoid high-impact collisions with people and objects.
- Do not drop your car.
- If the car gets stuck under an object, immediately release both controls on the transmitter. Then, retrieve the vehicle.
- Use and store your car only in room temperature environments.
- Keep the car away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.
- Driving your car for long periods of time can generate a high heat level, which causes wear and tear on the motor. To help keep heat levels down, when your vehicle's battery power dies, let it cool for at least 10 minutes before installing new batteries.
- Do not touch the motor or batteries immediately after using the car, as they may become hot during use.
- If your car's motor runs, but does not respond to the transmitter, move closer to the vehicle and try again.
- If someone uses a CB nearby, it might interfere with the control of your car. If this happens, move the vehicle away from the CB.
- You cannot operate your car near devices with transmitters that use the same frequency as your vehicle (27 MHz or 49 MHz). Check the box to see which frequency you have.
- Do not drive your car through water, snow or sand.

the FCC wants you to know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Product	
Model	
Responsible Party	
Phone	

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.