

## USER MANUAL

1. Please operate this R/C car under adult's supervision.
2. Please stop playing once there is any thunder to avoid danger.
3. Please take care to avoid any impact to glass or furniture once playing indoors.
4. Please disassembly or repair the product only by professional engineer.
5. Please charge the new rechargeable battery under 220V for 8-10 hours to ensure good performance.
6. Please insert the fully-charged battery into battery apartment according to instruction, close the cover, turn the switch on.
7. Insert one 9V battery (not included) into remoter controller, install the antenna, and turn the switch on.
8. Clean out any snag before playing.
9. Please only charge the rechargeable battery only after battery has no any power.
10. Please change a new battery if find any damage on battery appearance.
11. Rechargeable battery dimension: 10X6X1.8CM; output: DC10V.
12. Battery (for remote controller) dimension: 4.8X2.6X1.7CM; output: DC9V.

### NOTE:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.