

RADIO CONTROL CAR SERIES

USE DIRECTIONS:

► Install Battery In The Transmitter

Open the battery cover underneath the chassis of the car. Load in one PV stack battery as directed by the direction marks, and replace the cover.

► Install Battery In The Car

Open the battery cover underneath the chassis of the car. Firmly set the chargihg plug of the rechargeable battery to the power socket underneath the chassis, and replace the battery cover. There is also a spare battery box, whose use is the same as that of rechargeable battery. Both AA rechargeable battery and normal battery can be used for the spare battery box.

► Switch Operation

There is a power switch and a horn switch designed underneath the chassis. Turn the corresponding switch to ON position for operation.

► Action Control

Please use the controller to control various car actions as marked on the controller: Turn the action knob for the car to turn left or turn right, or use the lever to operate the car to run forward, backward or speed up.

► Music Sound Control

If the horn switch underneath the chassis is set to ON position, the horn on the car can generate Music sound. Turn the switch to OFF position to turn off sound effect.

► Antenna Operation

The longer the antenna is extended, the wider the control range of the car will become.

Attention: The rechargeable battery for the RC car has not been charged. Please charge for 4-6 hours before use.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.