

REMOTE CONTROL CAR SERIES

USE WAY:

► FIX Emitter BATTERY

OPEN THE BATTERY LID LET IN A 9V LAMINA BATTERY BY THE SHOW AND BATTERY POLARITY DIRECTION IDENTICAL AND COVER THE BATTERY LID.

► FIX BODYWORK BATTERY

OPEN THE BOTTOM OF THE CAR BATTERY LID(BATTERY FIXUP KNOB) ENCASE BATTERY BY THE BATTERY ARROW SHOW AND BATTERY BOX ARROW DIRECTION IDENTICAL. COVER THE BATTERY LID(OR TURN KNOB FASTENING BATTERY).

► ON-OFF OPERATE

LET THE CAR AND Emitter IN THE ON PLACE IT MAY OPERATE WHEN RED PILOT LAMP GIVE LIGHT.

► DIRECTION CONTROL

STIR THE Emitter LEFT KNOB PUSH AHEAD THAT THE CAR MAKE FOR , PUSH BACKWARDS IT REcede. LET GO TI WILL STOP AND AWAIT ORDERS.WHEN THE CAR STEER AHEAD OR BACKWARDS.THE Emitter'S KNOB WILL STIR TURN LEFT OR TURN RIGHT,IT CAN MAKE THE CAR TURN LEFT OR RIGHT SWERVE IN THE STEER.

► ADJUST DIRECTION BALANCE

ADJUST THE BOTTOM OF THE CAR'S DIRECTION ADJUST BUTTON,IF CAR STEER FRONT AND BACK STRAIGHT EXCURSION THAT ADJUST THE BEELINE.

► ANTENNAE OPERATE

IF ELONGATE THE STAFF'S ANTENNAE THAT REMOTE CONTROL DISTANCE MORE FAR.

► CHARGING TIME

REMOTE CONTROL CAR ADD-ONS CHARGE BATTERY IF NO CHARGE THAT MUST CHARGE IT 4-6 HOURS BEFOR USE.

► CHARGING DIRECTIONS

PLEASE SET THE POWER SWITCH UNDERNEATH THE CAR TO OFF WHEN CHARGING.

► CAUTION

IF THE SET DOES NOT INCLUDE RECHARGEABLE BATTERIES, YOU CAN USE THE DC5.8V CHARGING BASE UNDERNEATH THE CAR FOR CHARGING. (TO CHARGE, PLEASE USE RECHARGEABLE BATTERIES)

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS
EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY
TO OPERATE THE EQUIPMENT.