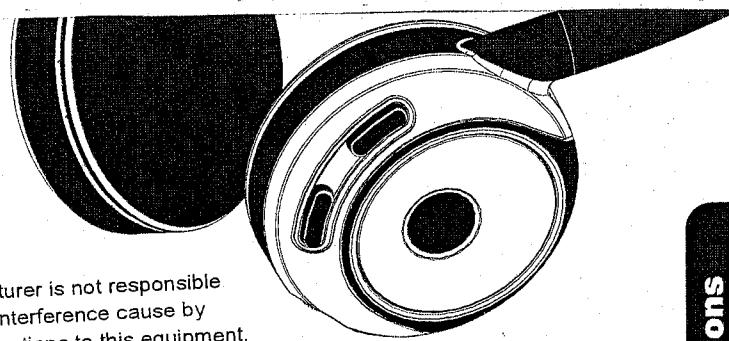


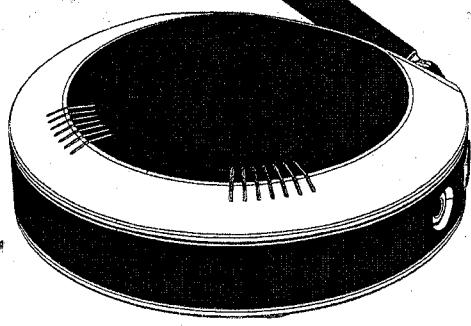
17 JUN 2005

No 4 2469



Note: The manufacturer is not responsible for any radio or TV interference cause by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.

### Wireless Headphones



1

Instructions

**Getting Started****Introduction****Plug In**

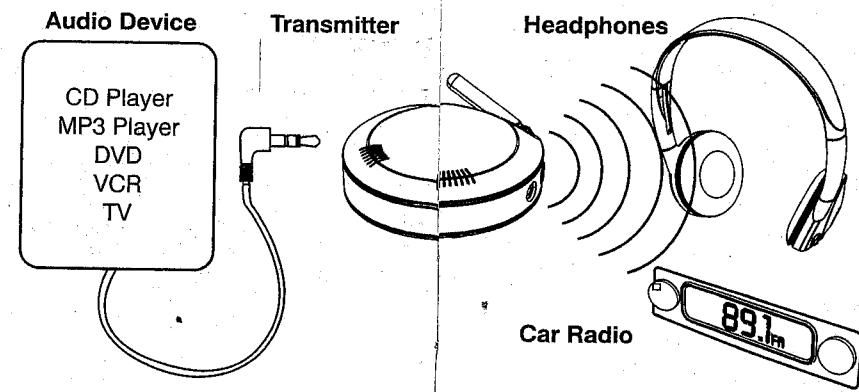
Plug in any audio device to the Transmitter.

**Transmit**

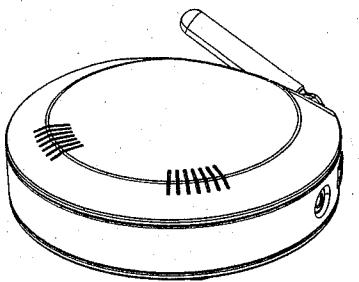
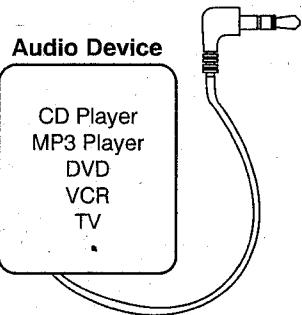
Transmitter uses FM frequencies to wirelessly broadcast up to 20 ft.

**Tune In**

Tune into the Transmitter with the Headphones, Car radio or any radio.



Read the following instructions for getting started.

**Transmitter****Plug In / Transmit****Audio Device**

CD Player  
MP3 Player  
DVD  
VCR  
TV

**Using the Transmitter**

BAND2 • BAND1 • OFF Slide band switch for:  
Power

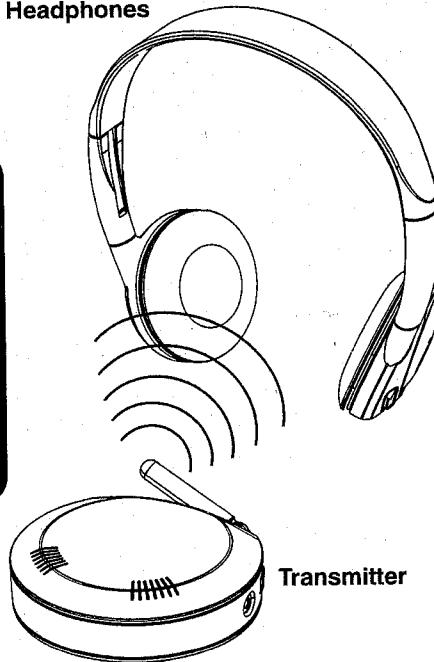


Plug Audio cord into jack



Connect Audio cord to Audio  
device: MP3 player, DVD, etc.

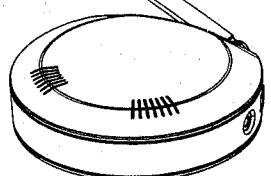
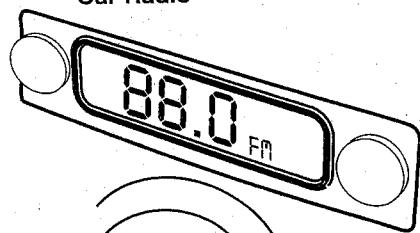
Music Device

**Headphones****Tuning In****Using the Headphones**

Rotate the Volume dial for power

 
Press the Reset button

Press the Scan button to tune into the Wireless Transmitter

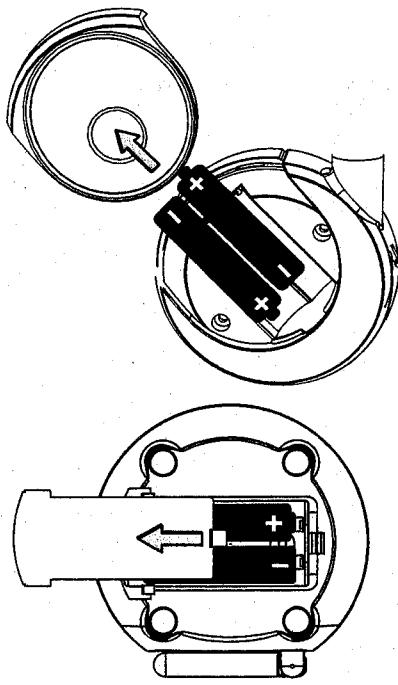
**Tuning In****Car Radio****Transmitter****Using your Car Radio**

You can tune in with your Car radio or any Radio.

Tune your radio to:  
Band

**Headphone FM Scan Radio**

You can use the Headphones as a FM Scan Radio too!  
Press the Reset button

**Batteries**

Press Scan to tune into desired station

Rotate the Volume dial for desired volume

**Inserting the Batteries**

- Remove the battery door and insert 2 AA batteries for the headphones and transmitter