

Operating manual

SOUND STREAM+ TURNTABLE

HX-TT700



IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions- The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14.



- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- a. Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
 - b. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
15. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

16. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.

17. The use of the equipment in moderate climate.

18. WARNING: Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.



19.  Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU.

-To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

-To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

20. Minimum distance around the apparatus for sufficient ventilation is 1.9 inches (5 cm) and should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains, etc.

21. No naked flame sources, such as lighted candles, should be placed on the apparatus

22. The symbol with  indicate AC voltage.

23. The symbol with  indicate DC voltage.



24.  Class II equipment.



25.  For indoor use only.



26.  Polarity of d.c. power connector.

27. WARNING: Only the accessories (such as external power supply) provided by the manufacturer can be used with the product.

28. This equipment is not intended to be used on soft supports (such as bedding, blankets, etc.).

29. The adaptor is used as disconnect device, the socket-outlet shall be easily accessible.



30.  Efficiency marking



UKCA (UK Conformity Assessed) marking



CE marking



Technical regulations of the Customs Union conformity certificates

Precautions

Safety Information-caution:

1. In order to shut off power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time, such as during a vacation.
2. Use of controls, adjustments and performance of procedures other than those specified herein may result in hazardous radiation exposure.
3. To prevent electric shock, match wide blade of plug to wide slot, fully insert.
4. If this product is experience problems during operation, contact qualified service centers, and do not use the product in defective states.

Safety Precautions

WARNING:

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION:

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposures.

CAUTION**RISK OF ELECTRIC SHOCKS - DO NOT OPEN!**

To reduce the risk of electric shock, do not remove cover or back.

No user serviceable parts inside. Refer servicing to qualified service personnel.



The light flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

 
(See markings on the bottom of the unit.)

Before Use

1. Choose unit installation location carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, cold or moisture. Keep away from sources that hum, such as transformers or motors.
2. Do not open the cabinet as this may result in damage to the circuitry or electrical shock. If a foreign object should get into the set, contact Customer Service.


3. Be sure not to handle record with dirty fingers. Never play a record that has a crack on the surface.
4. When removing the power plug from the wall outlet, always pull directly on the plug, never pull the cord.
5. To protect the stylus, don't forget to put on the white protective needle cover after use.
6. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
7. In order to shut off the power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time, such as a vacation.
8. Keep this manual in a safe place for future reference.

Top view:

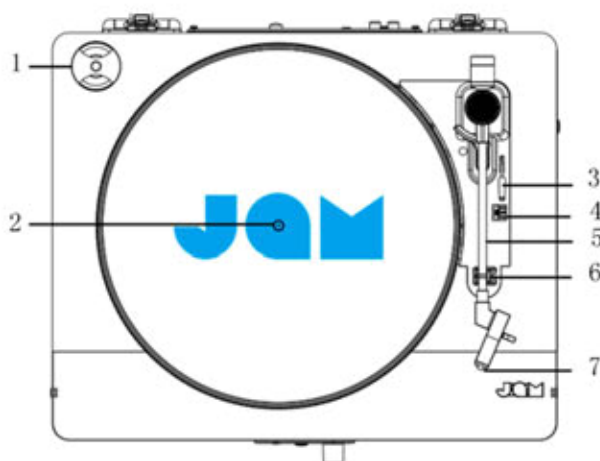


#	ITEM	DESCRIPTION
1	45RPM adaptor	Snap into a 45 RPM record so that it fits the spindle.
2	Spindle	Place a record onto the spindle to play.
3	Tone arm lifter	Push forward and pull back to raise and lower tone arm.
4	RPM selector switch	Turn to select the record type :33,45,78.
5	Tone arm	Holds the stylus that produces sound from the record.
6	Tone arm rest holder	Place the tone arm on this holder when not in use.
7	Stylus	Generates sound from a playing record.

 Front view:

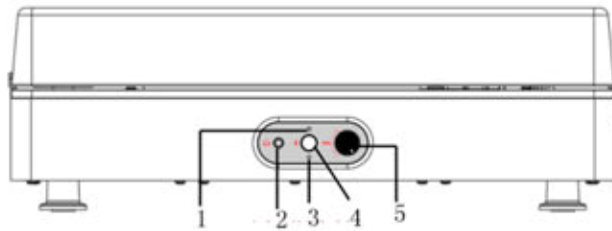

#	ITEM	DESCRIPTION
1	Bluetooth indicator	Blinking blue indicates Bluetooth is in pairing mode. Solid blue indicates Bluetooth is connected.
2	Headphone jack	Plug headphone into this jack.
3	Power indicator	Power on the unit, the red indicator is on. Power off the unit, the indicator is turn off.
4	Bluetooth button	When the power on, press this button will open the Bluetooth transmit function. When you want to turn off the Bluetooth transmit function, please long press this button until the blue indicator turn off.
5	Volume knob	Turn this knob to adjust the volume.

 Rear view:

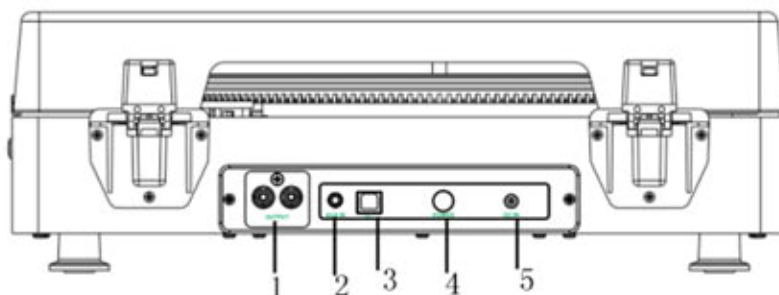

#	ITEM	DESCRIPTION
1	RCA output socket	Plug the included RCA audio cable into these jack. Match red to red and white to white.
2	Aux in socket	Plug the AUX IN cable into these socket.
3	USB socket	Plug the USB cable into the socket.
4	Power button	Press this button to power on or off the unit.
5	DC IN jack	Plug the DC IN power cord into this jack and into a power outlet.

Powering Your Turntable

1. You can power the turntable with the supplied AC/DC adapter. Check the rating plate on the AC/DC adapter with your mains power voltage before powering the turntable on.

The AC/DC adapter is 100-240V~50/60Hz input, 7.5V  1.0A output.

Note: to disconnect the device from the mains pull out the mains plug out of the wall outlet.

There are 4 types plug for your selection. Please choose the suitable one according to the household outlet. Shown as following:



2. Press the POWER button to turn on the unit.

The main unit will switch to economic standby mode when the speaker is idle for approximately 15 minutes. Once the unit turns into standby mode, Press POWER button to turn off the unit firstly and then press POWER button again to turn on the unit.

Using your turntable

Note:

- We strongly recommended that you operate your turntable only from the type of power source indicated on the marking label.
- To prevent interference, avoid bundling the audio signal cables together with the AC power cord.
- The top cover helps prevent dust from settling on your turntable. We recommend that you use the top cover when you're playing records or when you're not using your turntable.

Playing a record

1. Press the power button on the back to turn on the turntable.
2. Gently open the top cover.

Note: Be careful not to pinch your finger when opening or closing the top cover.

3. Place a vinyl record on the turntable.

Note: When playing a 45RPM record, use the included 45 RPM adaptor.

4. Select the appropriate speed by adjust the RPM selector switch to 33, 45 or 78.
5. Remove the tone arm-rest lock catch to release the tone arm.
6. Remove the white protective needle cover. Keep this in a safe place, you'll need to put it back when you're finished.



7. Push the tone arm lifter forward to raise the tone arm.
8. Gently push the tone arm to the left over the turntable.
9. Push the tone arm lifter backward to lower the tone arm so that the stylus touches the record and starts to play.
10. To pause or stop playing, push the tone arm lifter forward to raise the tone arm.

Note: When the end of the record is reached, the tone arm and rotation stop.

11. When playing is completed, push the tone arm lifter forward to raise the tone arm, then move the arm back to the tone arm rest. Push the tone arm lifter down to lower the tone arm.

Note:

Closing the top cover helps prevent dust from settling on the turntable.

Always re-lock the tone arm clip before transporting your turntable.

Do not place anything on top of the turntable cover, especially while playing a record.

Listening to music using Bluetooth speakers

1. Turn the switch to your record type, 33, 45 or 78.
2. Put your Bluetooth speaker in pairing mode.

Note: Make sure that Bluetooth is off on any devices in the vicinity that will automatically connect to your speaker.

3. On the turntable, press the Bluetooth button to turn the Bluetooth transmitter on.

While searching, the Bluetooth indicator flashes blue.

When connected successfully, the Bluetooth indicator lights solid, and your turntable sounds a tone.

Note:

If the Bluetooth speaker is not connected for a long time, please press and hold the Bluetooth button to turn off the Bluetooth transmitting function, and then press the Bluetooth button to open it again.

The effective distance between your Bluetooth device and your turntable is 33ft (10m).

Make sure that you remove any obstacle between your Bluetooth speaker and your turntable to make sure that the is clear.

After the Bluetooth connection is successful, the turntable will be silent.

4. To disconnect the Bluetooth connection, press and hold the Bluetooth button until the blue indicator turn off.

Listening to music through the RCA jacks.

1. Plug the red and white connectors on the included RCA cable into the jack on the back of your turntable, make sure red to red and white to white.

2. Plug the other end of the cable into your speakers, red to right speaker and white to left speaker.

Note:

When RCA mode, the turntable speaker and external speaker will work together.

The volume knob on the turntable can't control external speaker.

If you want to turn off the volume on turntable, just turn the volume knob to minimize the volume.

Listening to music through the AUX in

An external (auxiliary) audio source can be connected to this unit and heard through the Bluetooth transmitting or Line out function.

1. Plug one end of the AUX cable (not included) into the AUX IN socket on the back of the unit.
2. Plug the other end of the cable into the headphone .
3. Turn on the external audio device and press PLAY to start playing the music.
4. Adjust the volume on the external audio device.

Note: When you insert the AUX cable, turntable will stop.

Use the headphone

1. Connect a set of headphone (not included) on the Earphone socket on the front panel of the unit.
2. Put on the headphone and slowly increase the volume until you can hear it clearly and comfortably without distortion.

NOTE: Never put on the headphone till you have plugged in the headphone plug and turn down the volume level.

USB TO PC Recording

To properly record your vinyl to MP3 via computer, use the included USB Output Cable and Instructional CD Software. Connect one end of the USB cable to the turntable (USB jack on the back of the unit) and the other end into your computer. Then connect the AC/DC adaptor into DC IN socket, and turn the unit on.

To install and use the software on your computer, select the proper Mac or PC install files, then follow the prompts provided on the Instructional CD. For the most up to date manuals, software, instructional details, troubleshooting or other downloadable content, please go to <http://audacityteam.org>

TROUBLESHOOTING GUIDE

In case of trouble with the unit, please look through below and see if you can solve the problem by yourself before calling your dealer.

	Problem	Cause	Solution
THE WHOLE UNIT	Power does not come on when the power switch is pressed.	Unit is unplugged.	Plugs the DC plug of AC/DC adapter into the socket.
	No sound from the speakers.	The volume is turned down to MIN; The working input does not match the source input.	Adjust the volume; Reselect a source.
	The sound is noisy.	The unit is too close to a TV set or another similar appliance.	Turn off the TV or other appliance, and re-locate the unit.
	The unit has no response or could not reset.	External factors such as ESD (Electro-static discharge) affect the unit.	Remove the power cord and all power supply devices, then re-plug in the unit after one minute.
PHONO PLAYER	The sound is noisy when playing the record.	The stylus is not placed in the middle center.	Replace the stylus which is placed in the middle center.
	The sound is noisy when used for a period of time.	The stylus is damaged.	Please change a new stylus.
BLUETOOTH	Unable to pair with a Bluetooth device.	The unit is not switch to Bluetooth transmitting mode. Your home Bluetooth amplifier device doesn't turn on. Your device is too far from the unit or there're some obstacle between your device and the unit.	Ensure the unit is turned to Bluetooth paired mode. Turn on your home Bluetooth amplifier device Move your Bluetooth device closer to unit.
		The Bluetooth pairing is not successful.	Turn off your Bluetooth device and unit then power them both back on. Repair the unit and device again.

SPECIFICATIONS

Power Source:

AC/DC Adaptor:

Manufacturer: DONG GUAN HP-POWER TECHNOLOGY, LIMITED.

91441900MA4UTJ6T79

Room 103, Building 1, No.9 Hegan Road, Tangxia Town, 523710, Dongguan, Guangdong, PEOPLE'S REPUBLIC OF CHINA

Model: HP12D-0751000-AI

Input: 100-240 V~ 50/60 Hz, 0.5A

Output: 7.5V $\overline{\overline{=}}$ 1.0A 7.5W

Average active efficiency: 80.51%

Efficiency at low load (10%): N/A

No-load power consumption: 0.094W

Internet address: www.XXXXXX.com (TBA)

Power consumption.....9W

Dimensions (W x D x H).....390 x 346x 130 mm (approx)

RECORD PLAYER section

Motor.....DC servo motor

Drive System.....Belt Drive

Speeds.....Off/33-1/3 rpm, 45 rpm, 78rpm

S/N Ratio.....55 Db (AUX-IN)

RCA OUT.....200-280 mV (5 cm/sec at 1 KHz-10dB)

Stylus.....M02-M208-165

Cartridge Type.....Ceramic Stereo Cartridge

BLUETOOTH TRANSMIT

Bluetooth Version.....Bluetooth V5.1

Bluetooth Profiles.....A2DP, AVRCP

Bluetooth Frequency range.....2.402GHz-2.480GHz

Operating Distance.....10meters (33ft.)

The maximum RF Power:..... 2.838mW

USB

Type.....USB series B connector

Full-Speed.....USB 2.0 full speed

Hereby, we declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

The full test of the EU declaration of conformity is available at the following internet address: www.XXXXXX.com (TBA)

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by [licensee name] is under license. Other trademarks and trade names are those of their respective owners.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

IC Statement

This device complies with RSS247 of Industry Canada. Cet appareil se conforme à RSS247 de Canada d'Industrie. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

L'appareil ne doit pas être localisé ou fonctionner avec d'autres antennes ou transmetteurs.

This device complies with IC radiation exposure limits set forth for an uncontrolled environment.

Cet appareil est conforme aux limites d'exposition aux rayonnements de la IC établies pour un incontrôlé environnement.

The device should be installed and operated with a minimum distance of 20cm between the radiator and your body.

L'appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.