



VEHICLE

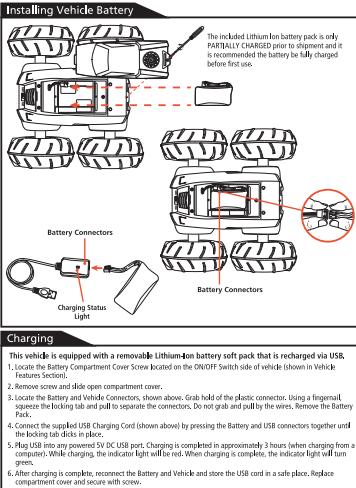

PROPER USE

Precautions and Care

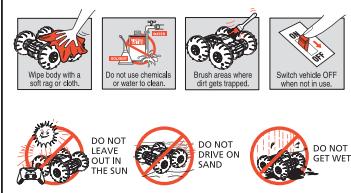

CAUTION!

Do not recharge Battery Pack if it is hot or warm to the touch. Allow Battery to cool before recharging. Recharging a hot or warm Battery will shorten the life of the unit.
 Do not recharge the Battery if it appears to be damaged or leaking.
 Do not use included Battery charging cord for anything other than the intended purpose.
 Do not dispose batteries in fire. Leakage, explosion and personal injury may occur.
 Do not attempt to disassemble Battery soft pack or Battery Charging Cord.
 Always remove Batteries from transmitter when not in use.
 Only an adult should charge Batteries.
 Always remove Battery Pack from Battery Compartment when not in use.
 Dispose of Lithium-Ion Battery Pack properly.

SUPPORT

Trouble Shooting

Problem - Vehicle does not move or moves slowly.

- Has the rechargeable internal Battery been fully charged?
- Make certain the vehicle is in the correct position. You may need to re-sync the transmitter and vehicle. Refer to sync instructions in Transmitter Sync section.
- Are the (+) and (-) markings on the alkaline batteries in the same position as the (+) and (-) markings in the Transmitter Battery Compartment?
- Make certain that the vehicle ON/OFF switch is in the "ON" position.
- Has the battery soft pack been installed in the vehicle?
- Are the metal Contact tabs touching, rusty or dirty in the transmitter?

Problem - Vehicle moves by itself or exhibits reduced range from the transmitter.

- Make certain there is no outside radio interference in your area. The best way to test this is to take the vehicle as far away from radio towers, electrical lines or tall buildings as possible to ensure no further radio interference will occur.

FCC CAUTION:

Change or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.




OWNER'S MANUAL

Please read and understand all precautions prior to use.

Contact Motor Dayz Customer Service at:

1-845-952-3900
 Monday – Friday
 8:00am to 5:00pm Eastern Time
 Motor Dayz Customer Service
 5000 12th Street
 Commerce Township, MI 48390
<http://www.motordayz.com>


WHAT'S INCLUDED

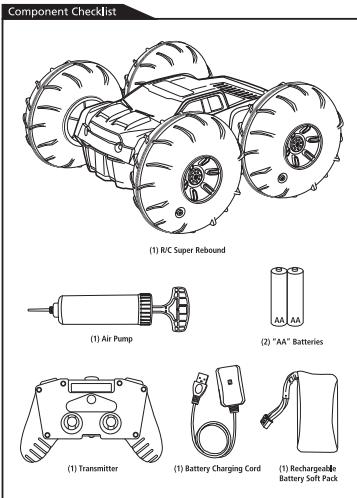

TRANSMITTER

Battery Installation

1. Remove the screw to open the Battery Compartment Cover. Pull back on the tab and slide in the direction indicated by the arrow.
2. Insert 2 "AA" size batteries. Make sure all positive (+) and negative (-) markings on the batteries match up to the ones inside the Battery Compartment.
3. Replace the Battery Compartment Cover and replace the screw.

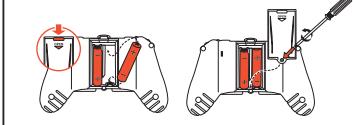

Syncing

This transmitter is equipped with 2.4GHz technology which allows up to 6 vehicles to be used at the same time.

Before first use and after any time the batteries are replaced, the transmitter must be paired to the vehicle.

To sync transmitter and vehicle, follow the steps below:

1. Correctly install batteries in the transmitter.
2. Place vehicle upside down, and turn Vehicle ON/OFF switch to the ON position. The vehicle is only in sync mode for 30 seconds.
3. Immediately press and hold the Forward/Reverse joystick on the transmitter. Keep holding until wheels move (up to 30 sec.).

TRANSMITTER

Functions



How to Drive

FORWARD/REVERSE DRIVING AND FLIPS

FORWARD DRIVING Push BOTH joysticks forward for forward driving. **FLIPS** Push both joysticks forward to begin forward driving, then quickly pull back both joysticks to flip the vehicle over.

TURNING


RIGHT TURNING Push LEFT joystick forward to turn right while driving forward. Pull LEFT joystick back to turn right in reverse. **LEFT TURNING** Push RIGHT joystick forward to turn left while driving forward. Pull RIGHT joystick back to turn left in reverse.

SPINS

360° SPINS - Clockwise Push joysticks as shown for Clockwise Spinning. **360° SPINS - Counter-Clockwise** Push joysticks as shown for Counter-Clockwise Spinning.

VEHICLE

Features

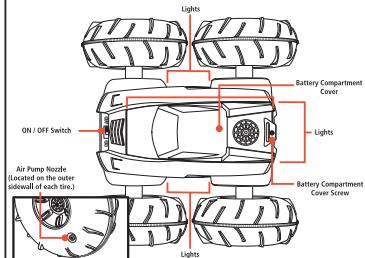

Inflating the Tires

To properly perform flips, ensure the tires are fully inflated. A properly inflated tire should be firm, but not hard.

1. Locate the Air Pump Nozzle on the sidewall of the tires.
2. Insert the tip of the Air Pump into the tire nozzle.
3. Pull the Air Pump handle out fully, then push it back in.
4. Repeat until tires are fully inflated and firm to the touch.
5. Avoid over inflating tires. If tires are over-inflated, to slightly deflate the tire.

CAUTION:

Be certain to keep needle straight when inflating. Do not bend needle. Do not use pump if needle is bent. Only use pump for its intended purpose.

