

Transmitter


Battery Installation

5
1. Remove the screw to open the Battery Compartment Cover.


2. Insert 2 "AA" size batteries. Make sure the positive (+) and negative (-) markings on the batteries match up to the ones inside the Battery Compartment.

3. Replace the Battery Compartment Cover and replace the screw.

Note: When replacing Transmitter batteries:
Do not mix old and new batteries.
Do not mix alkaline, standard or rechargeable batteries.
Use alkaline batteries only.

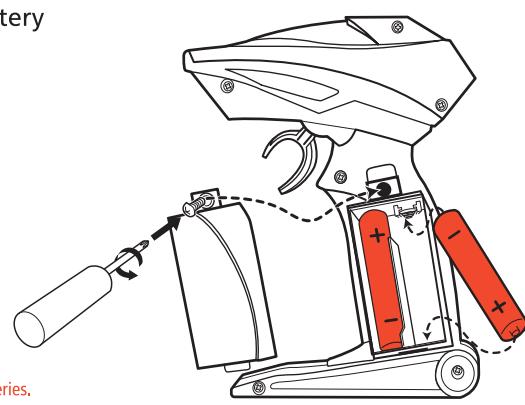

Features and Functions

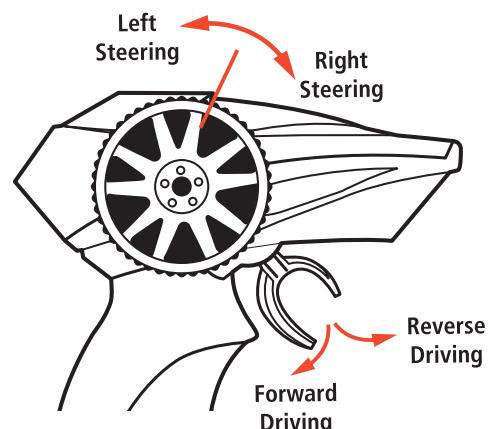

This transmitter is equipped with 2.4GHz technology which allows up to 6 vehicles to be raced at the same time.

Before first use and after any time the batteries are replaced, the transmitter must be paired to the vehicle.

To sync transmitter and vehicle, follow the steps below:

1. Correctly install batteries in the transmitter.
2. Place vehicle upside down, and turn Vehicle ON/OFF switch to the ON position. The Vehicle is only in sync mode for 30 seconds.
3. Immediately pull and hold the Forward/Reverse trigger on the transmitter. Keep holding until wheels move (up to 30 sec.).



OWNER'S MANUAL

Please read and understand all precautions prior to use.


Contact Motor Dayz Customer Service at:

1-248-863-3000
Monday – Friday
8:00am to 5:00pm Eastern Time

Motor Dayz Customer Service
3000 N. Pontiac Trail
Commerce Township, MI 48390
<http://www.motordayz.com/>

Proper Use

Precautions and Care

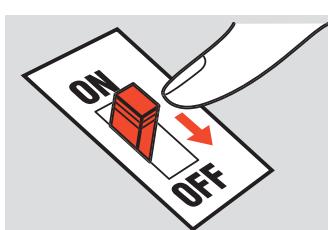

Switch vehicle OFF when not in use.



Brush areas where dirt gets trapped.



Wipe body with a soft rag or tact cloth.



Do not use chemicals or water to clean.

Support

Trouble Shooting & Support

Problem - Vehicle does not move or moves slowly.

- Make certain there are fresh batteries in the transmitter and that they have been installed in the correct position. You may need to re-sync the transmitter and vehicle. Refer to sync instructions in section 5.
- Are the (+) and (-) markings on the batteries in the same position as the (+) and (-) markings in the Transmitter Battery Compartment?
- Are the metal contact tabs touching, rusty or dirty in the transmitter?
- Has the vehicle been fully charged?
- Make certain that the vehicle ON/OFF switch is in the "ON" position.

Problem - Vehicle moves by itself or exhibits reduced range from the transmitter.

- Make certain there are no outside radio interference in your area. The best way to test this is to take the vehicle as far away from radio towers, electrical lines or tall buildings as possible to ensure no further radio interference will occur.

Always remove Batteries from transmitter when not in use.

Do not dispose batteries in fire. Leakage, explosion and personal injury may occur.

Do not attempt jumps or tricks with this vehicle.

Do not attempt to remove internal battery.

Do not use included USB cord for anything other than its intended purpose.

Always keep USB cord stored when not in use.

Adult supervision recommended.

FCC CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MotorDayz

1

Table of Contents

Section 1: Table of Contents

Section 2: Component Checklist

Section 3: Vehicle Features & Functions

Section 4: Charging the Battery

Section 5: Transmitter Battery Installation
Transmitter Features & Functions

Section 6: Proper Use
Precautions & Care

Section 7: Trouble Shooting & Support

2

MotorDayz


Component Checklist

- **(1) R/C Vehicle With USB Cord**
- **(1) Transmitter**
- **(2) AA Batteries**

Vehicle

3

Features and Functions

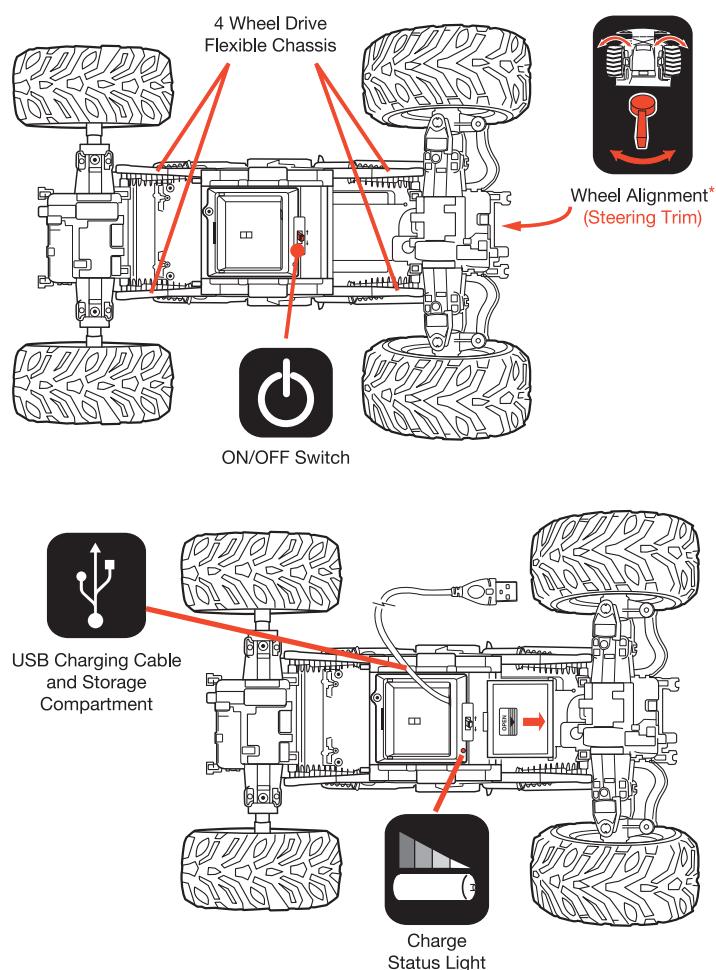

The ON/OFF Switch controls the main power to the vehicle. To save battery life, always remember to put switch in the OFF position when not in use.

The 4 Wheel Drive Flexible Chassis gives the vehicle the ability to climb steep angles. Each wheel has independent suspension during forward and reverse drive. The vehicle also has elongated shocks and soft tires that help grip the ground.


** Steering Trim Dial is found in between front wheels on the top side of the chassis, under the vehicle body. If vehicle pulls to the left or right during forward driving the Steering Trim may need to be adjusted.*

4


Vehicle

Charging the Battery

This vehicle is equipped with an internal Lithium-Ion battery that is recharged via USB. **ON/OFF Switch must be in the OFF position prior to charging.**

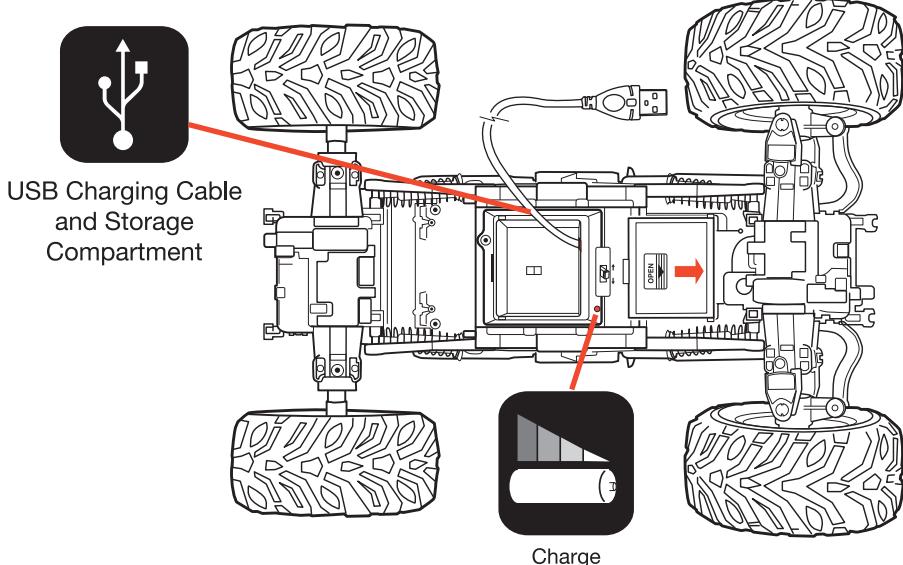

1. Locate the ON/OFF switch and USB cord on the under-side of the vehicle.
2. Turn the ON/OFF switch to the "OFF" position.
3. Slide open Storage Compartment cover.
4. Remove USB cable from the Storage Compartment. (Use care when extending cord as it is attached to inside internal battery). Cord can be plugged into any 5V DC computer or 5V DC USB outlet adapter (not included).

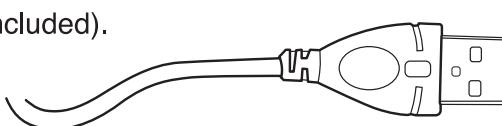

5. While charging, the LED under the vehicle will be on. Once fully charged the LED will turn off. Charging is completed in approximately 1 hours. Return cord and secure storage lid before operating the vehicle.