

## < Operation description for FS-L1903C >

Connect DVI or VGA input signal and AC power cord to the FS-L1903C

Powered on with On/Off switch, then Power is supplied to SMPS.

SMPS supply LED Driver power and 5VSTB power to Led Driver and main board.

Scaler(PW338x) controls all I/O function and outputs generated signal to the LCD Panel, then LCD panel displays the image.

