

## < Operation description for FS-S5501F >

Connect HDMI input signal and AC power cord to the FS-S5501F.

Powered on with On/Off switch, then Power is supplied to SMPS.

SMPS supply inverter power and standby power to inverter and main board.

Scaler(PW338x) controls all I/O function and outputs generated signal to the LCD Panel, then LCD panel displays the image.

