


REMOTE CONTROL LIGHT


1. Remote control unit – to change the battery, slide off the back cover [Fig. A] and replace with a new battery [23A 12V].
 The on/off button is underneath the front cover. Slide open the front cover to press the on/off button.
 To turn on the remote light press the remote button and hold for one second.

FIG. A

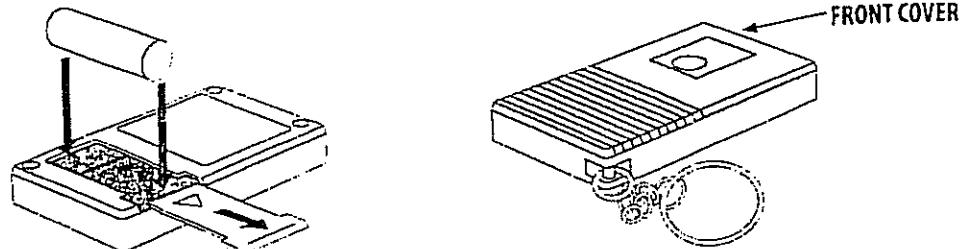

2. Remote light – to change the battery, slide off the cover and insert two AA batteries. [Fig. B]
 Match the negative/positive markings shown in the battery compartment to the batteries.
 To turn off the light, slide the switch to the "off" position or press the button on the remote control unit.

FIG. B

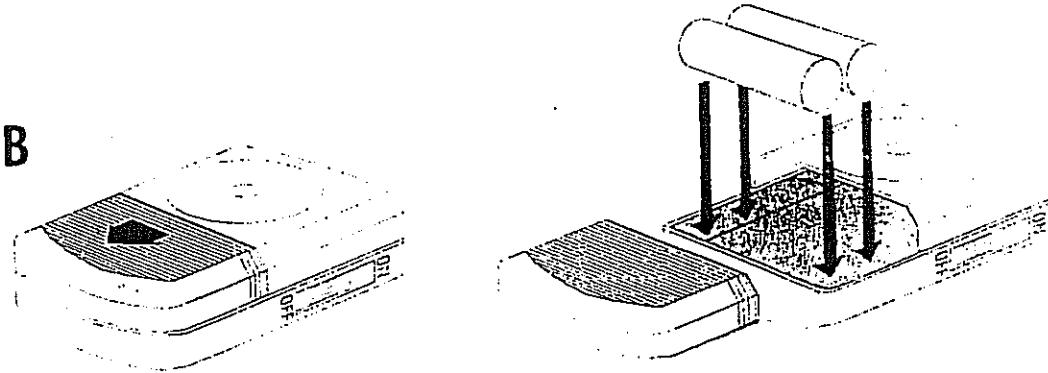

3. Installing the light — the unit can be mounted on any Velcro® surface.

Step 1 - Find the Velcro® strips sewn inside on the tent ceiling and outside next to the front door.

Step 2 - Mount the light to the Velcro® by pressing the back of the light firmly against the strips.

Note:

- Always remove the lights from tent before folding it up.
- Always remove the batteries after each camping season.
- Batteries for the remote lights are not included.
- Do not mix old and new batteries.
- Do not mix alkaline, standard(carbon-zinc), or rechargeable (nickel-cadmium) batteries.

See instruction manual for customer service information.