



Annex C Internal photographs

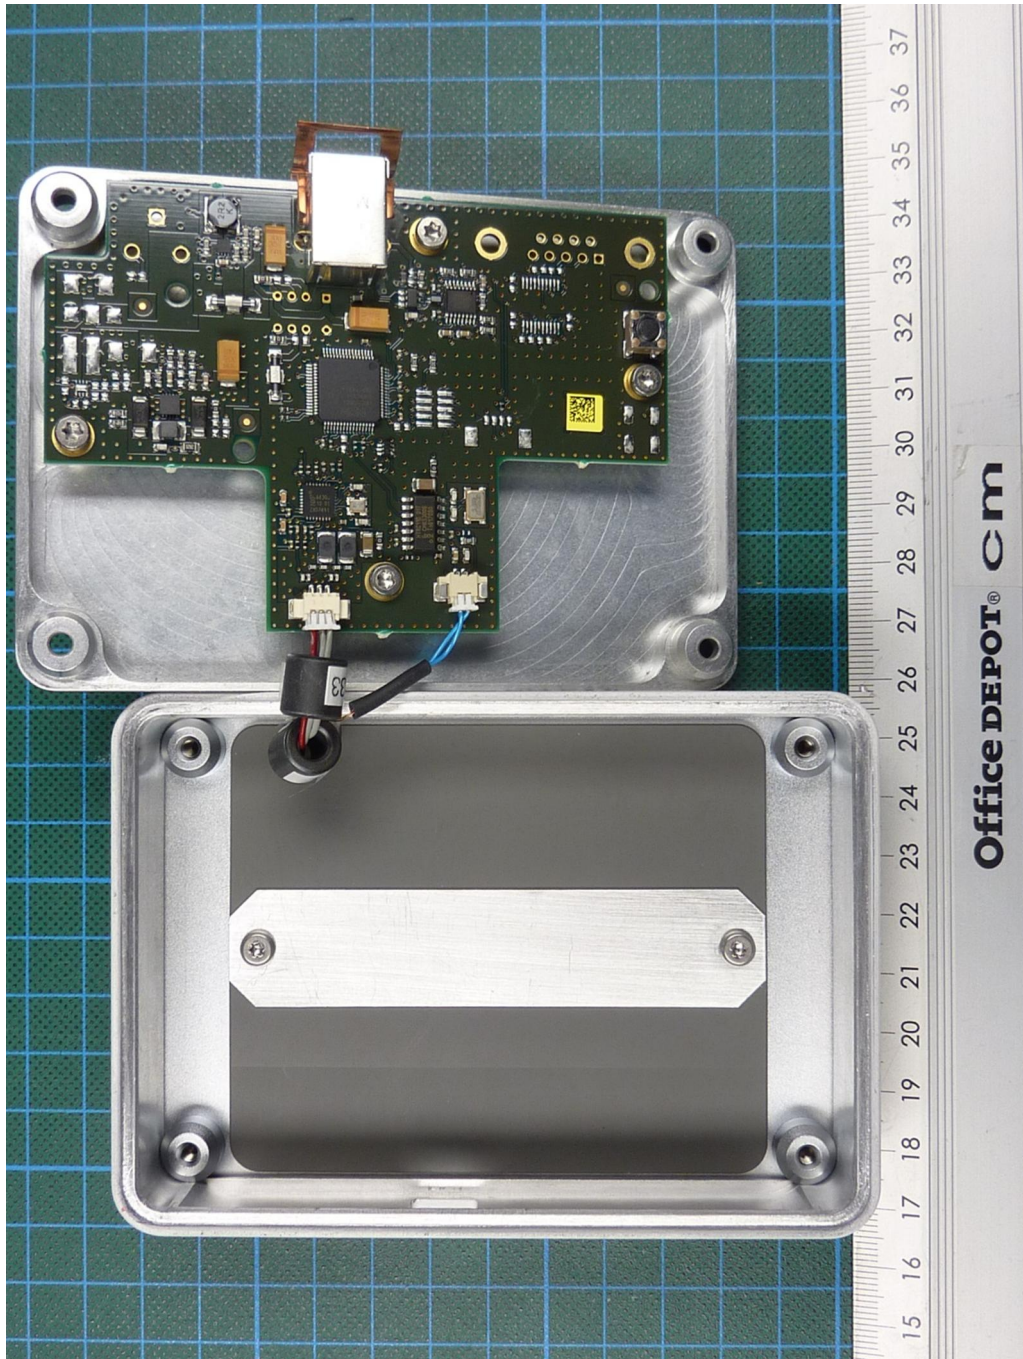


172414_q.jpg: EasyScan USB, internal view 1 (housing opened)

Annex C Internal photographs

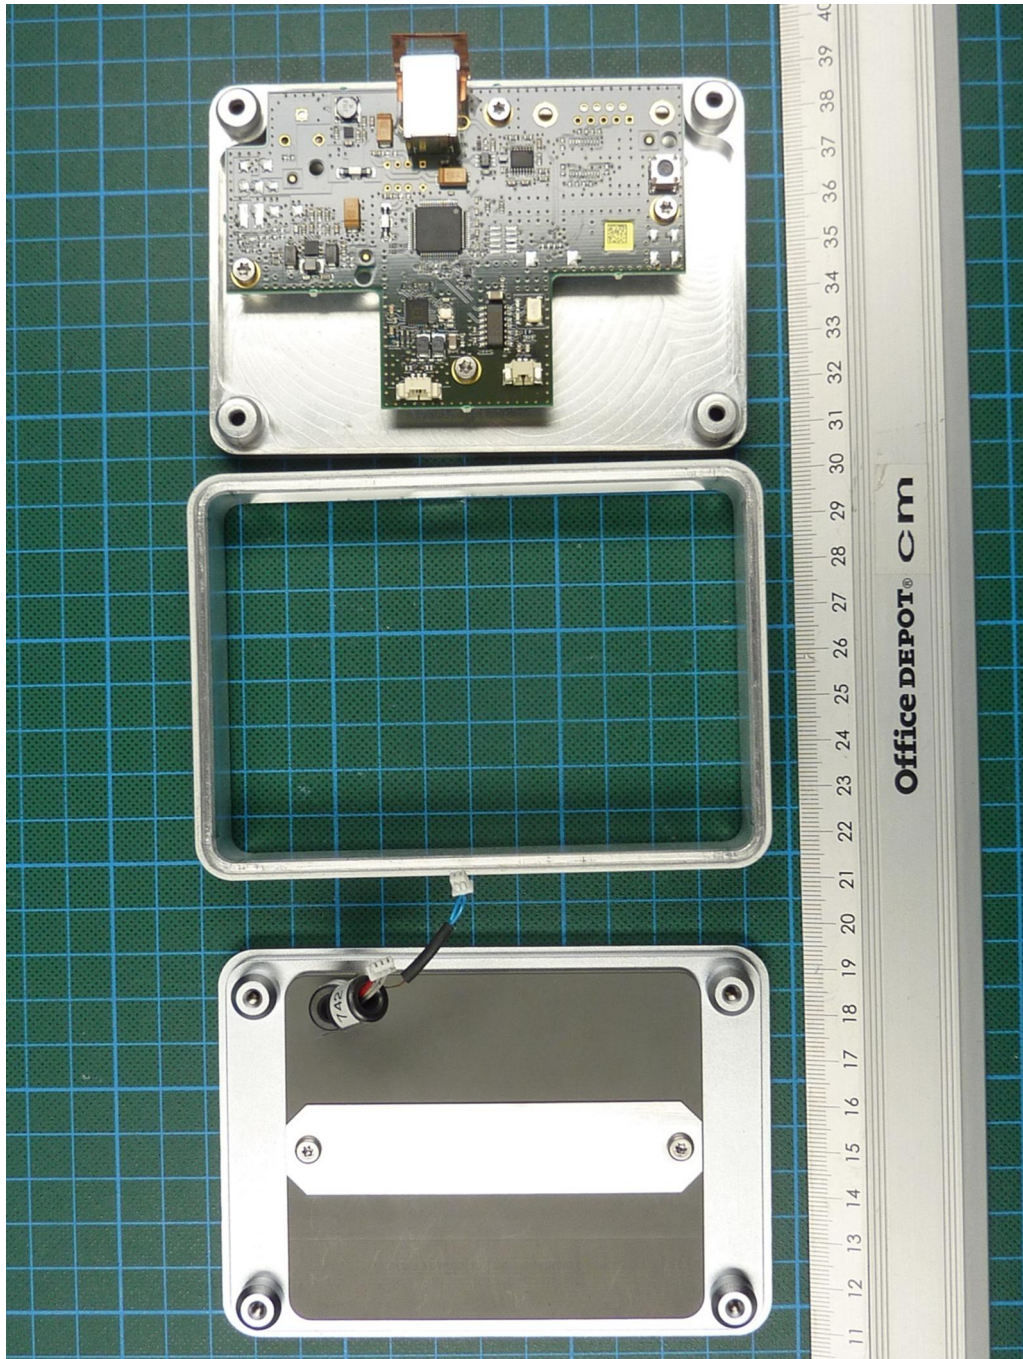


172414_r.jpg: EasyScan USB, internal view 2 (housing disassembled))

Annex C Internal photographs

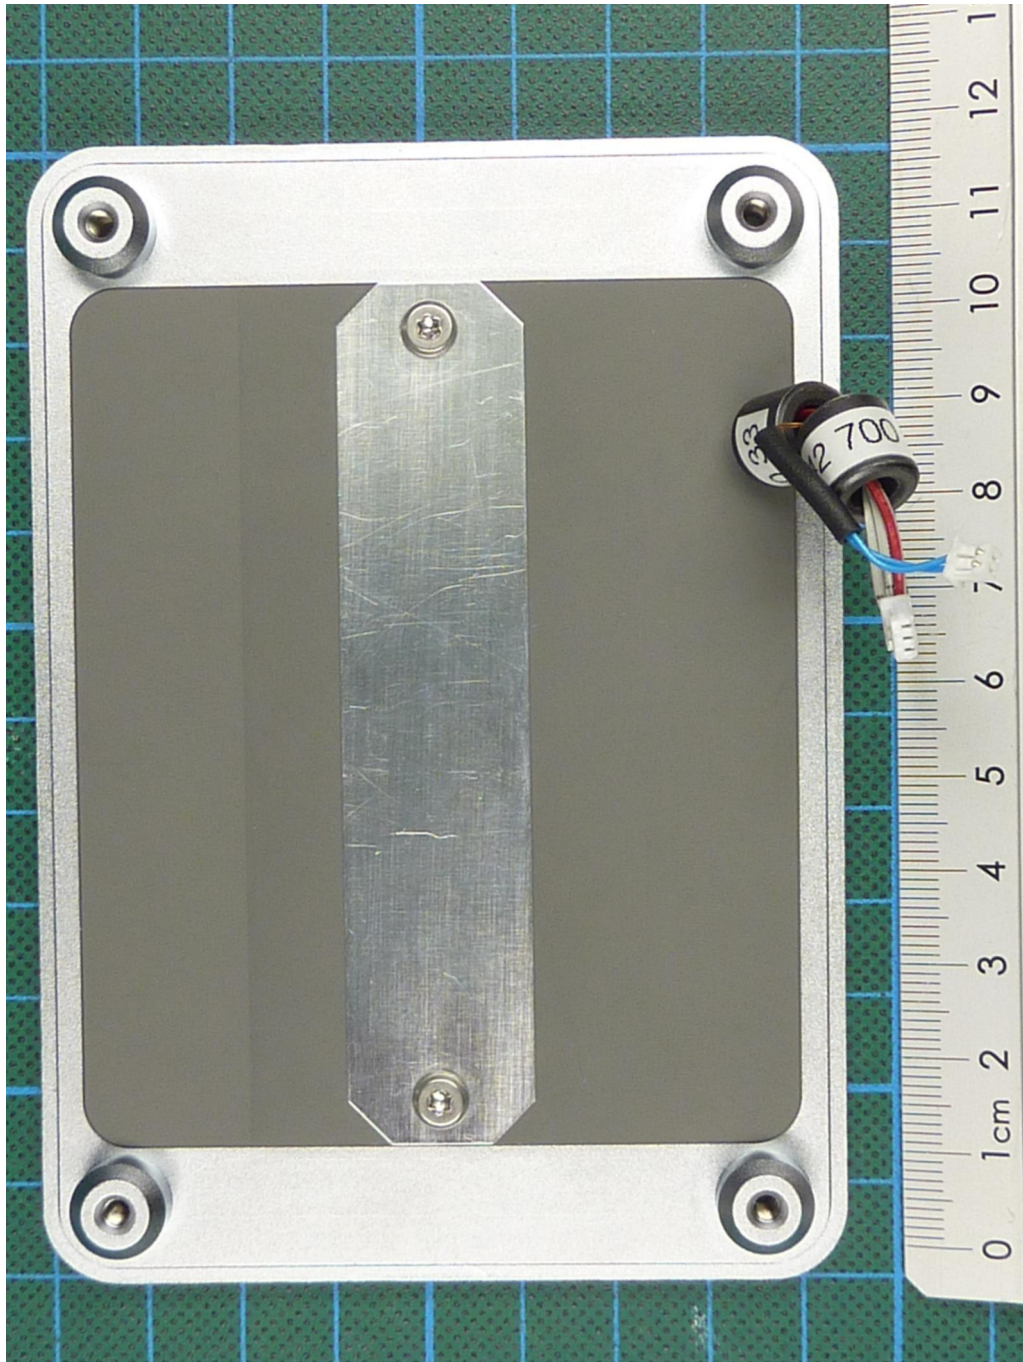


172414_k.jpg: EasyScan USB, internal view 4 (antenna fixing inside housing top cover)

Annex C Internal photographs

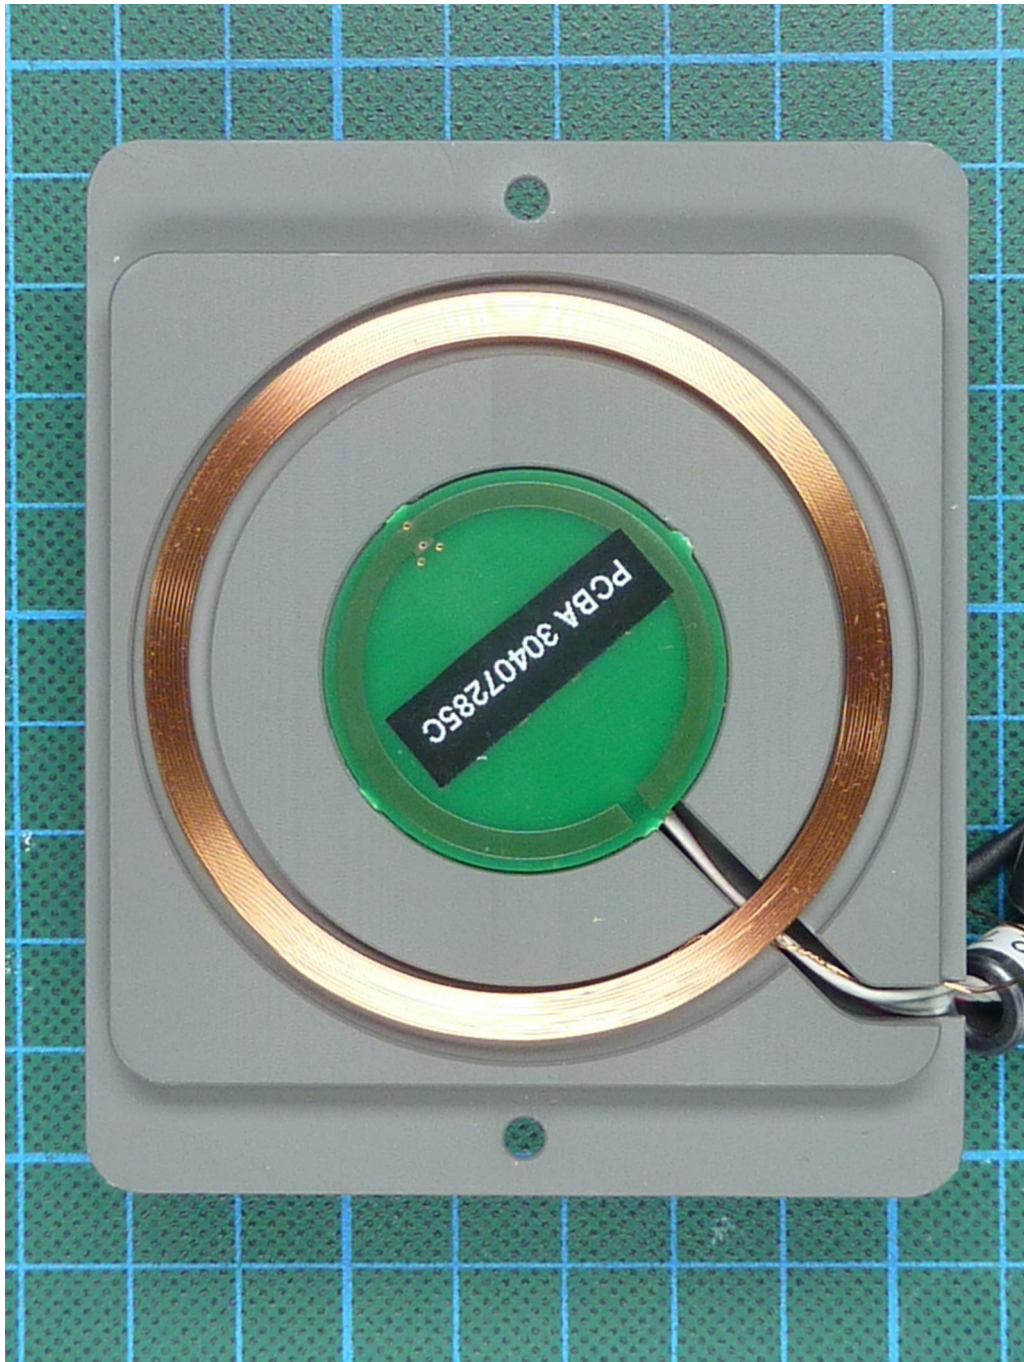


172414_j.jpg: EasyScan USB, PCB, antennas inside antenna fixing (housing top cover removed)

Annex C Internal photographs

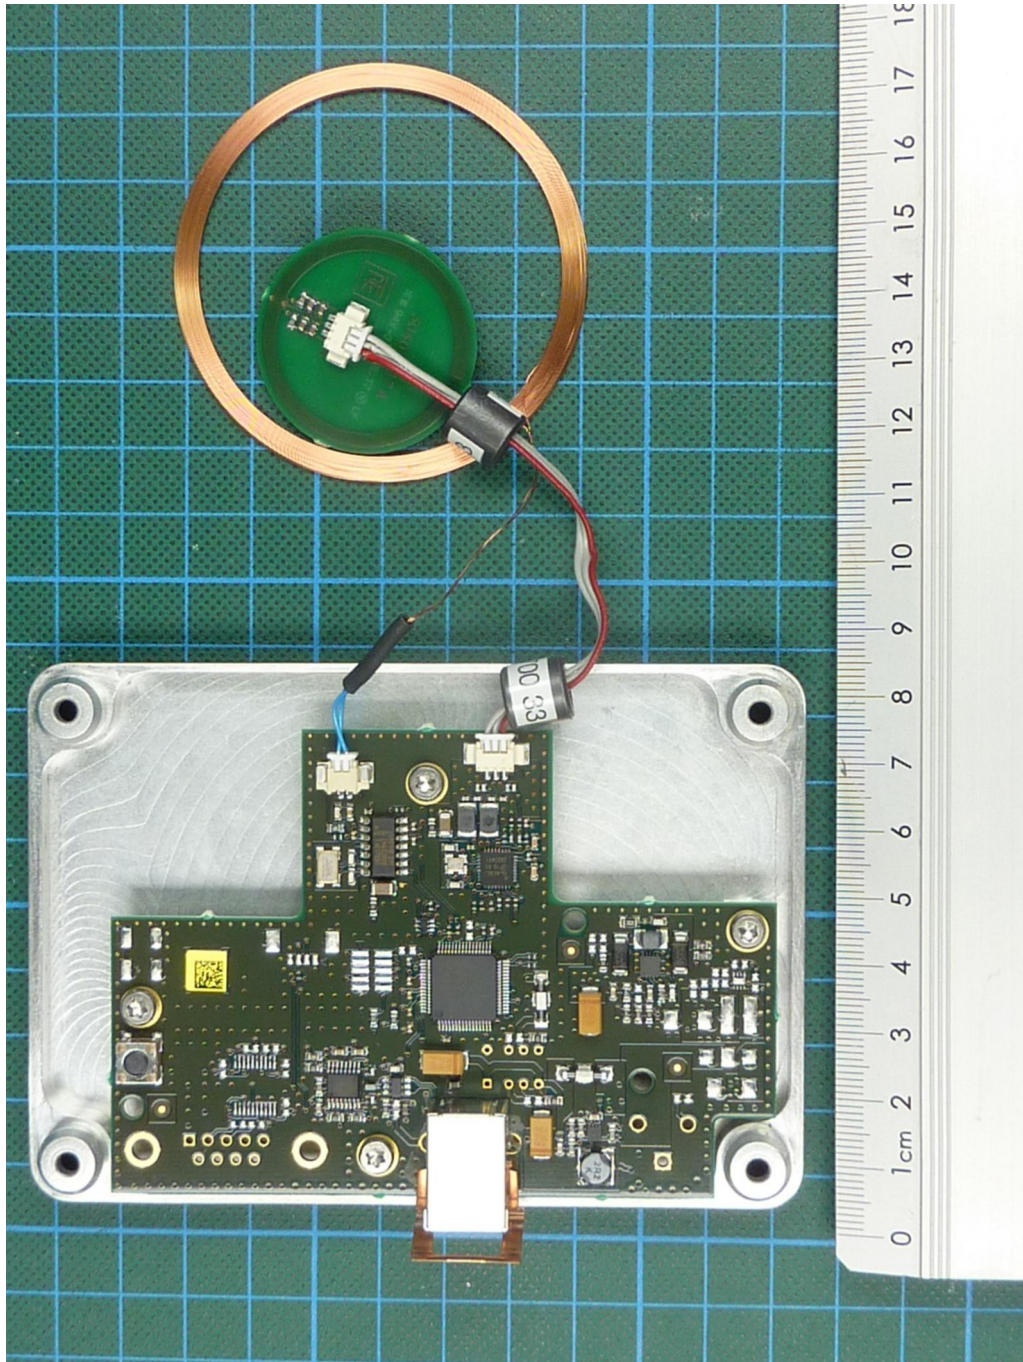


172414_i.jpg: EasyScan USB, internal view 3 (antenna fixing removed)

Annex C Internal photographs

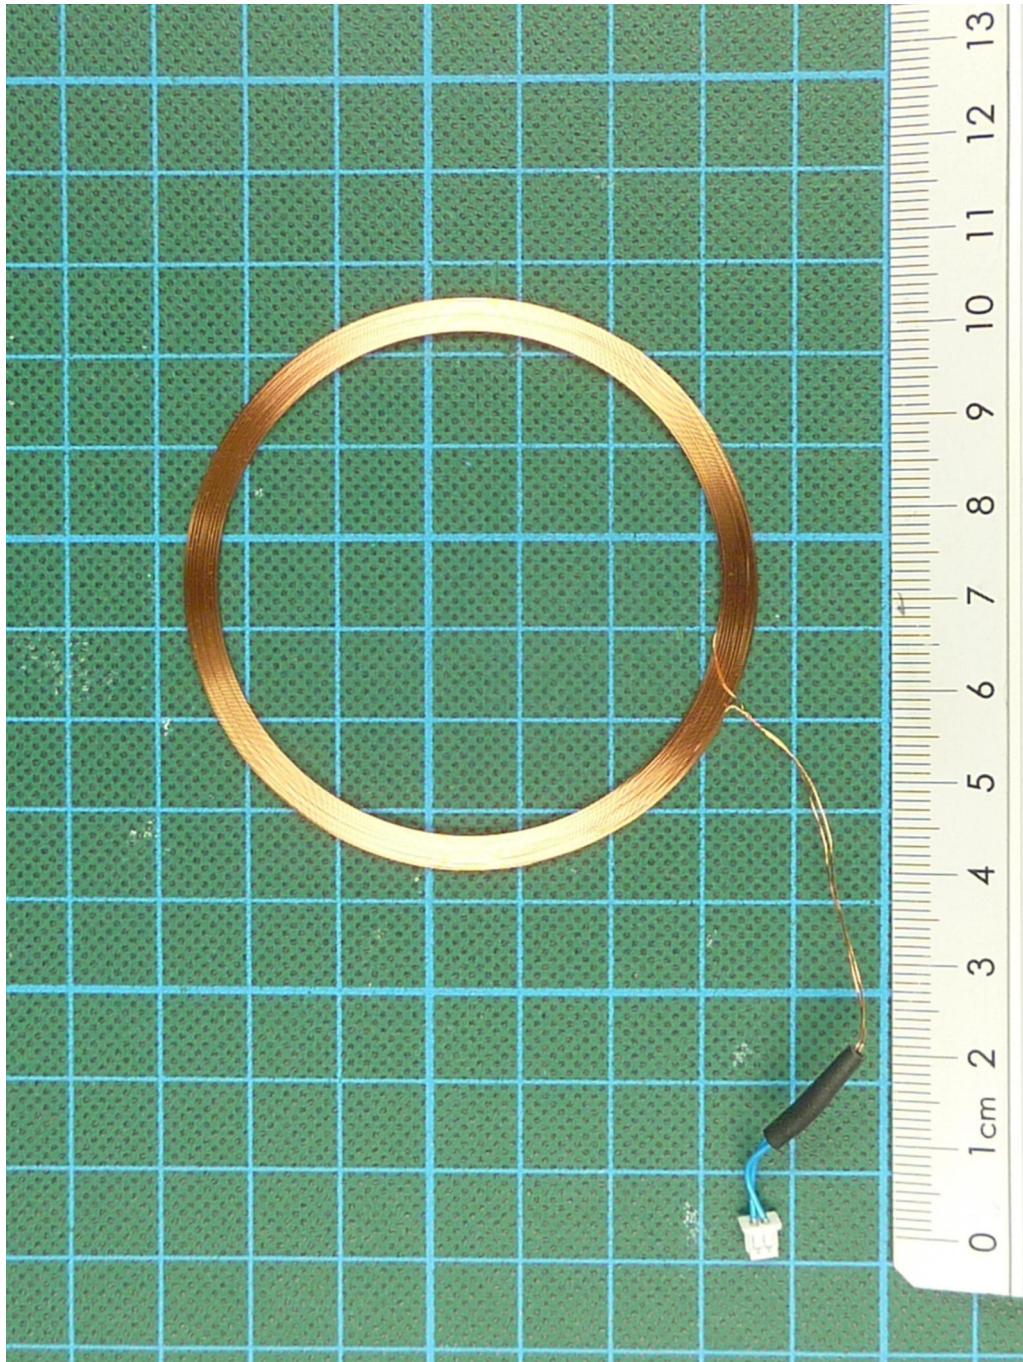


172414_n.jpg: EasyScan USB, PCB, 125 kHz antenna

Annex C Internal photographs

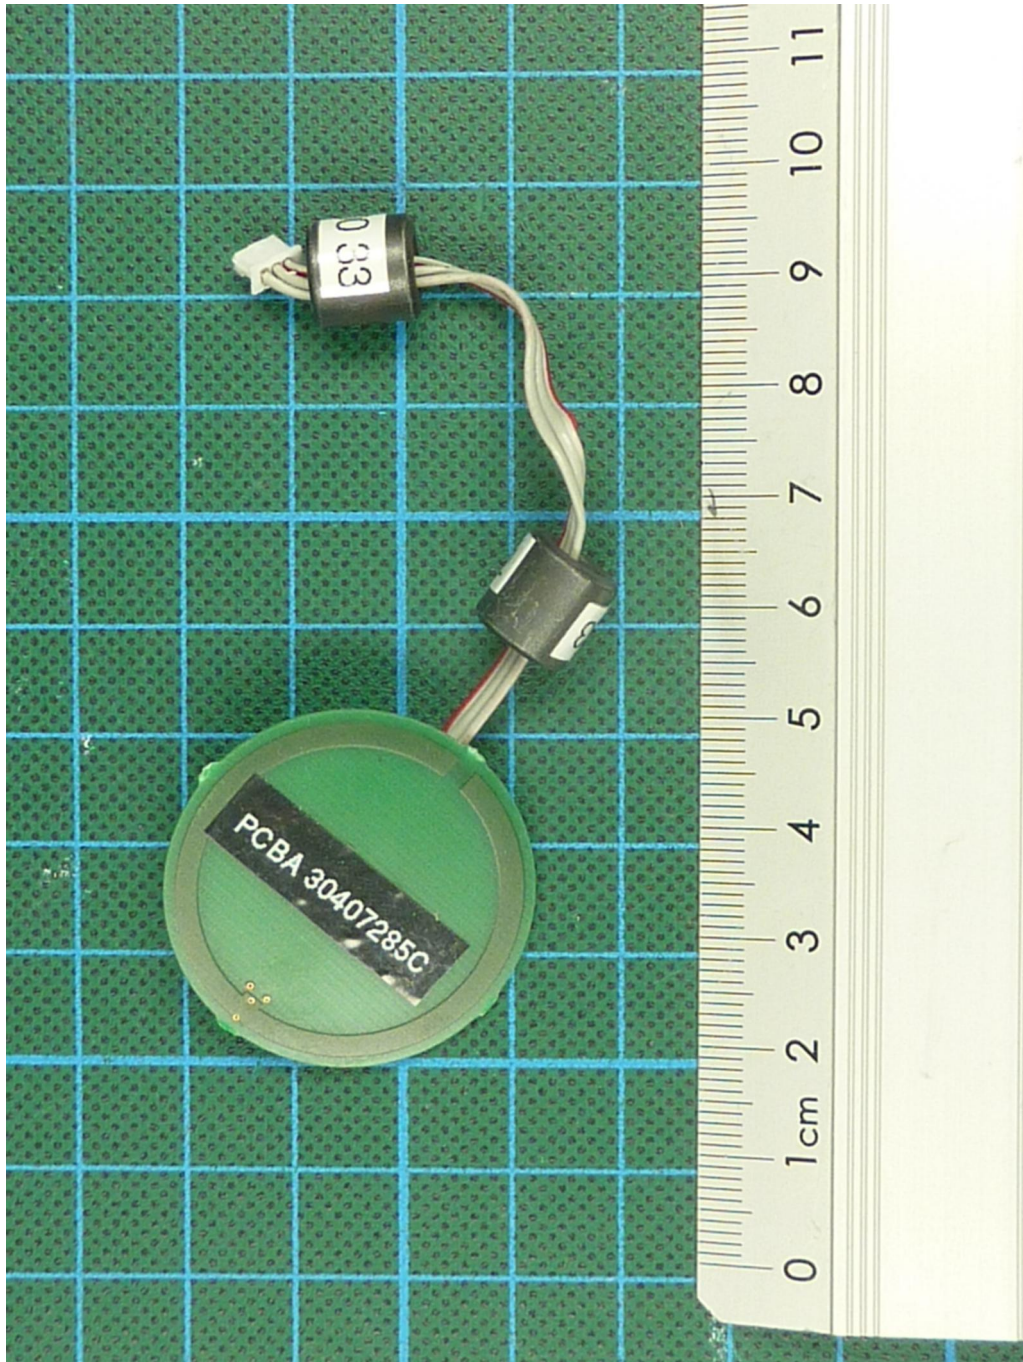


172414_p.jpg: EasyScan USB, 13.56 MHz antenna, top view

Annex C Internal photographs

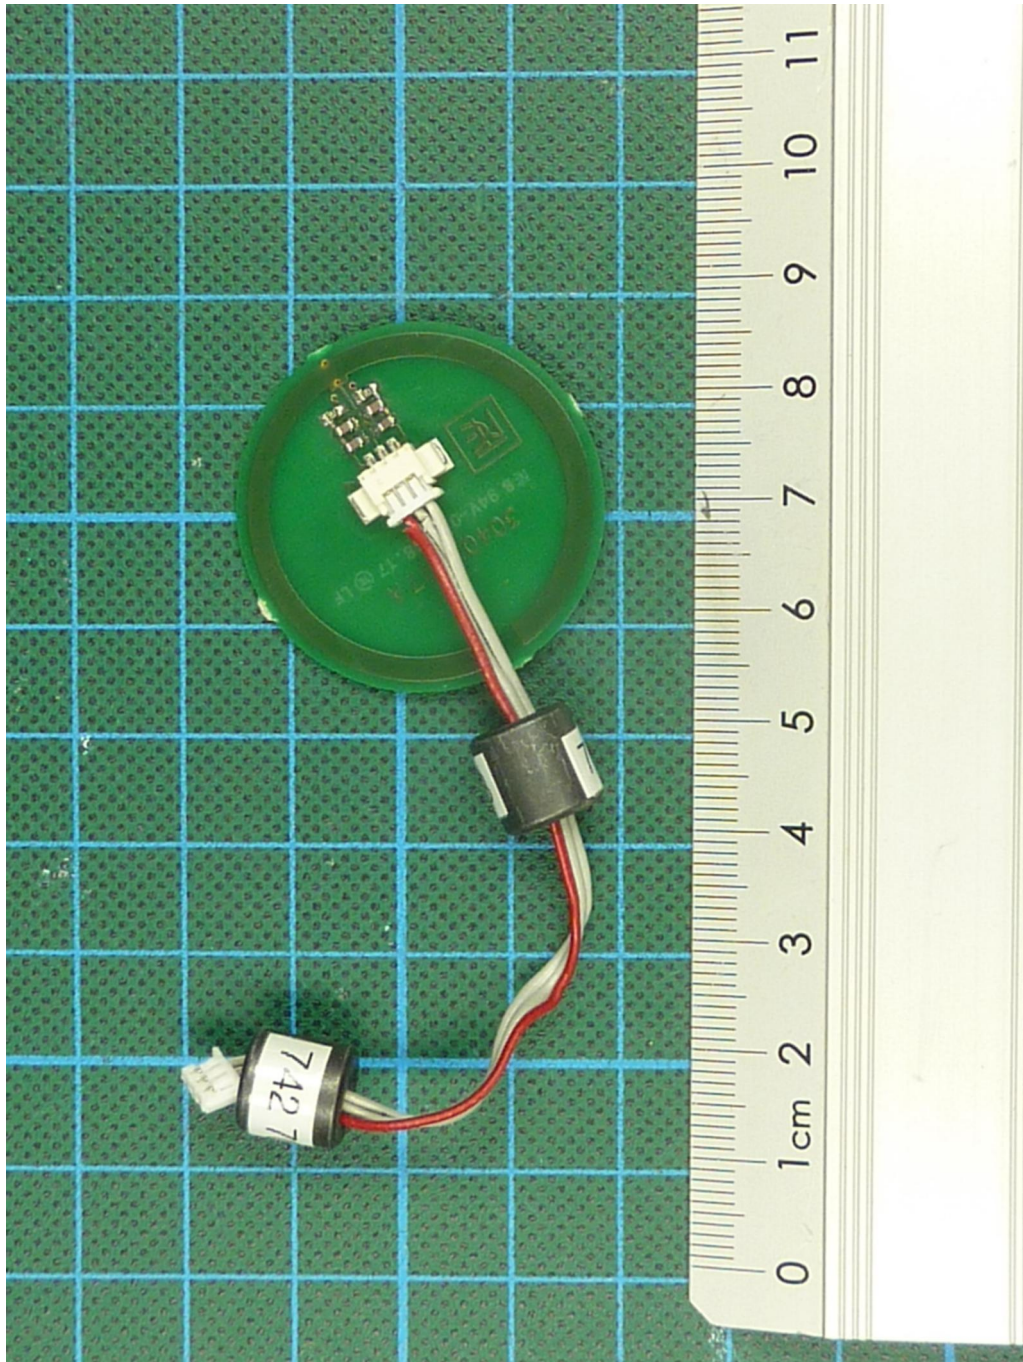


172414_o.jpg: EasyScan USB, 13.56 MHz antenna, bottom view

Annex C Internal photographs

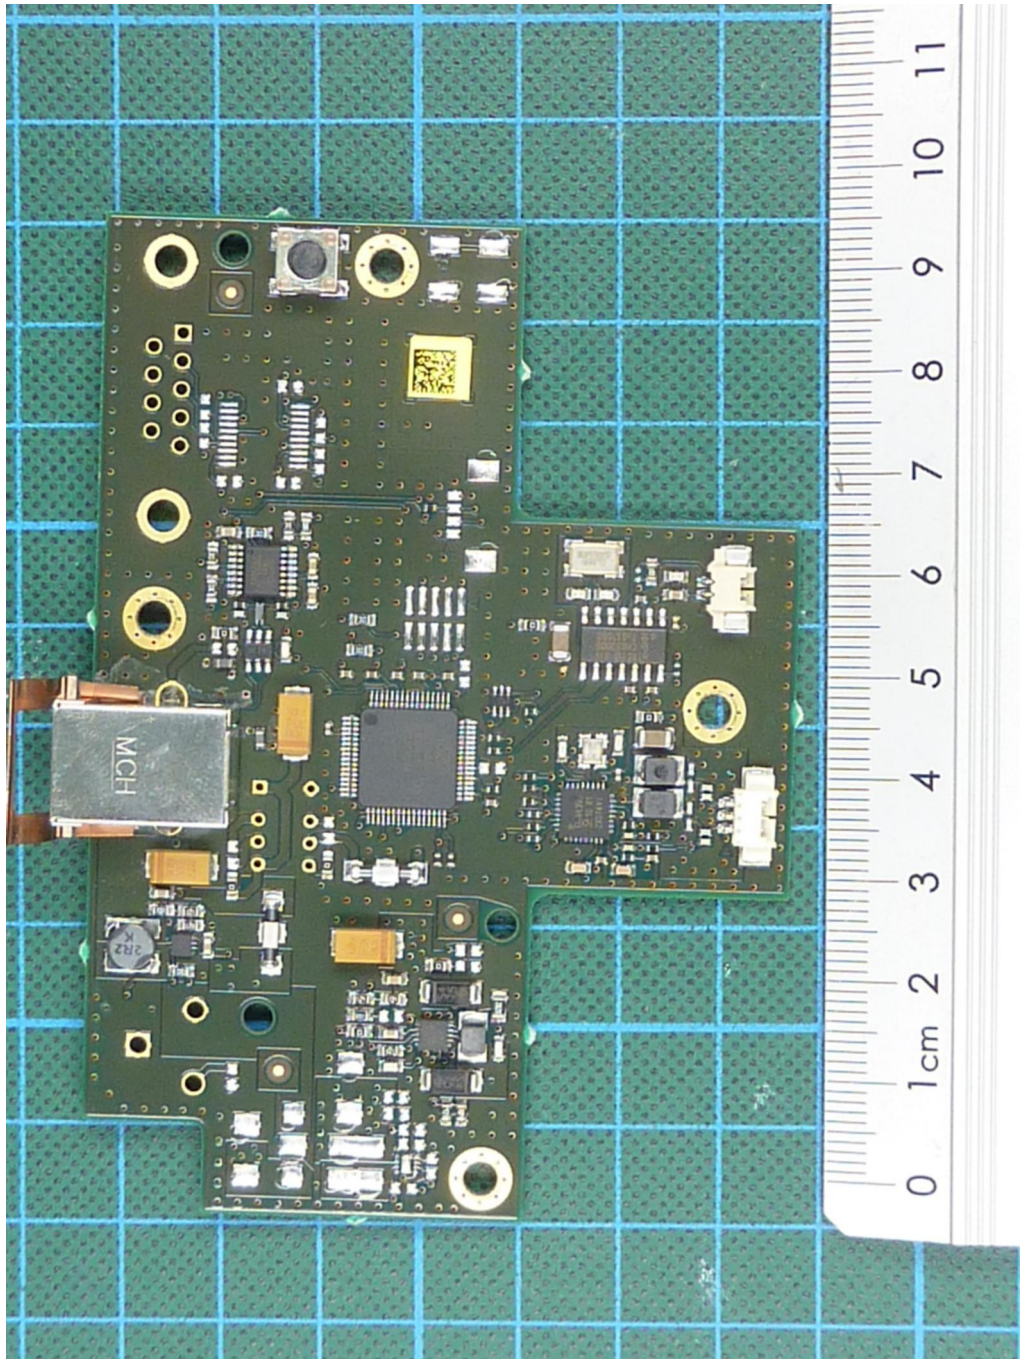

172414_I.jpg: EasyScan USB, PCB, top view

Annex C Internal photographs

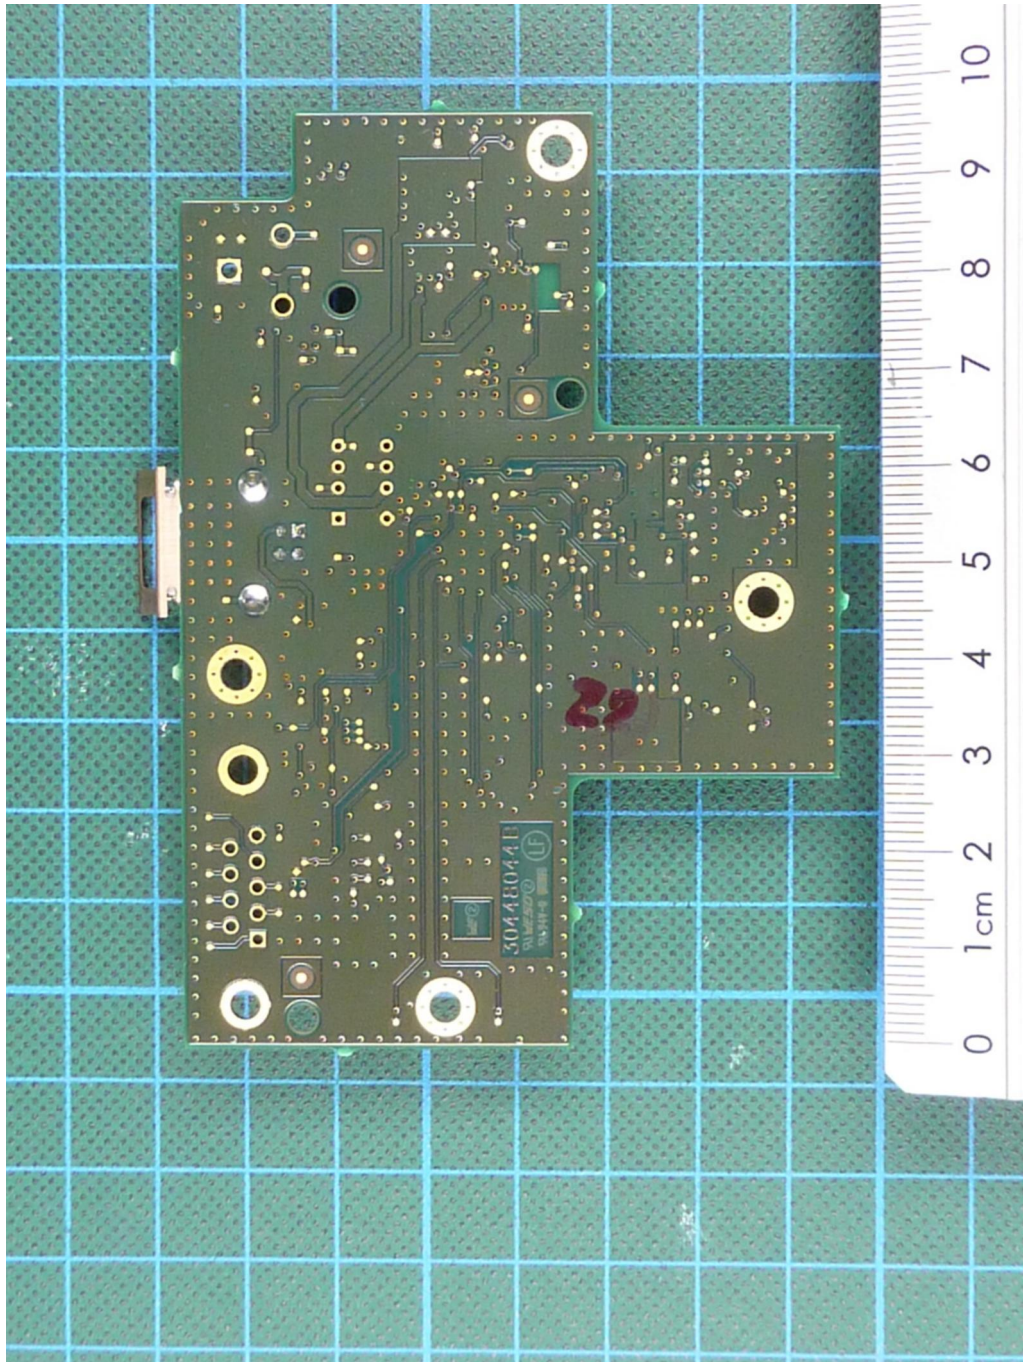

172414_m.jpg: EasyScan USB, PCB, bottom view