

# User Manual



MODEL NO: WS-212AS

## WIRELESS CAMER

Before you use this product, please read the introduction

### Features:

This product has unique features, such as wireless transmission of picture and sound, small size, light weight, low power consumption, high sensitivity, easy operation and installation.

### Installation instructions:

- Connect the antenna with the receiver;
- Plug power jack of DC 12V power supply into the power socket of the receiver (the power indicator is on);
- Connect the output of the receiver to your TV or VCR with RCA cables;
- Plug power jack of DC 9V power supply into the power socket of the camera (or connect the camera with a 9 volt battery using the battery clip);
- Fine tune the receiver to the desired position (until the image of wireless camera is received);
- Adjust the lens of the camera to the best position (in most cases you don't have to do this).

### Functions:

This product is ideal for monitoring children and old people, your home, companies, stores, and factories, etc.

### Notice:

The product is prohibited from any illegal activities. Manufacturer and distributors are not responsible for any consequences of any illegal conducts by the end users.

### Specifications:

Image pickup	1/3" CMOS, 1/3" CCD
Electronic shutter	1/50 -1/10,000 second
TV system	PAL/CCIR NTSC/EIA
Definition	380 TV lines
Scan frequency	PAL/CCIR:50Hz NTSC/EIA:60Hz
Minimum illumination:	3 LUX
Power Dissipation	<640MW
Output frequency	MHz
Camera power	DC+9V
Receiver power	DC+12V
Transmission Signal:	Video, Audio
Sensitivity:	+18DB-AGL ON-OFF
Output Frequency	1.2G/2.4G
Transmission Distance:	250M

### Connection

