


TO VIEW THE HI-LO TEMPERATURES AND RAIN PRECIP OF NEXT 4 DAYS

Toggle the FORECAST button to see the HI, Lo and Rain Precip forecast of next 4 days.


TO VIEW THE OUTDOOR TEMPERATURES IN DIFFERENT WAYS

Your internet weather station can display outdoor temperatures in different ways by toggling the OUT TEMP button:-


1. **Outdoor Temperature and Relative Humidity from the Outdoor Transmitter** (the  icon will be displayed next to the OUT house icon)
2. **FEELS LIKE Outdoor Temperature** : this is the outdoor temperature will feel like for the current day. It is a factored mixture of Wind Speed, Outdoor Temperature and Relative humidity and Hi-Lo temperatures of the day.
3. **DEW POINT Outdoor Temperature** : this is the temperature to which the air would have to cool in order to reach saturation. Weather conditions at locations with high dew point temperatures (65F / 18.8C or greater) are likely to be uncomfortably humid.
4. **Outdoor Temperature and Relative Humidity of the city your selected from the Internet**

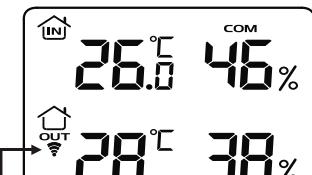


OUTDOOR TEMPERATURE AND RH% FROM OUTDOOR TRANSMITTER

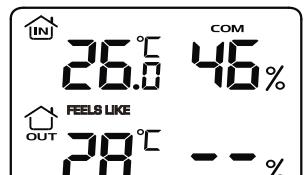

FEELS LIKE OUTDOOR TEMPERATURE

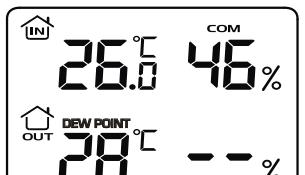

DEW POINT OUTDOOR TEMPERATURE

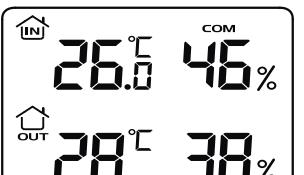

OUTDOOR TEMPERATURE AND RH% FROM THE INTERNET


 Will flash when receiving outdoor temperature and RH% data

IF YOU LOSE YOUR OUTDOOR TEMPERATURE AND RELATIVE HUMIDITY


When the outdoor temperature digits show '---', the wireless transmission is either interrupted or lost. Press and hold the  button until it flashes, you should receive the outdoor temperature and humidity in a few minutes. If the outdoor temperature does not appear on the display after 5 minutes, bring the remote temperature transmitter inside placing it close to the thermometer unit. Press and hold the  button again, then press the **RESET** button on the outdoor transmitter. When the outdoor temperature and humidity appears on the display again, place the outdoor transmitter back outside in the proper location. If you continue to lose the outdoor temperature and humidity display, try placing the transmitter in a different location until you have smooth transmission of temperature data.

TO READ MAXIMUM-MINIMUM TEMPERATURE RECORDS

Press + / MEMORY to view the MAX-MIN indoor-outdoor temperatures and relative humidity.

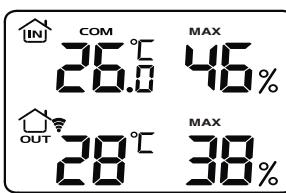

MAXIMUM TEMPERATURES OF IN-OUT TEMPERATURES AND RH%

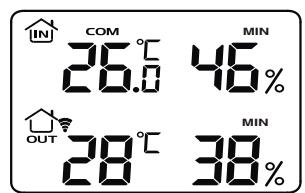


MINIMUM TEMPERATURES OF IN-OUT TEMPERATURES AND RH%

TO SELECT DEGREE C / F TEMPERATURE READOUT


Simply press - / C/ F button, when degree F readout is selected, wind speed will show in mph (miles / hour), when degree C readout is selected, wind speed will show in kmh (kilometers / hour).

COMFORT LEVEL


The Comfort Zone icon indicates how comfortable the climate is based on current indoor temperature and humidity measurements:

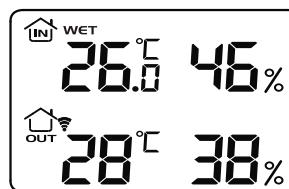

Wet

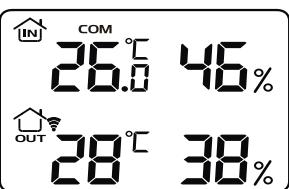

Comfortable

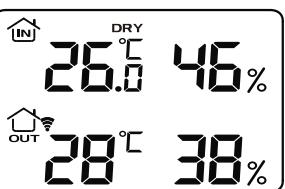

Dry

UV INDEX

The UV index indicates how strong the ultraviolet (UV) radiation from the sun is. It helps people to effectively protect ourselves from UV light.


UV Index	Description
0-2	No danger to average person
3-5	Little risk of harm from unprotected sun exposure
6-7	High risk of harm from unprotected sun exposure
8-10	Very high risk of harm from unprotected sun exposure
11-12	Extreme risk of harm from unprotected sun exposure

WIND SPEED AND DIRECTION

There are 8 directions indicated by your internet weather station : North, North East, East, South East, South, South West, West, North West. Wind speed is displayed in mile per hour (mph) or kilometers per hour (kmph).

MOON PHASES

There are 8 icons of moon phase can be displayed on your internet weather station :

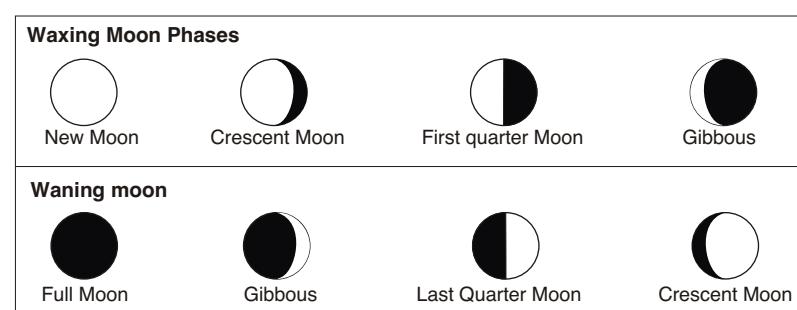

BATTERY BACK-UP

1. Open the battery cover at the back case, insert 3 x AA batteries with correct + and - polarity inside the battery compartment. Replace the battery cover.
2. When the AC power is off, the batteries will power the internet weather station.
3. When only the back-up battery is used, the blue LCD backlite does not work.