

WEATHER ICONS OF YOUR INTERNET WEATHER STATION

Your internet weather station can display 20 different weather conditions :-

DESCRIPTIONS	TODAY'S WEATHER ICON	4-DAY WEATHER ICON
CLEAR		
MOSTLY CLOUDY		
CLOUDY		
DRIZZLE		
RAIN		
SHOWERS		
FOG		
HAZE		
DRIZZLE & SNOW		
SHOWER & SNOW		
RAIN & SNOWY		
SNOW		
MED SNOW		
NORMAL SNOW		
THUNDERSTORM - SMALL		
THUNDERSTORM - MEDIUM		
THUNDERSTORM - LARGE		
THUNDERSTORM & SNOW		
ICY & RAIN		
ICY & DRIZZLE		

RESETTING YOUR INTERNET WEATHER STATION

Press RESET once to return to default settings. However, you need to click "Device" and then "Device Register" on your computer screen to re-synchronise your internet weather station to your USB and computer.

CARE OF YOUR WIRELESS INTERNET WEATHER STATION

1. Avoid exposing the thermometer unit to extreme temperatures, water or direct sunlight.
2. Avoid contact with any corrosive materials
3. Do not subject the thermometer to excessive force, dust or humidity.
4. Do not tamper with any of the components of this thermometer.

TROUBLE SHOOTING

PROBLEM	SYMPTOM	REMEDY
Your internet weather station is not working	LCD display is blank Backlite is off	Make sure the AC/DC adaptor is plugged into AC outlet and connected to your internet weather station
LCD Display	1) Only time and calendar and indoor temperature and RH% on the LCD, no weather icons 2) Losing weather forecast data	1) Make sure your computer is powered on and is connected on-line 2) Make sure the USB is inserted into your computer 3) Press and hold - / C/F for 2 seconds to start data reception / transmission again 4) Right click small weather icon at lower menu bar on your PC screen, click "Device", then click "Device Register", press RESET on your internet weather station
Weather forecast	Weather Forecast information is not relevant to your outdoor weather condition	Incorrect city is selected : right click small weather icon at lower menu bar on your PC screen, click "City Select", then click country and then a city.
Outdoor Temperature and relative humidity	Outdoor temperature and relative humidity readout shows "--"	1) Outdoor transmitter is out of range: bring it closer to the weather station 2) Outdoor transmitter low battery : replace fresh batteries 3) Outdoor transmitter is not synchronized with the weather station : press and hold OUT TEMP until the icon flashes, then press RESET on your outdoor transmitter to re-synchronise with the internet weather station
Calendar	Strange Day of the Week	Press and hold SET to enter set mode, adjust the language of the Day of Week
Time	Incorrect time on the LCD display	Incorrect time on your computer : adjust the time on your computer to correct time

PRODUCT SPECIFICATIONS

Indoor range: Temperature 0C to 50C / +32F to +122F, Relative Humidity 20%-95%
 Outdoor range : Temperature -50C to +70C / -58F to +158F, Relative Humidity 20%-95%
 Transmission distance : up to 100 meter with no obstructions
 Transmission Frequency : 868mHz (for Europe) / 915mHz (for U.S.A)
 Transmission interval : Outdoor Temperature and RH% : approx. every 1 minute
 USB and main unit : approx. every 1 minute

OFFICIAL WEB SITE

All internet weather data of weather obtained from www.weatheronline.de

MINIMUM HARDWARE REQUIREMENTS OF YOUR COMPUTER

You need the below configuration of your computer to run with your internet weather station smoothly:-

CPU 1G kHz
 RAM 512MB
 Hard Disk 1GB free

Remark: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.