


## **FINAL TEMPERATURE ALERT (when Food temp. meets Alert temp.)**

- 1) The thermometer will give a quicker beep sound with **ALERT** icon blinking on the upper LCD. The lower digits of **MEAT TEMP** blink.
- 2) If the remote pager is out of the thermometer unit and synchronized with it, the remote beeper will also give the same alert beep sound in 5 - 30 seconds.
- 3) To stop the Temp. Alert temporarily, press the **THERMO** button once, the beep sound will stop and beep again for 5 seconds in every 1 minute after.
- 4) To fully shut off alert, disconnect wire probe. Also, alert and pre-alert beep will stop if the measured temp. is lower 10F of the set alert temp.



## **TO USE COUNTDOWN TIMER (countdown capacity 23 hr 59 min.)**

- 1) After setting countdown time, press **TIMER** button. Timer will start counting down with : colon blinking.
- 2) When count down to **0:00**, time digits blink and beep. If turned on and synchronized, the remote pager will also give the same alert beep sound with 5 - 30 seconds.
- 3) Press **TIMER** button once to stop the beep. Digits 0:00 stop blinking.
- 4) Press **TIMER** once more to show memory of last count down time.

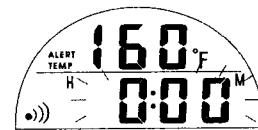

## **TO USE REMOTE FINDER TO LOCATE YOUR PAGER**

 
When your remote pager is misplaced and out of the desktop unit, press and hold **REMOTE BEEPER** button for 3 sec. Your pager will beep within 30 seconds for 3 minutes then off.


## **AUTO POWER OFF**

To save battery, when your thermometer main unit is not used or measuring temp. for 5 minutes, it will turn itself off automatically. Press any button to resume.

There is no "auto-off" on the pager, it must be reinserted and pushed in fully once to turn **OFF**. (One push turns **ON**, next push turns **OFF**, etc.)

## **HELPFUL HINTS**

- 1) When you are not using the thermometer-timer, always push the remote beeper **FULLY** into the back of the thermometer to turn off both wireless transmission / reception of the thermometer main unit and the power in the pager. The  icon disappears on lower LCD.
- 2) If you are not sure the thermometer and remote are synchronized, re-insert the pager into the thermometer unit. Repeat steps above "TO USE THE REMOTE PAGER"
- 3) Make sure the plug of the stainless steel probe is well inserted into the thermometer.

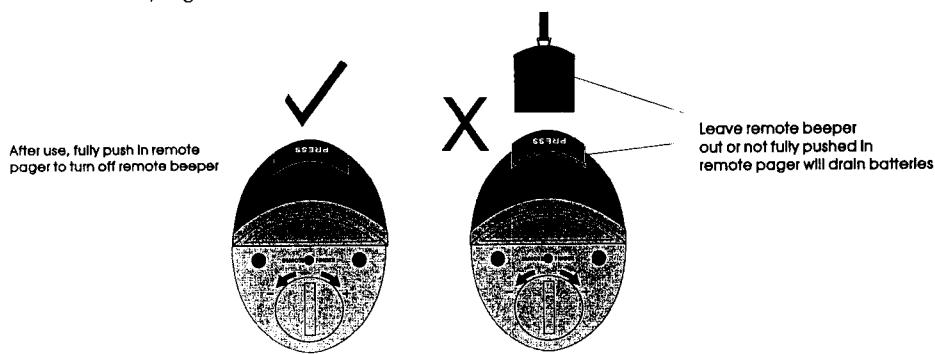

## **STATEMENT OF FCC COMPLIANCE**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning : Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :-

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.