




R/C

LAND SEA

Expository NO.604


### FURIOUS R/C ACTION ON LAND AND SEA JUST GOT BETTER!

It's an all-terrain 4x4! It's a speed boat! With just a touch of a button, Land Sea R/C 2 transforms from a super-fast stunt machine to a powerboat or battle tank! Make it do killer 360 spins and thrashin' stunts! And with the new CDS headlights, now you can do it in the dark! Bonus transport capability even lets you carry up to 2 soda cans! With the full-function, waterproof radio control handset, control all the action from 75 feet away! Available in two different frequencies for rip-roarin' racing excitement!

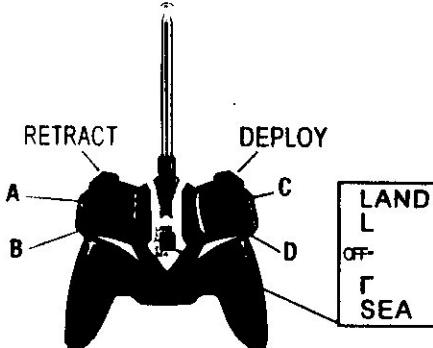

- Press A+C at the same time to move forward.
- Press B+D at the same time to move forward.
- Press A+D at the same time to turn right spinning.
- Press B+C at the same time to turn left spinning.

Release all buttons to stop all motions.

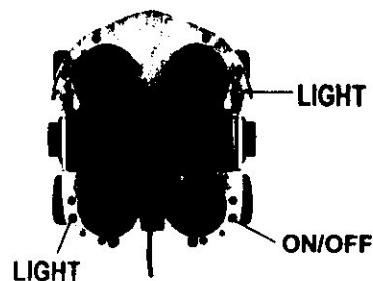

**BLAZING FAST, All Terrain  
Land & Water Stunt Machine!**

4-Wheel Drive!  
Twin Turbo Props!  
Full Function Waterproof  
Wireless Remote!

**Lightning Speed! 75 Scale MPH!  
Awesome Stunts!**

- 360° Spins!
- Pop Wheelies!
- Sides Wheelin'!


#### **New & Improved!**

- Play In the Dark  
With CDS Headlights!
- Precision-Grip Wheels!
- Transport Soda Cans!

### BATTERY CHARGING

Note: Follow the instruction on your 7.2V rechargeable Ni-Cd battery pack and charger system.

- The 7.2V rechargeable Ni-Cd battery pack must be charged prior to use.
- When charging Ni-Cd battery pack, first connect the charger with the Ni-Cd battery pack, then plug charger into a household outlet.
- Four hours is all that required for fully charging the battery pack. Charging the battery pack for more than 4 hours will not give you longer running time.
- After use, the battery pack will be hot. Wait at least 10 minutes until the battery pack cools down before charging. Recharging a hot battery pack will greatly reduce the recharging life of your battery pack.

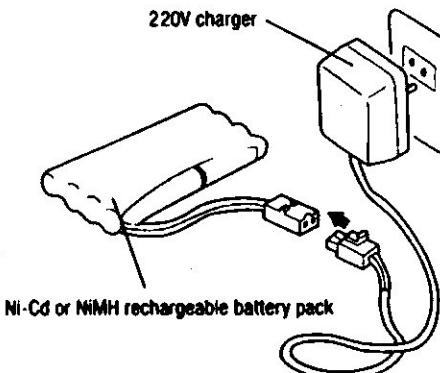

7.2V Ni-Cd or NiMH rechargeable battery pack

### Cautions:

- Do not charge battery pack that shows leakage and corrosion.
- Do not attempt to disassemble the battery pack.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the LAND SEA for several days, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.
- Never leave dead or weak batteries in the LAND SEA and transmitter.



