

## **Remote Control Helicopter – Operation Description**

### **1) Charging the helicopter**

Plug the AC charger into an AC wall outlet. Gently plug the charger jack in the recharge port located on the underside to the helicopter (make sure that the helicopter is turned “OFF”). As soon as the helicopter is plugged into the charger, the charger’s LED indicator will become RED, indicating that charging is taking place. If the helicopter’s battery is fully charged and the charger indicator will turn off (the charging time is about 12 min ~ 15 min depending on capacity of the batteries).

### **2) Operations**

Turn the helicopter “ON” and turn the controller “ON”. Use the Left control stick to control the “UP” and “DOWN”, and use the right control stick to control the “LEFT” and “RIGHT” of the helicopter.