

FCC ID TL9IPRO1000

-Operational description-



STANDBY ON

Turn the power on/off.

Volume ◀ ▶

Control volume, change item on menu or input frequency value.

Channel ▲ ▼


Change channel, move menu, or input frequency value.

OK

Select menu or value on menu item.

MENU

Shows the menu application.

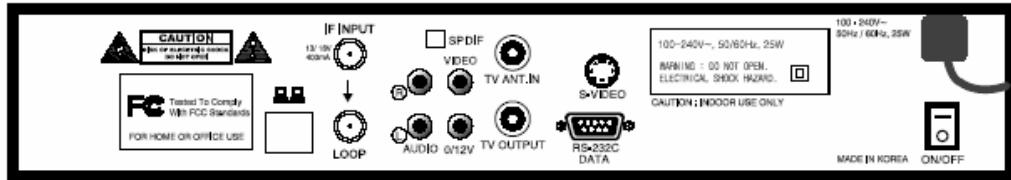

IP Connection

Network interface

DIGITAL

It receives signals from the LNB in the range of 950 ~ 2150MHz. Connect a satellite dish to DIGITAL.

OUT

It sends signal to the another receiver.

AUDIO

It provides stereo audio output. Connect the audio on TV to AUDIO with RCA cable.

SPDIF

Output for connection to a digital amplifier

VIDEO

It provides composite video output. Connect the Video on TV to VIDEO with RCA cable.

0/12 VOLT

The 0/12V jack provides 0 or 12V output for external LNB switch.

TV ANT IN

The signal supplied to this connector from a TV antenna will be sent to TV antenna output. Connect a TV antenna to TV ANT IN.

TV OUTPUT

It provides a modulated audio and video from the receiver. Connect the TV/VCR on TV to TV/VCR with the RF cable.

S-Video

It provides high definition screen.

RS-232C DATA

It receives data by connecting to PC for software upgrading. Connect with RS-232C cable a PC and receiver.

ON/OFF

The switch is to turn on or off the main power of the receiver mechanically.