

 
1:24 REMOTE CONTROL

 
Ages 6+













UNLOCK

4 "AA" SIZE 1.5/ 1.2V BATTERIES

LOCK

"9V" BATTERY

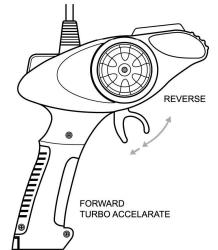

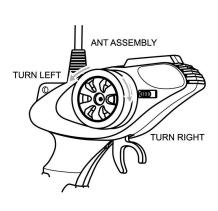

△ WARNING:

CHOKING HAZARD - Small parts. Not for children under 3 years.




Setting the Trim Control



Trim Control

The Trim Control Dial is located between the front wheels. If the vehicle begins to pull to the left, adjust the trim control towards the "R" marking. If the vehicle pulls to the right while driving, adjust the trim control towards the "L" marking.

Proper use and Precautions

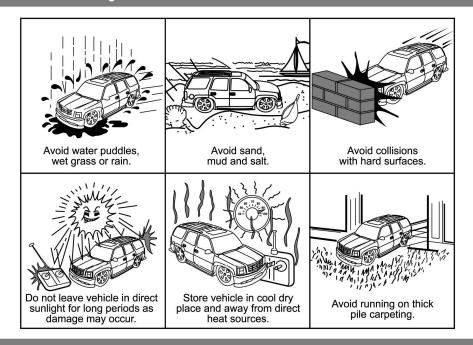

Care



Trouble Shooting and Support

90% of all difficulties experienced with radio controlled vehicles are due to either weak batteries or batteries that have been installed incorrectly. When batteries become weak, the vehicle may not necessarily stop completely but may exhibit slow response, slow speed or erratic behavior.

Remarks:

- 1. 4"AA", 1.5/1.2V batteries are required for the car. (Not included in the packaging)
- 2. 1 "9V" battery is required for the transmitter. (Not included in the packaging)
- 3. DO NOT mix old and new batteries.
- 4. DO NOT mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS
EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER
AUTHORITY TO OPERATE THE EQUIPMENT.