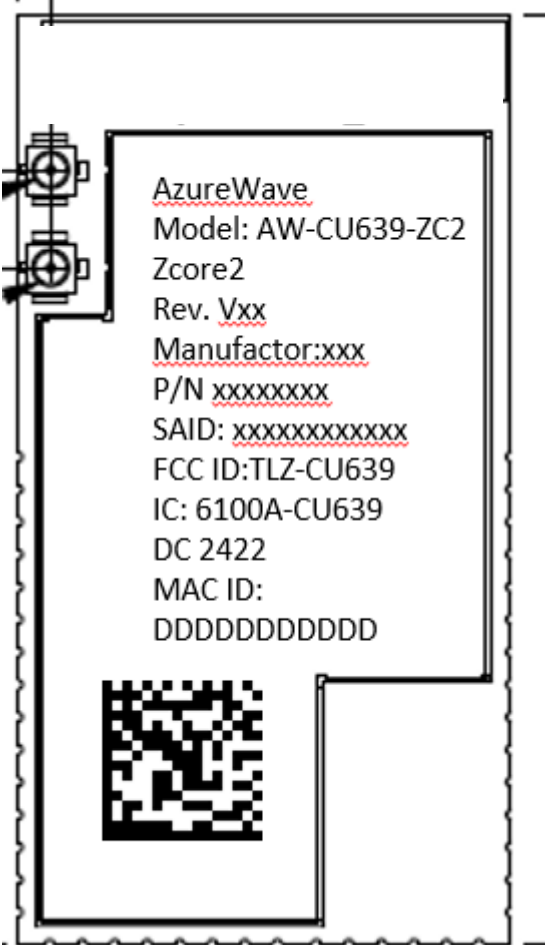
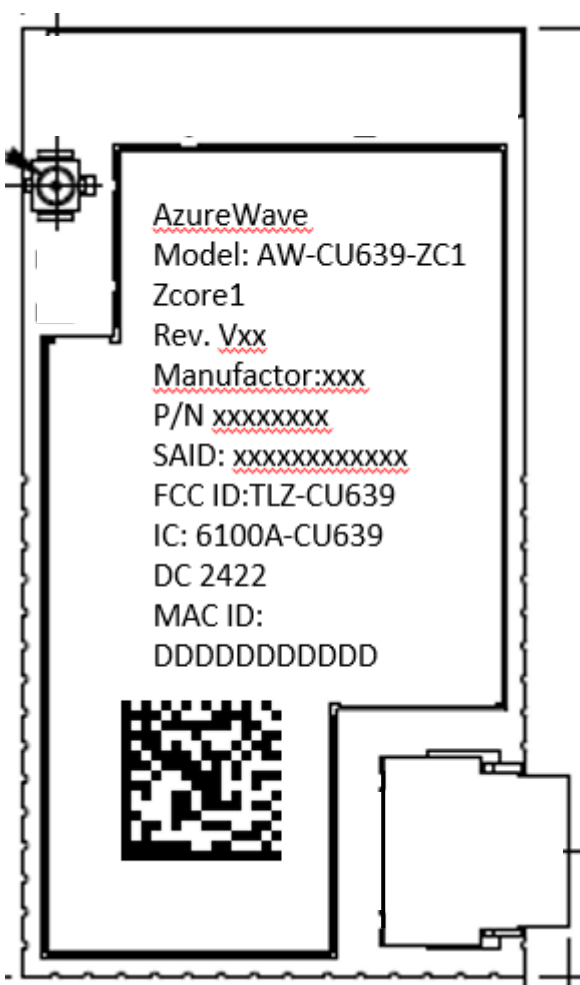


Label and location
On the top of the EUT

For AW-CU639-ZC2	For AW-CU639-ZC1
 A diagram showing the label placement on the top of the EUT for model AW-CU639-ZC2. The label is a rectangular box containing the following text: AzureWave, Model: AW-CU639-ZC2, Zcore2, Rev. Vxx, Manufactor:xxx, P/N xxxxxxxx, SAID: xxxxxxxxxxxxxx, FCC ID:TLZ-CU639, IC: 6100A-CU639, DC 2422, MAC ID: DDDDDDDDDDD. Below the text is a QR code. The label is positioned on the left side of the EUT, with two mounting holes indicated by circles with crosshairs.	 A diagram showing the label placement on the top of the EUT for model AW-CU639-ZC1. The label is a rectangular box containing the following text: AzureWave, Model: AW-CU639-ZC1, Zcore1, Rev. Vxx, Manufactor:xxx, P/N xxxxxxxx, SAID: xxxxxxxxxxxxxx, FCC ID:TLZ-CU639, IC: 6100A-CU639, DC 2422, MAC ID: DDDDDDDDDDD. Below the text is a QR code. The label is positioned on the left side of the EUT, with one mounting hole indicated by a circle with crosshairs.