

dexim
www.dexim.net

iPad, iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. "Made for iPod", "Made for iPhone" and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone or iPad may affect wireless performance.

dexim is a trademark of Santon Limited.

The Bluetooth word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Inc. All other registered and unregistered trademarks are the property of their respective owners. Visit www.dexim.net or call (T) 888-445-9555 for more information.

dexim
ClickStik™ Bluetooth Remote
+ Camera Stand for iPad/iPhone/iPad

Model# DVA006

Features:

- Easy-to-use Bluetooth remote puts you back in the group shot when snapping photos
- Powerful Free App from the iTunes App Store allows you to edit photos and send to friends via Facebook, SMS, Twitter and Email
- Tough Mount Tripod holds your iPhone or iPad Touch securely in place to get the perfect shot

Contents:

- 1 x Bluetooth Remote Control
- 1 x Multi-function Tripod
- 1 x Micro USB cable
- 1 x Universal Holder

Product layout:

 


Bluetooth Remote Control



Micro USB cable

-1-



Universal Holder



Multi-function Tripod

Specifications:

Executive Standard: Bluetooth SIG, V2.1
Bluetooth Protocol: Bluetooth serial port profile (SPPI)
Port Interface: RSPP-USB (DVA006 Type)
Communication Speed Rate: 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 bps
Modulation System: 2 AG ISM direct sequence frequency (FHSS)
Communication Distance: 5m open space, Class 2 level
Transmitting Power: <48m
Receiving Sensitivity: -79dBm
Operating Current / Sleep current: 30mA / 1.6mA
Operating Temperature: -10~50°C
Storage Temperature: -20~80°C
Size: 42x44x8mm
Weight: 20g (DVA006 Type)

 
-2-

Compatibility: iPhone 4S, iPhone 4, iPhone 3GS, iPod touch (4th Gen), iPad (no compatible with holder).

Instruction:


Attaching the Universal Holder to the Tripod:

1. Take out the Universal Holder and mount it onto the tripod.
2. The screw of tripod can be used to adjust the tightness and fix the universal mount in place.
3. Loosen the Velcro strap on the tripod and extend the tripod feet to the standing position.

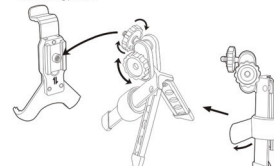

-3-

 4. Pressing the button in the center of universal holder allows for expansion of the holder, allowing for just the right amount of space for your device to fit. To contract the holder, to a tight fit on your device, just contract the holder's arms down. You will hear a ratchet sound as it contracts down to a snug fit.

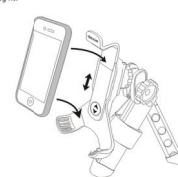

- Pair ClickStik Bluetooth Remote Control to your device**
1. On your Apple device, open your "settings" and select "general" in the menu.
 2. Select "Bluetooth" option in your general settings menu and make sure Bluetooth is turned ON.

-4-

3. Take the ClickStik Bluetooth Remote Control and depress and hold the top button down for five (5) seconds or until you see the embedded LED light alternately flashing blue and yellow. Once the LED light is flashing blue, let go of the button. You are now in "Bluetooth Pairing Mode".
4. On your Apple device, you should see your ClickStik (DVA006) appear in your "Devices".
5. The ClickStik (DVA006) will automatically connect to your device and will show a status as "Connected".
6. Press your Apple device "home" button to exit your Bluetooth settings.
7. You have now successfully completed the Bluetooth pairing process.

Downloading and Using the Free ClickStik App

1. To download and install ClickStik application, launch the iTunes App Store and search for ClickStik from dexim.
2. Install the ClickStik App to your device.
3. Once the ClickStik App is installed on your device, tap the ClickStik App icon to open it.
4. From the ClickStik App home screen you will see two options, "Camera" and "Album". Touch the Camera icon.
5. If your device has a flash, in the upper left corner of your screen there is a "Flash" setting option. Touch the Flash icon and select your flash preference as "Off", "Auto" or "On".
6. If your device has two camera lenses, in the upper right hand corner is the setting for the front-facing camera or the rear-facing camera. Toggling between these two cameras can be achieved easily through this setting.

-5-

Finding and Editing your Saved Photos in the ClickStik App

1. Locate the icon on the bottom left corner in Camera Mode of the ClickStik App and touch the icon.
2. Touch the "Camera Roll".
3. Select the image you wish to edit.
4. Move and Scale the image to the desired location and size as you wish.
5. ClickStik App offers a range of photo editing software:
 - Hide enables you to use filter effects
 - Photo Frame enables you to add picture frames
 - Stamp enables you to stamp your photos with cool stamps (use the scrolling size below to enlarge or shrink your stamp size)
 - Pen enables you to write messages in many colors
 - Roller enables you to roll patterns on your photos (use the scrolling size below to enlarge or shrink your stamp size)
 - Text enables you to type messages on your photos in many different colors



-6-

6. When you have finished editing your photo, touch "Complete" in the top right hand corner of your App screen. You can either "Save" your photo or "Send" your photo.
7. If you wish to "Send" your photo, you send via Facebook, Twitter or Email. You must have already set up your Facebook, Twitter and Email accounts in order for ClickStik to recognize and send your photos.

WARNING! IMPORTANT SAFETY INSTRUCTION!

Failure to read and follow these safety instructions could result in fire, explosion, electrical shock or other hazard, causing serious and/or fatal injury and/or property damage.

1. Do not modify, disassemble, open, drop, crush, puncture or shred the product.
2. Do not expose the product to rain or water.
3. Keep away from open flame or sunlight to prevent heat build-up.
4. Keep away from high voltage devices.
5. This product is not a toy. Keep away from children. Insure that all persons who use the product read and follow these warnings and instructions.

For technical support and more information, please email at support@dexim.net.

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Important: Changes or modifications to this product not authorized by dexim could void the FCC compliance and negate your authority to operate the product.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



European Union-Electronics and Battery Disposal Information

This symbol means that according to local laws and regulations your product and its battery should be recycled separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities for the recycling of electronic equipment. The improper disposal of waste electronic equipment from the consumer may be subject to fines. The separate collection and recycling of your product and its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service, or the shop where you purchased the product.



Waste electrical products / batteries should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities.