

ELK-6040 Glass Break

Top View

7/17/2013



ELK-6040 Opening the Housing:

Back out the locking  
screw if necessary.



To open the assembly, wedge  
a small flat head screw driver  
between the housings shown  
here and gently pry them apart.  
Then lift the cover away from  
the base.

ELK-6040 With Cover Removed: