 
 


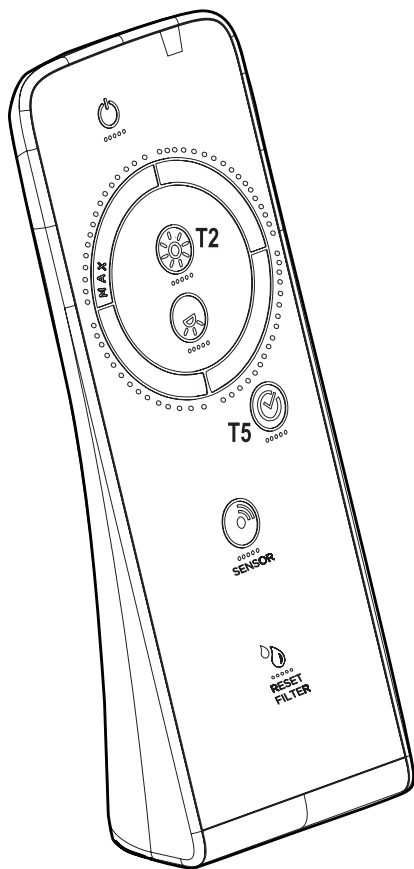

Elica Remote Control

ECB0099131

VER:1

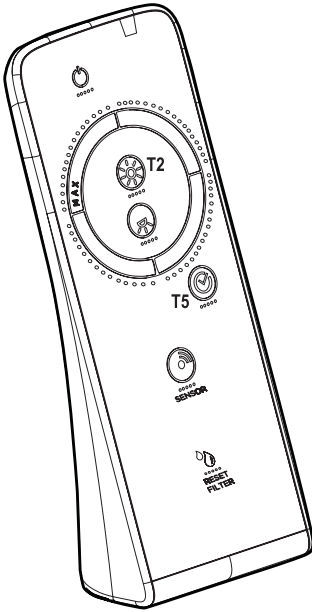

IT - Affiliazione telecomando: Premere a lungo T2 + T5 entro il primo minuto di alimentazione della cappa.

EN - Remote control activation: Keep T2 + T5 pressed within the 1st minute the hood is powered.

DE - Aufnahme der Fernbedienung: In der ersten Versorgungsminute der Dunstabzugshaube T2 + T5 lang drücken.

FR - Programmer la télécommande: Appuyer longtemps sur T2 + T5 dès la première minute où la hotte est sous tension.

NL - Toekenning afstandsbediening: Houd T2 + T5 lang ingedrukt binnen de eerste minuut dat de kap wordt gevoed.

ES - Incorporación del mando a distancia: Pulse a fondo T2 + T5 durante el primer minuto en que se activa la alimentación a la campana.

PT - Ativação telecomando: Premir demoradamente T2 + T5 no primeiro minuto de alimentação da coifa.

EL - Προγραμματισμός τηλεχειρισμού: Πατήστε παρατεταμένα T2 + T5 εντός του πρώτου λεπτού τροφοδοσίας του απορροφητήρα.

SV - Anslutning av fjärrkontroll: Tryck länge på T2 + T5 inom den första minuten av kåpens tillförsel.

FI - Kaukosäätimen liittäminen: Paina pitkään T2 + T5 liesikuvun päällä olon ensimmäisen minuutin aikana.

NO - Programmere fjernkontrollen: Trykk lenge på T2 + T5 innen det første minuttet med forsyning av ventilatorheten.

DA - Tilslutning af fjernbetjening: Tryk længere på T2 + T5 i det første minut, efter at emhætten er tændt.

PL - Konfigurowanie pilota: Długo przycisnąć T2 + T5 w ciągu pierwszej minuty działania okapu.

CS - Programování dálkového ovládání: Stiskněte a podržte tlačítko T2 + T5 v první minutě napájení digestoře.

SK - Programovanie diaľkového ovládania: Stlačte a podržte tlačidlo T2 + T5 v prvej minúte napájania digestora.

HU - A távvezérlő csatlakoztatásához: A kazán bekapcsolását követő első percen belül nyomja le hosszán a T2 + T5 gombokat.

BG - Свързване на дистанционно управление: Натиснете дълго T2 + T5 през първата минута на захранване на аспиратора.

RO - Programare telecomandă: Apăsati și țineți apăsat T2 și T5 în primul minut de alimentare a hotei.

RU - Адресация дистанционного управления: Держать нажатой T2 + T5 в течении первой минуты питания вытяжки.

UK - Сполучення пульту дистанційного керування: Натисніть і утримуйте T2 + T5 протягом першої хвилини живлення витяжки.

ET - Kauguhtimispuldi ühitamine: Hoidke kapi sisselülitamise ajal nuppe T2 ja T5 pikalt all.

LT - Nuotolinio valdymo pulto prijungimas: Per pirmą gartraukio maitinimo minutę paspauskite ir palaikykite T2 + T5.

LV - Tālvadības pults programmēšana: Nospiediet un turiet nospiestu T2 + T5 nosūcēja pirmās minūtes ieslēgšanas laikā.

SR - Pridruživanje daljinskog upravljača: Dugo pritisnite T2 + T5 u roku od prvog minuta napajanja aspiratora.

SL - Omogočanje daljinskega upravljanja: Pritisnite na tipko T2 + T5 za daljši čas med prvo minuto napajanja nape.

HR - Pridruživanje daljinskog upravljača: Dugo pritisnite T2 + T5 u roku od prvog minuta napajanja kuhinjske nape.

TR - Uzaktan kumanda bağlanti: Davlumbaza güç verilmesinden sonraki bir dakika içinde T2 + T5'e uzun süre basınız.

توليف الريموت كونترول
اضغط لفترة طويلة على T2 + T5 خلال الدقيقة الأولى من توصيل الكهرباء بالمخدنة.

IT - Sostituzione della batteria

EN - Changing the battery

DE - Batteriewechsel

FR - Changement des piles

NL - Vervanging van de batterij

ES - Sustitución de las baterías

PT - Substituição da bateria

EL - Αντικατάσταση της μπαταρίας

SV - Byte av batteri:

FI - Paristojen vaihto

NO - Utskifting av batteriet

DA - Udskiftning af batterierne

PL - Wymiana baterii

CS - Výměna baterie

SK - Výmena batérie

HU - Elemcsere

BG - Подмяна на батерията

RO - Schimbarea bateriei

RU - Замена батареи

UK - Заміна батарей

ET - Patarei vahetus

LT - Baterijų keitimas

LV - Baterijas nomaiņšana

 
 
SR - Zamenja baterije

SL - Zamenjava baterije


HR - Zamjena baterija

TR - Pilin değiştirilmesi

AR تعويض البطارية

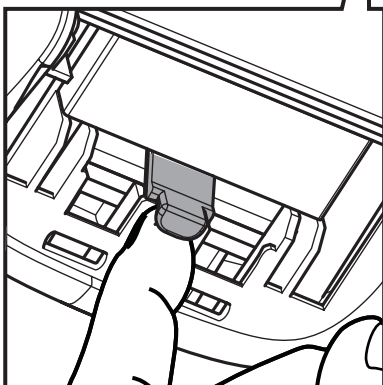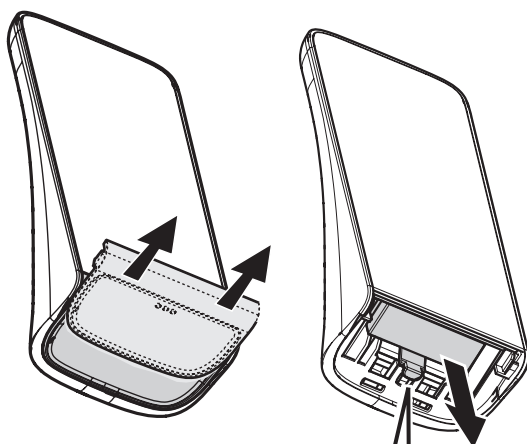

3 x AAA 1,5V

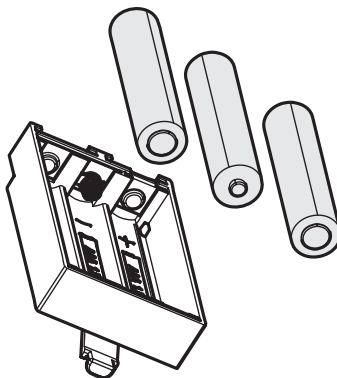 

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rule. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measure:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE2 : Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

DISPOSAL WARNING

- Do not dispose of electrical products in the general waste and ensure the used product or batteries are disposed safely according to your local authority and regulations.
- Battery warning: "Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions."



FCC ID: TMQECB0099131

Elica S.p.A

Via Ermanno Casoli, 2, 60044,

Fabriano (AN), ITALY

www.elica.com

Fax:

Tel: