


OPERATING DRIVE + PLAY

Distraction Warning

Do not connect or disconnect your iPod or program Drive + Play while driving. Always pull off the road and park in a position that you are absolutely sure presents no risk before browsing your iPod or adjusting the settings on your Drive + Play. Always obey all traffic laws while driving.

Overview

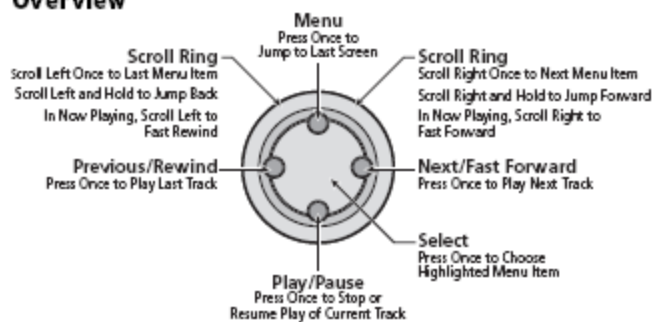

Drive + Play operates much like the iPod itself. The Control Knob mimics the iPod's Click Wheel, and its software uses a similar menu-select system. Before you use Drive + Play, you'll need to set it up for the first time. After you perform the Initial Setup using the Settings Menu, controlling your iPod with Drive + Play will be easy and intuitive.

To make selections on the Text Display, you simply turn the Control Knob's Scroll Ring to highlight a desired menu item. Turn the Scroll Ring to the right to scroll down, and to the left to scroll up. Press the (center) Select button once to confirm your selection.

Depending on your selection, this display may show:

- a list of settings or menu operation, or

When in any of the "settings" menus:

- a highlighted setting with a choice of values, or
- a highlighted setting with a check box, or
- a graphic display which may be adjusted using the Scroll Ring.

Pressing the (center) Select button again will select the next highlighted setting (to the right) or go back to the beginning if all settings have been viewed, or set the check box on or off (i.e., check or uncheck). If a graphic display appears, use the Scroll Ring to adjust the setting.

After making your adjustment or selection, you may press the (top) Menu button to go to the previous menu. If no buttons are pressed within 10 seconds, the Now Playing screen will appear. At this point, pressing the Menu button will take you back to the screen of your previous selection. Repeated Menu presses will take you back to the Drive + Play Menu.

Initial Setup

NOTE: Please refer to Drive + Play's display screen as you make initial settings. Also refer to your iPod User's Guide for operation information.

Power On

1. With the main volume turned down (on your audio system), power on your entire mobile audio system and then turn on Drive + Play by pressing the (bottom) Play/Pause Button. If everything is operating correctly, the iPod screen will display the following message:
OK to disconnect.
2. Drive + Play's Text Display will show the Harman Kardon splash screen first, followed by the Now Playing screen. What the Now Playing screen displays next depends on the following conditions:

- Drive + Play will tell your iPod to play the same selection as when it was last turned off. If you plugged your iPod into Drive + Play while it was playing, Drive + Play will tell the iPod to play the current song without interruption.
- However, if nothing was playing when your iPod was last turned off or when it was plugged in, Drive + Play will tell the iPod to begin playing the first song in its Songs database.

Setting FM Transmission

FM Settings can be accessed from the Main Menu or later within the Settings Menu.

- To turn FM Transmission on or off:

Drive + Play Menu > FM Settings > FM Transmitter > select On (default) or Off.

- To change the preset FM Frequency:

Drive + Play Menu > FM Settings > FM Frequency > select 88.1 (default), 88.3, 88.5, 88.7, 88.9 or Custom (default = 91.7MHz or last setting).

NOTE: If the preset FM frequencies are already assigned to FM stations in your listening area, then use Custom FM Frequency (below) to select an unused frequency. The default setting is 91.7MHz.

- To select a Custom FM Frequency:

1. Drive + Play Menu > FM Settings > Custom Frequency.
2. The FM Frequency graphic display will appear. Scroll to select a desired FM frequency.

Setting Shuffle

You can set Drive + Play to shuffle (randomly play) iPod songs or albums as follows:

- Drive + Play Menu > Settings > Shuffle > select Off (default), Songs or Albums.

Setting Repeat

You can set Drive + Play to repeat the current iPod song or all songs in a playlist or album as follows:

NOTE: When browsing by Artists, Genres or Composers, selecting Repeat All will repeat the album that contains the selected song.

- Drive + Play Menu > Settings > Shuffle > select Off (default) > One > All.

continued on next page...

Initial Setup (continued)**Setting AUX Input**

To route an audio signal from a device (e.g., cell phone or satellite radio; see Wiring Diagram on page 5) connected to Drive + Play's auxiliary input to your mobile audio system:

- To enable or disable automatic sensing and switching of audio signals on Drive + Play's auxiliary input:
Drive + Play Menu > Settings > select Auto audio sense check box to enable or to disable (default) it.
- To select Auxiliary input signals manually with iPod connected:
 1. Drive + Play Menu > Settings > AUX input.
 2. Go Back (on) will appear.
- To restore audio from the iPod manually with iPod connected:
 1. Drive + Play Menu > Settings > Go Back (on).
 2. Audio from the iPod will be restored, and the Settings Menu will appear.
- To enable/disable AUX input manually, when no iPod is connected:
 1. Turn on the Drive + Play. Aux is Disabled is highlighted.
 2. Press (center) Select button once to enable AUX input. Listening to AUX message will appear.
 3. Press Select button again to disable AUX input. Aux is Disabled message will appear.

Setting the Display

You can customize Drive + Play to display your viewing preferences as follows:

- To enable or disable Large Fonts:
 1. Drive + Play Menu > Settings > Display Settings > select Large Font check box to turn it on or off (default).
 2. To enable or disable Large Fonts, press the (top) Menu button twice to return to the Drive + Play menu.

NOTE: When Large Fonts is disabled (unchecked), the Now Playing screen can display up to 32 characters. When Large Fonts is enabled (checked), the first 16 characters will be displayed and you can press the (center) Select button to display the next 16 characters and again to display the first 16, or use Auto Scroll (see next item).

- When Large Fonts are enabled, you can also enable or disable Auto Scroll, which automatically scrolls a text message longer than 16 characters in the Now Playing screen:

Drive + Play Menu > Settings > Display Settings > Auto Scroll > select On or Off (default).

- To adjust the display's contrast:
 1. Drive + Play Menu > Settings > Display Settings > Adjust Contrast.
 2. The Contrast graphic display will appear. Scroll to select a desired contrast.
- To adjust the display's backlight:
 1. Drive + Play Menu > Settings > Display Settings > Adjust Backlight.
 2. The Brightness graphic display will appear. Scroll to select a desired brightness.
- You can set Drive + Play's backlight to turn off after 10 seconds. When it is off, pressing any button on the Control Knob will turn it back on. To turn the display's backlight timer on or off:

Drive + Play Menu > Settings > Display Settings > Backlight Timer > select On (default is always on) or 10 sec.
- To enable or disable an inverted display (i.e., white text on black background):

Drive + Play Menu > Settings > select Display Settings check box to enable or disable (default) it.

Setting the Drive + Play (Main) Menu

You can set the Drive + Play (Main) Menu to display your choice of menus as follows:

NOTE: As a default, the following eight menus will be displayed (denoted by checked boxes): FM Settings, Now Playing, Playlists, Artists, Albums, Songs, Genres and Composers. If you want all these selections to display, then skip this section.

1. Drive + Play Menu > Settings > Change Main Menu.
2. Scroll to a selection (e.g., Composers) you want to remove and press the (center) Select Button once to uncheck the box. To add the menu again, press the (center) Select Button once to check the box.
3. Repeat step 2 for other menus you want to remove from or add to the Main Menu.

Setting the Sleep Timer

Drive + Play is equipped with a sleep timer that delays its power off by a default of 2 seconds after the ignition is turned off. You can set a different delay time as follows:

NOTE: Sleep Timer only works when the Drive + Play's ACC wire is connected to the ignition switch's accessory terminal (see Wiring Diagram on page 5).

- Drive + Play Menu > Settings > Sleep Timer > select 2 sec (default), 4 sec, or 8 sec.

Setting the Jump Size

When browsing a database (songs, albums, artists, etc.), you can scroll and hold to jump to a different position in the list, skipping over undesired titles. The default jump size is 10 percent of your database. You can set a different jump size as follows:

- Drive + Play Menu > Settings > Jump Size > select 5%, 10% (default), 15%, 20%, or 25%.

About Drive + Play

You can view information about Drive + Play as follows:

- Drive + Play Menu > Settings > About.

Resetting All Settings

NOTE: Resetting all settings will erase all your custom settings and replace them with default values.

To reset all Drive + Play settings to their default values:

1. Drive + Play Menu > Settings > Reset All.
2. After a few seconds, you will see the Harman Kardon splash screen, followed by the Now Playing screen. At this point, all Drive + Play settings have been reset.

Browsing and Playing Songs

Browsing and playing songs using Drive + Play works much like an iPod. Using the Control Knob (see Overview on page 8), you can play songs in any playlist, or play songs in categories such as Artists, Albums, Songs, Genres or Composers.

NOTE: Drive + Play does not support chapter search when playing an Audiobook. You may use the scroll wheel to move forward or backward manually.

- Press the (center) Select Button to advance through menu items to locate and play songs.
- Press the (top) Menu Button to go back to a previous menu.

When a song starts to play, the Text Display will show the Now Playing screen (see above right) with Song Name, Artist, track number and the elapsed play time. You can also set Drive + Play to shuffle-play or repeat-play a song or album.



NOTE: Now Playing, Playlists, Artists, Albums, Songs, Genres or Composers will only appear in the Main Menu after they have been checked for display (see the previous page).

Browsing Playlists

- Drive + Play Menu > Playlists > select a playlist (e.g., Favorites) > select a song.

NOTE: The On-The-Go playlist will not be updated while using Drive + Play.

Browsing Artists

- Drive + Play Menu > Artists > select an artist > select an album > select a song.

Browsing Albums

- Drive + Play Menu > Albums > select an album > select a song.

Browsing Songs

- Drive + Play Menu > Songs > select a song.

Browsing Genres

- Drive + Play Menu > Genres > select a genre > select an artist > select an album > select a song.

Browsing Composers

- Drive + Play Menu > Composer > select a composer > select an album > select a song.

Shuffle Play

You can set Drive + Play to shuffle (randomly play) iPod songs or albums as follows:

- Drive + Play Menu > Settings > Shuffle > select Off (default), Songs, or Albums.

Repeat Play

You can set Drive + Play to repeat the current iPod song or all songs in a playlist or album as follows:

NOTE: When browsing by Artists, Genres or Composers, selecting Repeat All will repeat the album containing the desired song.

- Drive + Play Menu > Settings > Shuffle > select Off (default), One, or All.